

# Installation Guide for

## **MEGATRON PRO**



### Swing Gate Operators

**MATRIX III**

CONFORMS TO UL STD 325  
UL CLASS - I, II, III, IV

CERTIFIED TO CAN/CSA STD  
C22.2 NO. 247

**SAFETY SENSORS REQUIRED**

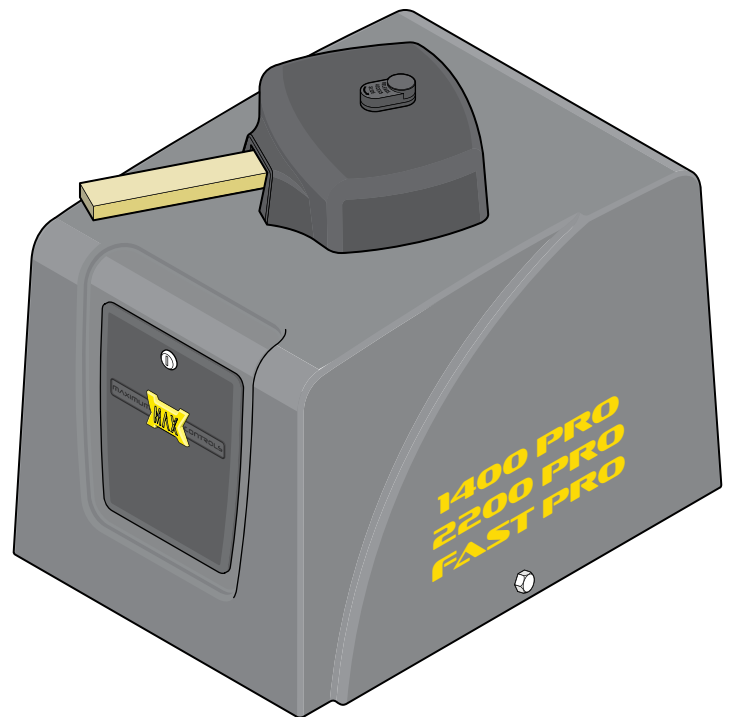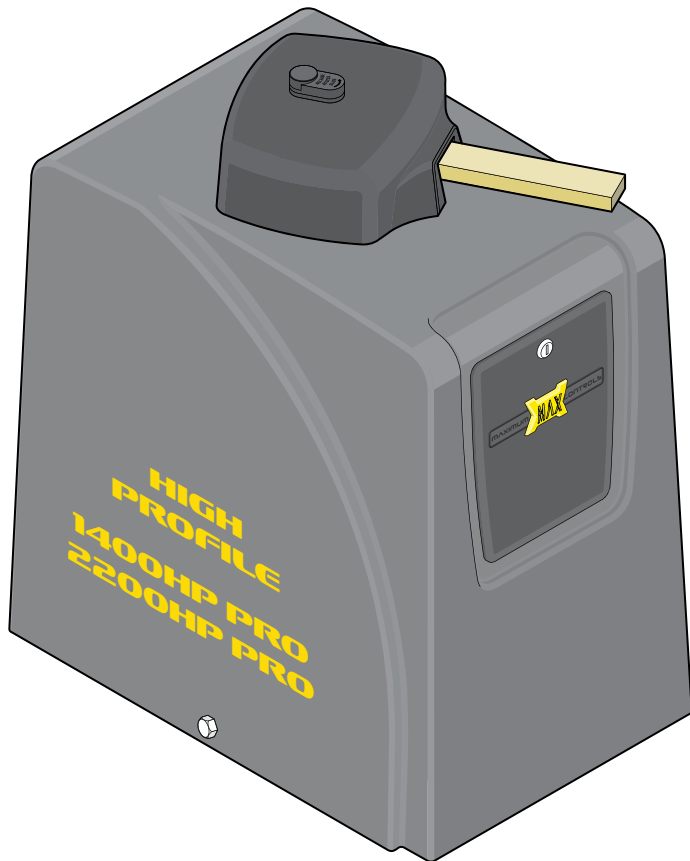

## **Residential / Commercial Brushless DC Swing Gate Operators**

Made in USA



Intertek  
4009963



# UL 325 COMPLIANT INSTALLATION REQUIREMENTS

a) Install the gate operator only when:

a) N'installez l'ouvre-barrière que si :

1) The operator is appropriate for the construction of the gate and the usage Class of the gate,

1) l'ouvre-barrière est approprié pour la structure et la classe d'utilisation de la barrière;

2) All openings of a horizontal slide gate are guarded or screened from the bottom of the gate to a minimum of 1.83 m (6 ft) above the ground to prevent a 57.2 mm (2-1/4 inch) diameter sphere from passing through the openings anywhere in the gate, and in that portion of the adjacent fence that the gate covers in the open position,

2) toutes les ouvertures de la barrière coulissante sont protégées ou grillagées du bas de la porte jusqu'à un minimum de 1,83 m (6 pi) du sol si bien qu'une sphère de 57,2 mm (2 1/4 po) de diamètre ne peut passer par une ouverture au niveau de la barrière et de la portion de la clôture adjacente que la barrière couvre en position ouverte;

3) All exposed pinch points are eliminated or guarded, and

3) tous les points de pincement sont éliminés ou protégés;

4) Guarding is supplied for exposed rollers.

4) des protections sont fournies pour les galets exposés.

b) The operator is intended for installation only on gates used for vehicles. Pedestrians must be supplied with a separate access opening. The pedestrian access opening shall be designed to promote pedestrian usage. Locate the gate such that persons will not come in contact with the vehicular gate during the entire path of travel of the vehicular gate.

b) L'ouvre-barrière est destiné à n'être installé que sur des barrières utilisées pour les véhicules. Il faut fournir une autre voie d'accès aux piétons. La voie d'accès pour les piétons doit être conçue pour favoriser le passage des piétons. Placez la barrière de sorte que personne ne puisse entrer en contact avec la barrière pour les véhicules sur l'ensemble de sa trajectoire.

c) The gate must be installed in a location so that enough clearance is supplied between the gate and adjacent structures when opening and closing to reduce the risk of entrapment. Swinging gates shall not open into public access areas.

c) Pour réduire les risques de coincement lors de l'ouverture et de la fermeture, la barrière doit être installée dans un endroit où la barrière et les structures avoisinantes sont suffisamment éloignées l'une de l'autre. Les barrières battantes ne doivent pas ouvrir dans une zone d'accès public.

d) The gate must be properly installed and work freely in both directions prior to the installation of the gate operator. Do not over-tighten the operator clutch or pressure relief valve to compensate for a damaged gate.

d) La barrière doit être bien installée et fonctionner librement dans les deux directions avant d'entreprendre l'installation de l'ouvre-barrière. Ne serrez pas trop l'embrayage ou la soupape de surpression de l'ouvre-barrière pour compenser une barrière endommagée.

e) For gate operators utilizing Type D protection:

e) Pour les ouvre-barrières qui utilisent des protections de type D :

1) The gate operator controls must be placed so that the user has full view of the gate area when the gate is moving,

1) les commandes de l'ouvre-barrière doivent être placées de sorte que l'utilisateur voit l'ensemble de la zone de la barrière lorsque cette dernière est en mouvement;

2) The placard as required by 62.1.6 shall be placed adjacent to the controls,

2) l'étiquette requise selon la clause 62.1.6 doit être placée à côté des commandes;

3) An automatic closing device (such as a timer, loop sensor, or similar device) shall not be employed, and

3) un dispositif de fermeture automatique (comme une minuterie, une boucle de détection ou un dispositif similaire) ne doit pas être utilisé;

4) No other activation device shall be connected.

4) aucun autre appareil d'activation ne doit être connecté.

f) Controls intended for user activation must be located at least 1.83 m (6 ft) away from any moving part of the gate and where the user is prevented from reaching over, under, around or through the gate to operate the controls.

f) Les commandes destinées à l'activation par l'utilisateur doivent être situées à au moins 1,83 m (6 pi) des pièces mobiles de la barrière et à un endroit où l'utilisateur ne peut pas atteindre les commandes par le dessus, par le dessous, par les côtés et au travers de la barrière.

Exception: Emergency access controls only accessible by authorized personnel (e.g. fire, police, EMS) may be placed at any location in the line-of-sight of the gate.

Exception : Les commandes d'accès d'urgence accessibles au personnel autorisé seulement (p. ex. pompier, policier, SMU) peuvent être placées à tout endroit dans le champ de visibilité de la barrière.

# UL 325 COMPLIANT INSTALLATION REQUIREMENTS CONTINUED

g) The Stop and/or Reset button must be located in the line-of-sight of the gate. Activation of the reset control shall not cause the operator to start.

g) Le bouton d'arrêt, le bouton de réenclenchement ou ces deux boutons doivent être situés dans le champ de visibilité de la barrière. L'activation des commandes de réenclenchement ne doit pas mettre en marche l'ouvre-barrière.

h) A minimum of two (2) WARNING SIGNS shall be installed, in the area of the gate. Each placard is to be visible by persons located on the side of the gate on which the placard is installed. Also see 62.1.1.

h) Au moins deux panneaux de mise en garde doivent être installés dans la zone de la barrière. Chaque étiquette doit être visible des personnes situées de chaque côté de la barrière sur laquelle l'étiquette est installée. Voir aussi la clause 62.1.1.

i) For gate operators utilizing a non-contact sensor in accordance with 32.1.1:

i) Pour les ouvre-barrières qui fonctionnent avec des capteurs sans contact conformément à la clause 32.1.1 :

1) See instructions on the placement of non-contact sensors for each Type of application,

1) Voir les instructions sur le positionnement des capteurs sans contact pour chaque type d'utilisation.

2) Care shall be exercised to reduce the risk of nuisance tripping, such as when a vehicle, trips the sensor while the gate is still moving, and

2) Des précautions doivent être prises pour réduire les risques de déclenchement inutile, comme lorsqu'un véhicule déclenche le capteur alors que la barrière est encore en mouvement.

3) One or more non-contact sensors shall be located where the risk of entrapment or obstruction exists, such as the perimeter reachable by a moving gate or barrier.

3) Un capteur sans contact ou plus doit être situé où il existe un risque de coincement ou d'obstruction, comme dans l'espace que peut occuper la barrière lorsqu'elle est en mouvement.

j) For a gate operator utilizing a contact sensor in accordance with 32.1.1:

j) Pour les ouvre-barrières qui fonctionnent avec des capteurs de contact conformément à la clause 32.1.1 :

1) One or more contact sensors shall be located where the risk of entrapment or obstruction exists, such as at the leading edge, trailing edge, and postmounted both inside and outside of a vehicular horizontal slide gate.

1) Au moins un capteur de contact doit être situé où il existe un risque de coincement ou d'obstruction, comme sur le bord d'ouverture, sur le bord de fermeture et sur les poteaux montés sur l'intérieur ou l'extérieur d'une barrière coulissante pour véhicules.

2) One or more contact sensors shall be located at the bottom edge of a vehicular vertical lift gate.

2) Au moins un capteur de contact doit être situé sur le bord inférieur d'une barrière levante pour véhicules.

3) One or more contact sensors shall be located at the pinch point of a vehicular vertical pivot gate.

3) Au moins un capteur de contact doit être situé au point de pincement d'une barrière à pivot vertical pour véhicules.

4) A hardwired contact sensor shall be located and its wiring arranged so that the communication between the sensor and the gate operator is not subjected to mechanical damage.

4) Un capteur de contact doit être installé et câblé de sorte à éviter que la communication entre le capteur et l'ouvre-barrière soit gênée par des dommages mécaniques.

5) A wireless device such as one that transmits radio frequency (RF) signals to the gate operator for entrapment protection functions shall be located where the transmission of the signals are not obstructed or impeded by building structures, natural landscaping or similar obstruction. A wireless device shall function under the intended end-use conditions.

5) Un dispositif sans fil, comme un appareil qui transmet des signaux de radiofréquence (RF) à l'ouvre-barrière pour prévenir le coincement, doit être situé à un endroit où la transmission des signaux ne sera pas obstruée ou gênée par des structures, des arbres ou d'autres obstacles similaires. Un dispositif sans fil doit fonctionner selon les conditions d'utilisation finale prévues.

6) One or more contact sensors shall be located on the inside and outside leading edge of a swing gate. Additionally, if the bottom edge of a swing gate is greater than 152 mm (6 inches) but less than 406 mm (16 inches) above the ground at any point in its arc of travel, one or more contact sensors shall be located on the bottom edge.

6) Au moins un capteur de contact doit être situé sur les bords d'ouverture intérieur et extérieur d'une barrière battante. De plus, si le dessous d'une barrière battante est situé à plus de 152 mm (6 po) mais à moins de 406 mm (16 po) du sol à l'un des points de sa trajectoire, au moins un capteur de contact doit être situé sur le bord inférieur.

7) One or more contact sensors shall be located at the bottom edge of a vertical barrier (arm).

7) Au moins un capteur de contact doit être situé sur le bord inférieur d'une barrière verticale (bras).

# IMPORTANT SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS WARNING – To reduce the risk of injury or death:

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES AVERTISSEMENT – Pour réduire les risques de blessures et de mort :

1. READ AND FOLLOW ALL INSTRUCTIONS.

1. LISEZ ET SUIVEZ TOUTES LES INSTRUCTIONS.

2. Never let children operate or play with gate controls. Keep the remote control away from children.

2. Ne laissez jamais les enfants manoeuvrer les commandes de la barrière ou jouer avec celles-ci. Laissez la télécommande hors de la portée des enfants.

3. Always keep people and objects away from the gate. NO ONE SHOULD CROSS THE PATH OF THE MOVING GATE.

3. Tenez toujours à l'écart de la barrière toute personne ou tout objet avoisinant. IL NE FAUT JAMAIS PASSER DANS LA TRAJECTOIRE D'UNE BARRIÈRE EN MOUVEMENT.

4. Test the gate operator monthly. The gate MUST reverse on contact with a rigid object or stop when an object activates the non-contact sensors. After adjusting the force or the limit of travel, retest the gate operator. Failure to adjust and retest the gate operator properly can increase the risk of injury or death.

4. Vérifiez le fonctionnement de l'ouvre-barrière une fois par mois. Le sens de la course DOIT s'inverser lorsque la barrière entre en contact avec un objet dur ou la barrière DOIT s'arrêter lorsqu'un objet active les capteurs sans contact. Vérifiez à nouveau l'ouvre-barrière après tout réglage de la force de déclenchement ou du seuil de fin de course. Un réglage incorrect de l'ouvre-barrière ou l'omission de vérifier à nouveau le fonctionnement de l'ouvre-barrière peut causer des blessures, voire la mort.

5. Use the emergency release only when the gate is not moving.

5. Ne déclenchez le dispositif de désaccouplement d'urgence que lorsque la barrière ne bouge pas.

6. KEEP GATES PROPERLY MAINTAINED. Read the user's manual. Have a qualified service person make repairs to gate hardware.

6. ASSUREZ-VOUS QUE LA BARRIÈRE EST CORRECTEMENT ENTRETENUE. Lisez le manuel de l'utilisateur. Confiez la réparation du matériel de la barrière à un technicien qualifié.

7. The entrance is for vehicles only. Pedestrians must use separate entrance.

7. La voie d'accès est réservée aux véhicules seulement. Les piétons doivent utiliser une voie d'accès différente.

8. SAVE THESE INSTRUCTIONS.

8. CONSERVEZ CES INSTRUCTIONS.




# UL 325 MODEL CLASSIFICATIONS



**CLASS I**

**Residential Vehicular Gate Operator** - A vehicular gate operator (opener or system) intended for use in a home of one to four single family dwellings, or a garage or parking area associated therewith.

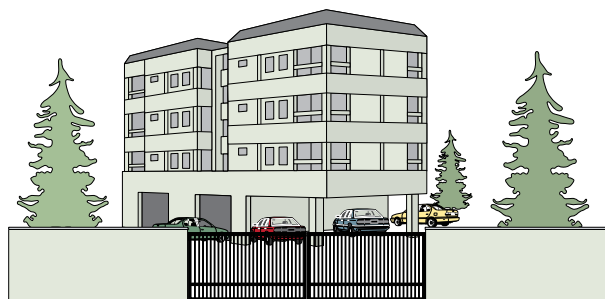


**CLASS II**

**Commercial/General Access Vehicular Gate Operator** - A vehicular gate operator (opener or system) intended for use in a commercial location or building such as a multi-family housing unit (five or more single family units) hotel, garages, retail store or other building servicing the general public.



**CLASS III**

**Industrial/Limited Access Vehicular Gate Operator** - A vehicular gate operator (opener or system) intended for uses in an industrial location, loading dock area or other location not intended to service the general public.

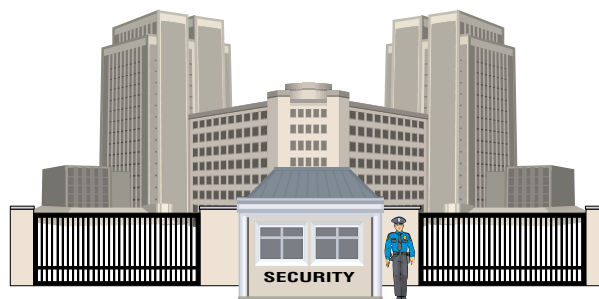

**CLASS IV**

**Restricted Access Vehicular Gate Operator** - A vehicular gate operator (opener or system) intended for use in a guarded industrial location or buildings such as airport security area or other restricted access locations not servicing the general public, in which unauthorized access is prevented via supervision by security personnel.

## UL 325 REQUIRED ENTRAPMENT PROTECTION

This vehicular gate operator must be installed with at least two independent entrapment protection means as specified in the table and definitions below.

The same type of device shall not be used for both entrapment protection means. Use of a single device to cover both the opening and closing directions is in accordance with the requirement, however, a single device is not required to cover both directions. This operator has been provided with type A entrapment protection. The installer is required to install additional entrapment protection devices in each entrapment area.

Gate Type	Class I & II	Class III & IV
Swing Gate	A, B1*, B2*, C, D	A, B1*, B2*, C, D
Slide Gate	A, B1*, B2*, D	A, B1*, B2*, D

**A** - Inherent entrapment protection system.

**B1** - Provision for connection of a non-contact sensor (photoelectric sensor or the equivalent).

**B2** - Provision for connection of a contact sensor (edge device or the equivalent).


\* B1 and B2 means of entrapment protection must be MONITORED.

**C** - Inherent adjustable clutch or pressure relief device.


**D** - Provision for connection of an actuating device requiring continuous pressure to maintain opening or closing motion of the gate.

# INTENDED USE OF SWING GATE OPERATOR

The operator is intended for use on a **VEHICULAR** slide gate **ONLY**. It is intended to be used **WITH** appropriate entrapment protection safety devices and in-ground vehicle loop detection system. This operator has a inherent entrapment protection system and requires **ADDITIONAL external monitored entrapment protection devices** (Non-contact Photocells or contact sensing edges) for each entrapment area prior to gate operation.

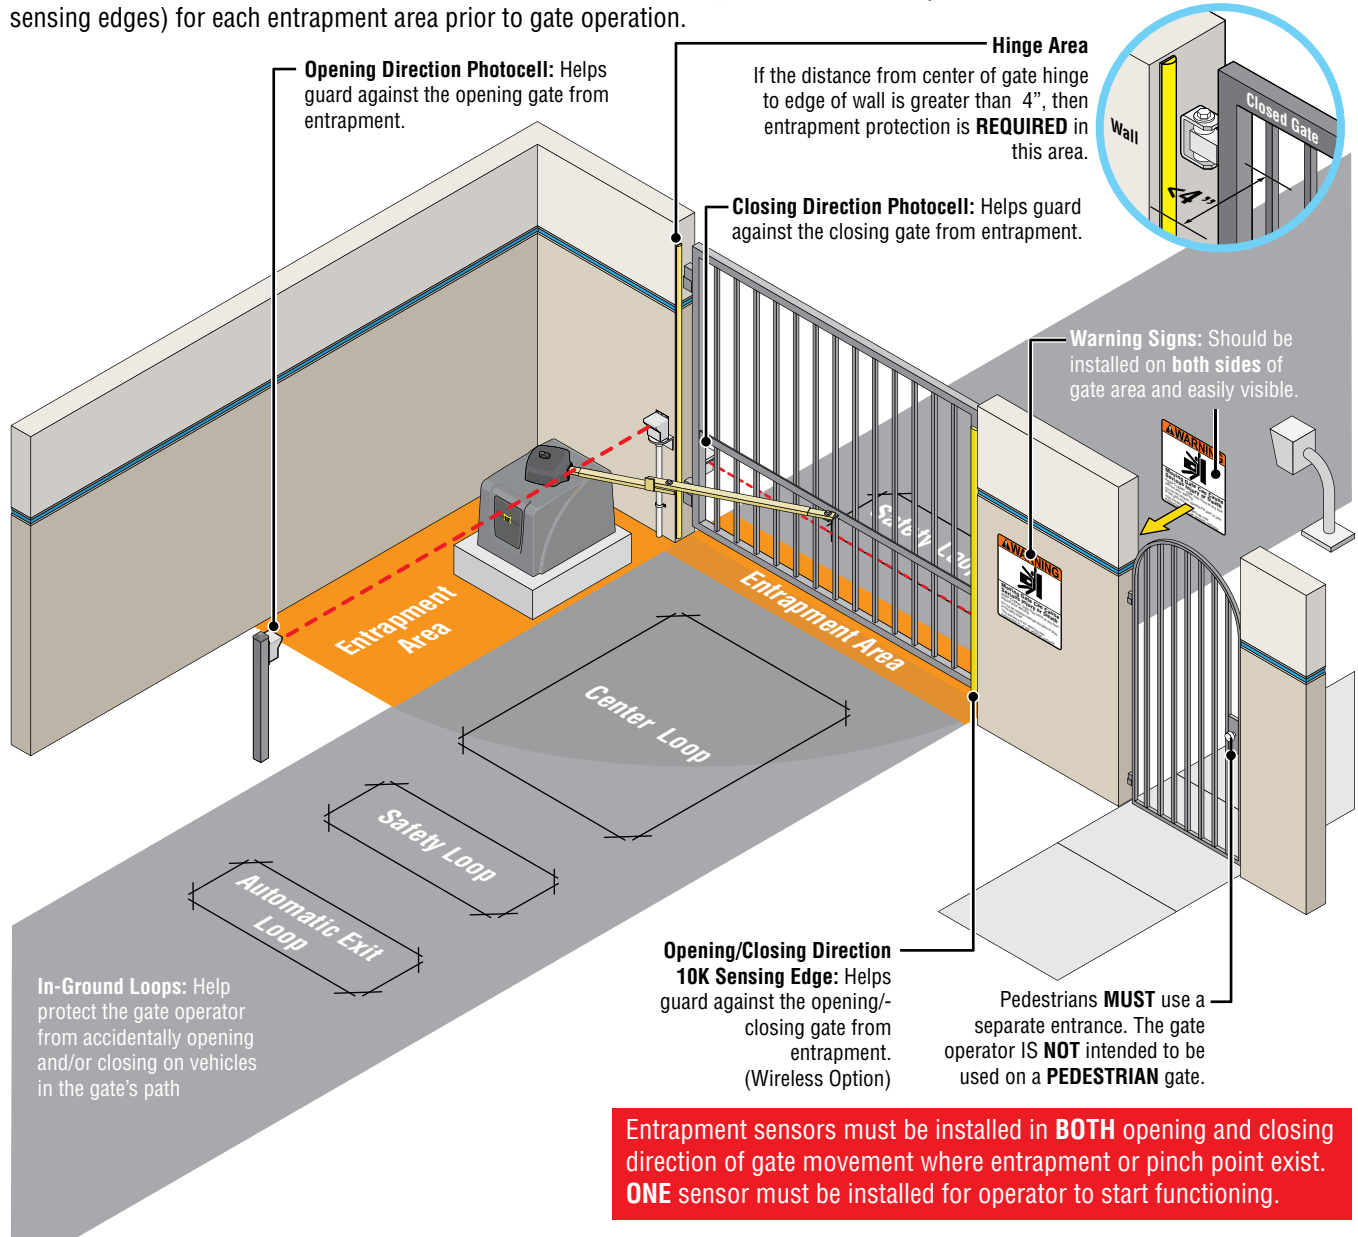

## Bottom of Gate

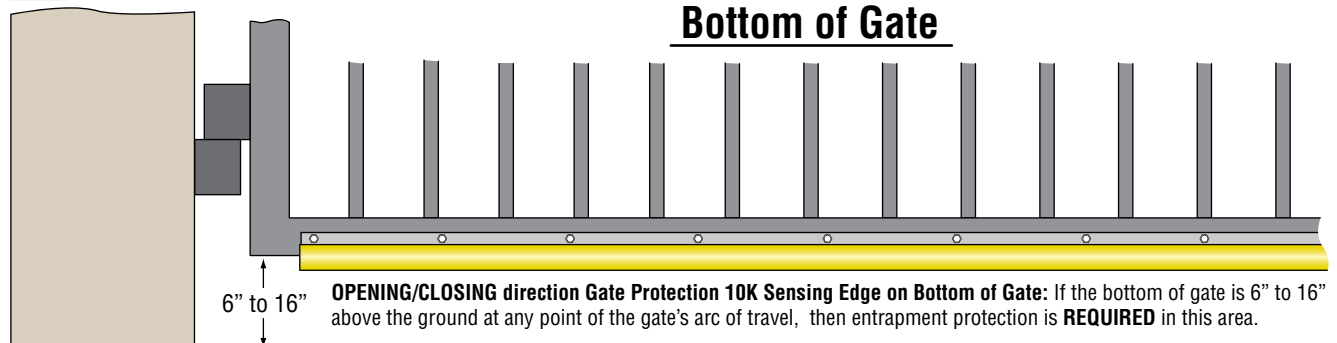

# TABLE OF CONTENTS

Gate Safety		Page	Additional Features, cont'd		Page
UL 325 Compliant Installation Requirements	_____	Safety-1-3	Gate Close Tamper Feature	_____	14
UL 325 Model Classifications	_____	Safety-4	Gate Disable Feature	_____	15
Intended Use of Swing Gate Operator	_____	Safety-5	Dual Gate Operators Wiring	_____	16
<b>Step-By-Step Installation</b>			<b>Troubleshooting</b>		
1A Standard Operator Placement	_____	1	USB Black Box Port	_____	17
1B Compact Operator Placement	_____	2	Test Entrapment Sensors	_____	17
2 Arm Position	_____	3	Gate Cycling Troubleshooting	_____	18
3 Release Handle Clamp	_____	4	Matrix III LED Troubleshooting	_____	19-20
4 AC Input Power	_____	5	<b>Commonly Used Safety Sensors</b>		
5 Ground Operator	_____	6	Omron E3K-R10K4 UL325 2018	_____	21
6 Opening Direction/ID Plug/Operator	_____	6	Omron E3K-R10K4 UL325 2016	_____	22
7 Limit Switch Adjustment	_____	7	Omron E3K-R10K4 UL325 2018	_____	23
8 Entrapment Protection Wiring	_____	8-9	EMX WEL-200 Wiring	_____	24
9 Learn Gate Positions	_____	10	WEL-200 Programming	_____	25
10 Adjust ERD Reverse Sensor	_____	10	EMX-RET Wiring	_____	26
11 Loops & Loop Detectors	_____	11	EMX IRB-MON Single Gate Wiring	_____	27
12 Matrix III Settings	_____	11	EMX IRB-MON Dual Gate Wiring	_____	28
13 Wiring Opening Device Options	_____	12	Miller RBAND Monitored Wireless	_____	29
14 Learn Unlearned Sensor Inputs	_____	12	Transmitter Solutions iGaze RE	_____	30-31
<b>Additional Features</b>			<b>Wiring Overview</b>		
Programming	_____	13	Solar Pack Quick Installation Guide	_____	33-36
DIP-Switch Settings	_____	13	Manual Release	_____	37

## MEGATRON PRO SPECIFICATIONS

**UL 325 Class of Operation** - Class I, II, III, IV

**Gate Type** - Vehicular Swing Gate

**Input AC Power/Amps** - Switchable: 115VAC / 6 Amp, 1 phase  
or 230VAC / 2 Amp, 1 phase

**Motor** - 24VDC Brushless (equivalent to 1 HP AC motor)

**Operating Temperature:** -4°F to 158°F (-20°C to 70°C)

**Cycles per Hour AC Input Power** - Continuous

**Battery Back-Up Cycles** (2 - 7 Amp/Hr Batteries fully charged):

- Approximately 450 cycles

**NOTE:** The number of gate cycles using **ONLY** battery back-up power will vary depending on the weight of the gate, the gate length, the operating condition of the gate hardware, temperature and the amount of charge the batteries have at the beginning of the battery power only operation.

**Max Gate Weight / Length:**

- **MAX Megatron 1400 PRO and 1400HP PRO** - 1400lbs @ 15 ft or 1200 lbs @ 20 ft
- **MAX Megatron 2200 PRO and 2200HP PRO** - 2200lbs @ 15 ft or 1500 lbs @ 20 ft
- **MAX Megatron FAST PRO** - 800lbs @ 12 ft gate per operator

**NOTE:** The MAX Megatron FAST PRO is **ONLY** available for installation on bi-parting gates (dual operators).  
A single gate operator **CANNOT** be used.


**90° Opening Time:**

- **MAX Megatron 1400/1400HP/2200/2200HP PRO Models** - 16 selectable speeds from approximately 11.5 sec to 20 sec depending on the weight and length of the gate.
- **MAX Megatron FAST PRO** - 16 selectable speeds from approximately 6 sec to 14 sec depending on the weight and length of the dual gates.

**Entrapment Protection:**

- UL 325 Type A Inherent (ERD sensor)
- Inputs for **NORMALLY CLOSED (N.C.)** UL 325 Type B1 (photocell) and Type B2 (sensing edge)

**Entrapment sensors must be installed in BOTH opening and closing direction of gate movement where entrapment or pinch point exist. ONE sensor must be installed for operator to start functioning.**

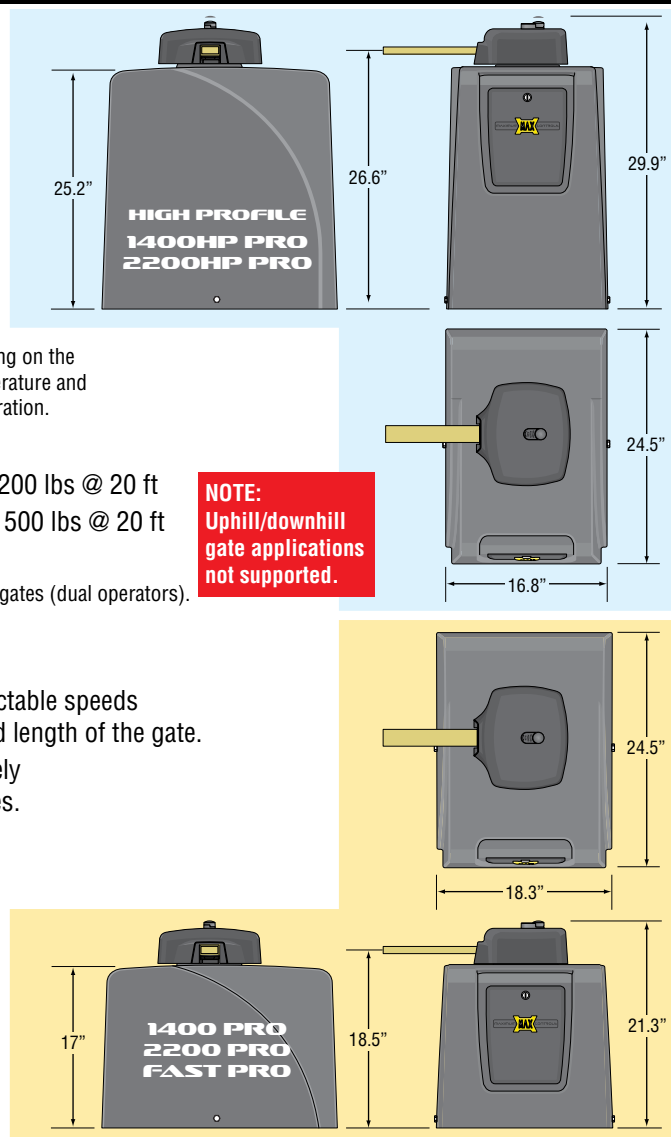


# STEP-BY-STEP INSTALLATION

Read and understand this ENTIRE manual BEFORE installation. Check with the local building department prior to installing this gate operator to comply with local building code requirements. The gate must be installed in a location so that enough clearance is supplied between the gate and adjacent structures when opening and closing to reduce the risk of entrapment. Swinging gates should not open into public access areas.

Choose either **1A Standard Installation** or **1B Compact Installation**.

## 1A STANDARD OPERATOR PLACEMENT

### Standard Installation ONLY

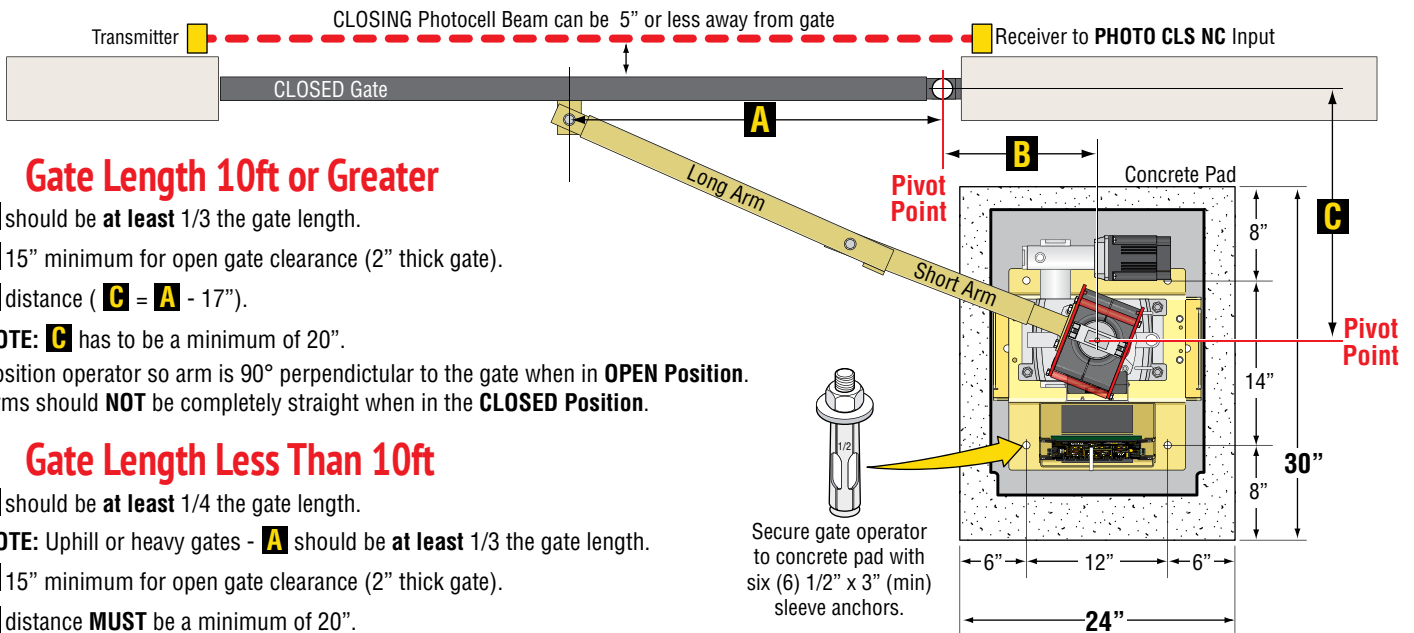

#### Gate Length 10ft or Greater

- A** should be at least 1/3 the gate length.
- B** 15" minimum for open gate clearance (2" thick gate).
- C** distance (  $C = A - 17"$  ).



**NOTE:** **C** has to be a minimum of 20".

Position operator so arm is 90° perpendicular to the gate when in **OPEN Position**. Arms should **NOT** be completely straight when in the **CLOSED Position**.

#### Gate Length Less Than 10ft

- A** should be at least 1/4 the gate length.
- NOTE:** Uphill or heavy gates - **A** should be at least 1/3 the gate length.
- B** 15" minimum for open gate clearance (2" thick gate).
- C** distance **MUST** be a minimum of 20".

Position operator so arm is 90° perpendicular to the gate when in **OPEN Position**. Arms should **NOT** be completely straight when in the **CLOSED Position**.

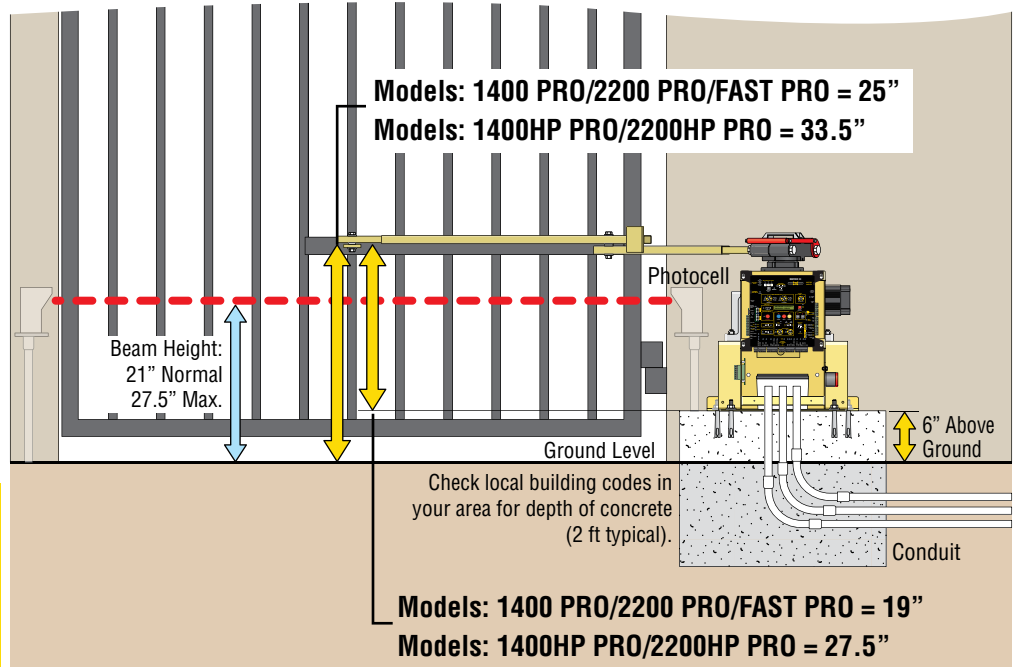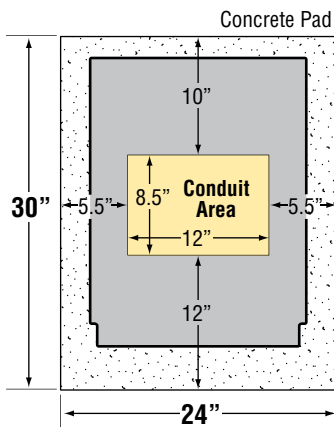


**UL 325 2018 Standard**  
Entrapment sensors must be installed in **BOTH** opening and closing direction of gate movement where entrapment or pinch point exist. **ONE** sensor must be installed for operator to start functioning.

# 1B COMPACT OPERATOR PLACEMENT

## Compact Installation ONLY


Use compact installation arm measurements when area between the **OPEN gate** and wall is 20" min to 32".

**DO NOT** use these arm measurements for a standard installation. (For standard installation, see previous page)

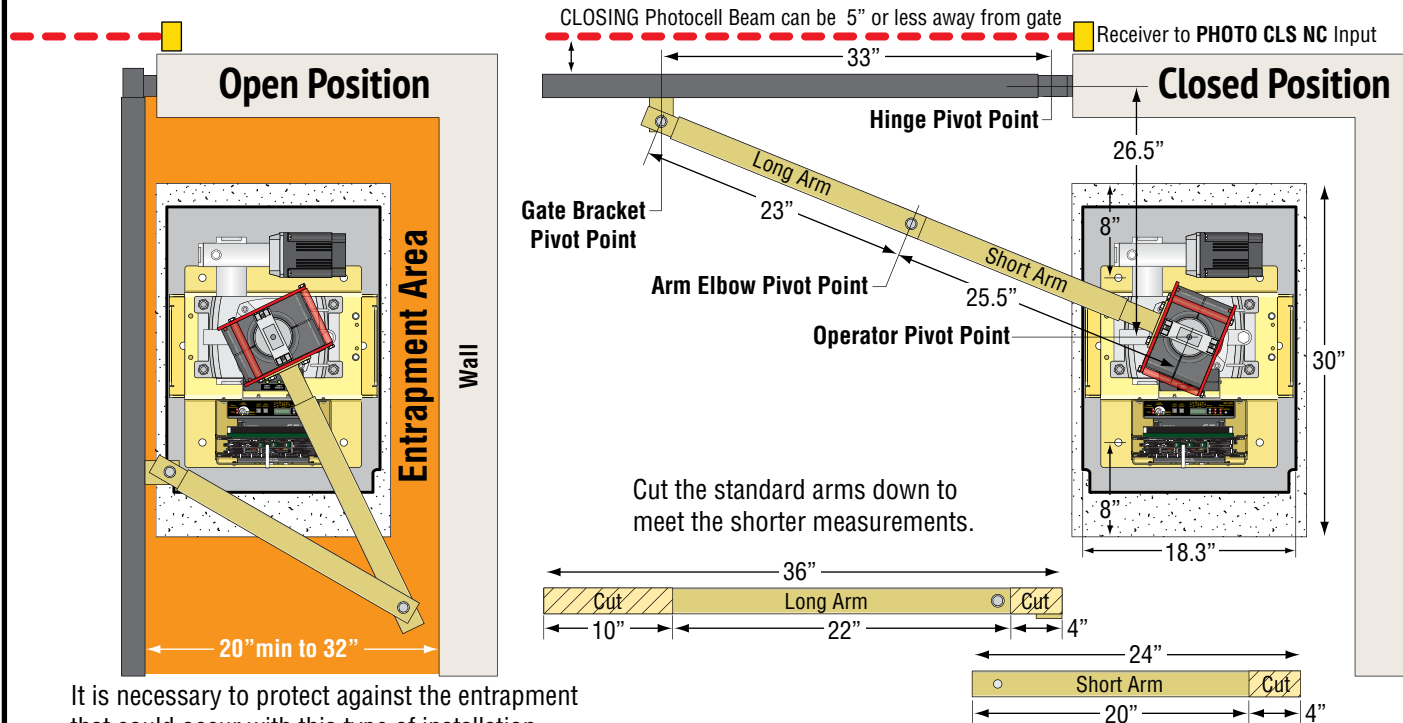


It is necessary to protect against the entrapment that could occur with this type of installation. (See entrapment protection on pages 8 and 9)

Illustrations not to scale

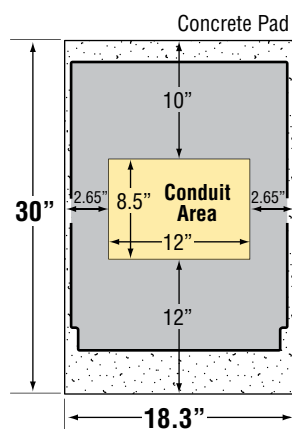


Models: 1400 PRO/2200 PRO/FAST PRO = 25"  
Models: 1400HP PRO/2200HP PRO = 33.5"

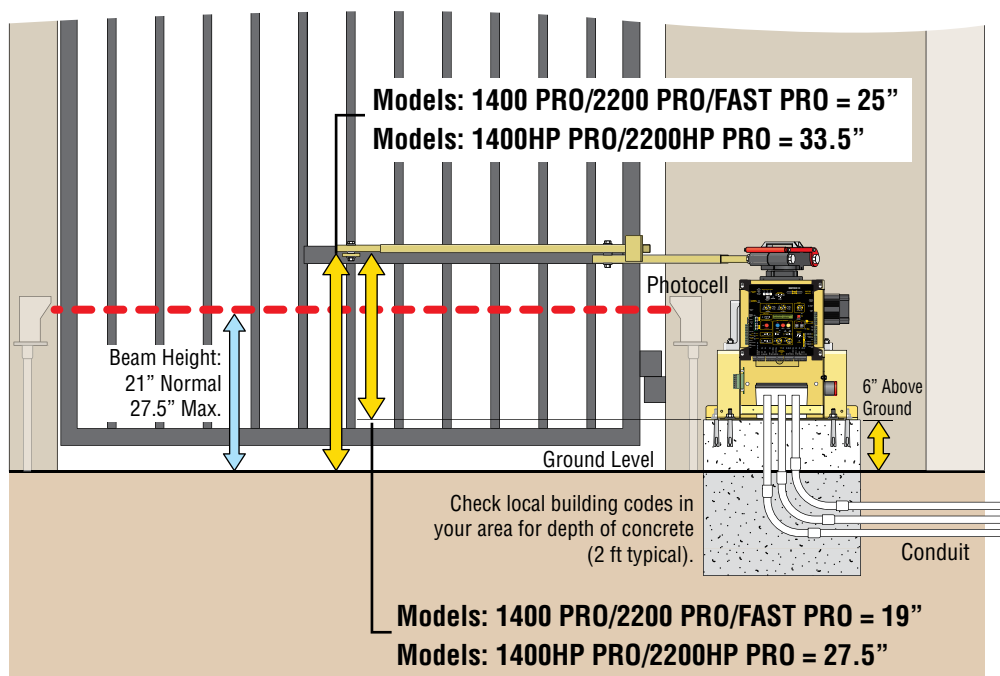


**UL 325 2018 Standard**  
Entrapment sensors must be installed in **BOTH** opening and closing direction of gate movement where entrapment or pinch point exist. **ONE** sensor must be installed for operator to start functioning.

Install arms using these guidelines:


### Arm in OPEN Position

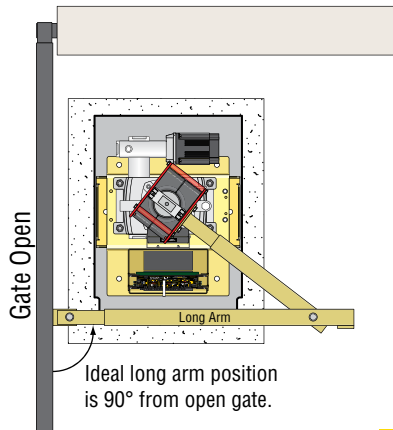






### Arm in CLOSE Position

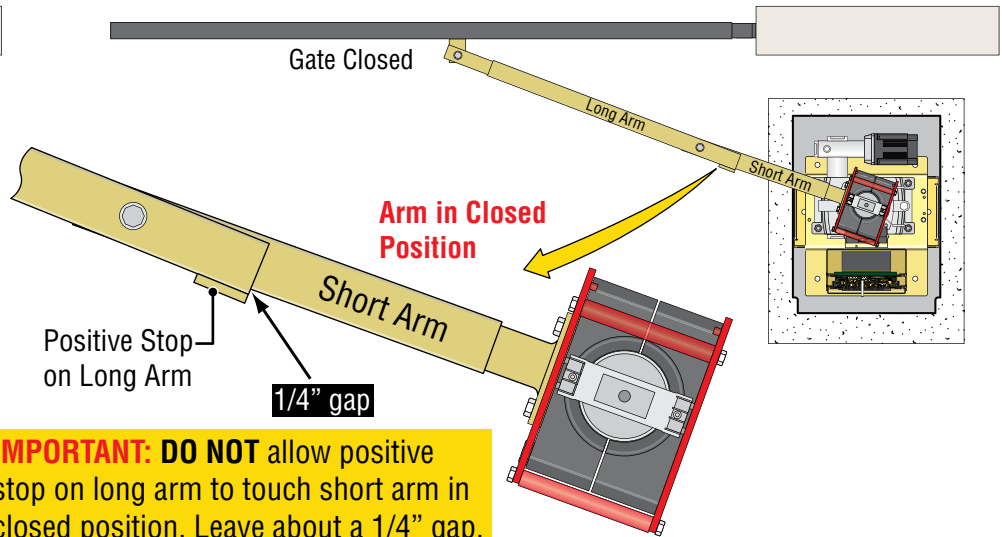

**IMPORTANT: DO NOT** allow positive stop on long arm to touch short arm in closed position. Leave about a 1/4" gap.

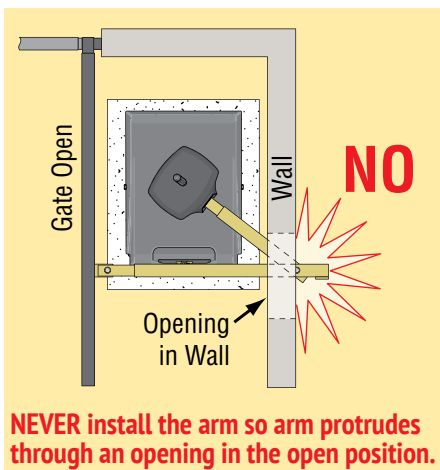

**NEVER** install the arm so arm protrudes through an opening in the open position.

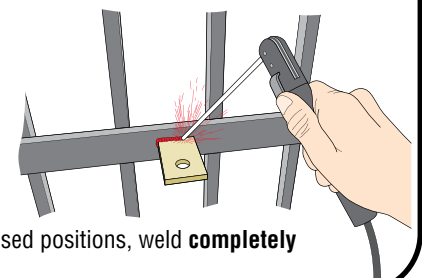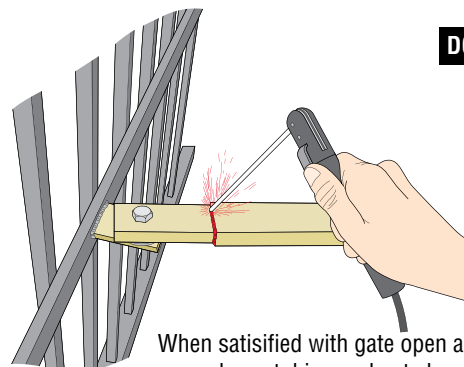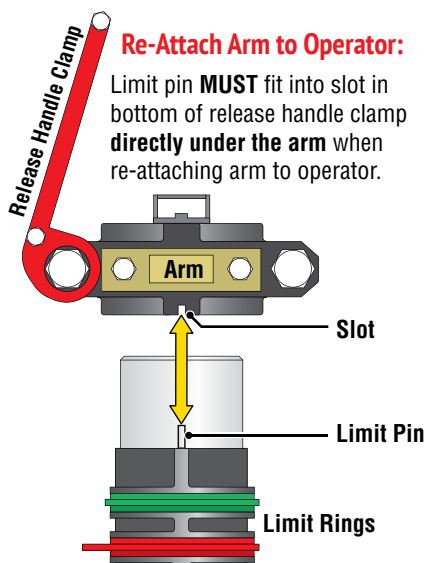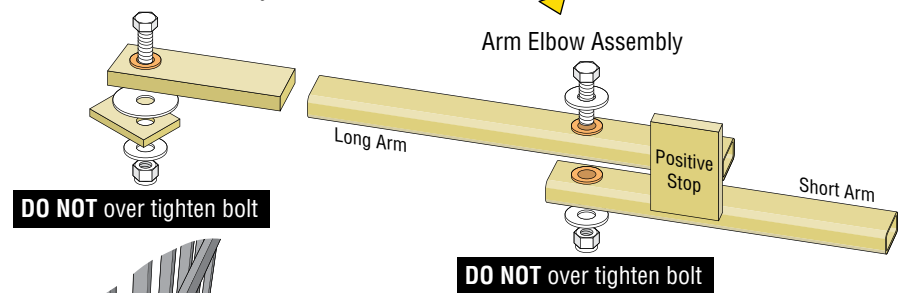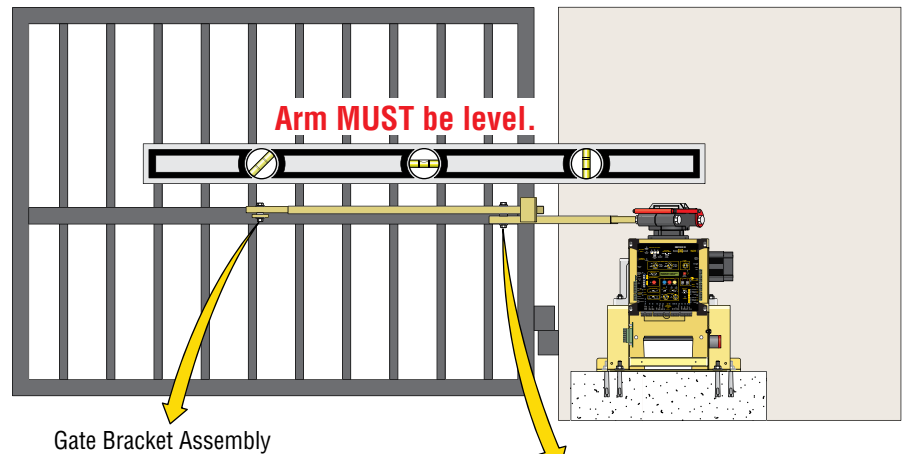




### 3


## RELEASE HANDLE CLAMP

**IMPORTANT:** Handle **MUST** be **HORIZONTAL** when **FIRMLY** in secure position.

**YES**


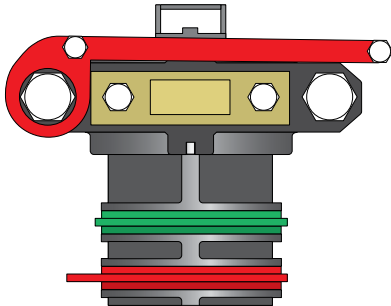


**NO**

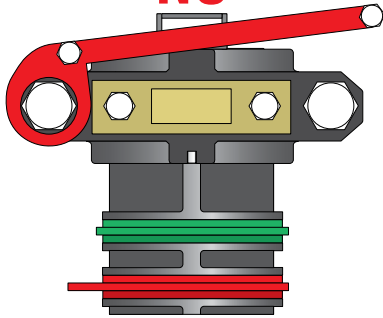


### Adjustment:

**IMPORTANT:** Tighten the adjustment bolt until **NO SLIPPAGE** occurs when handle is in the **SECURE HORIZONTAL** position.

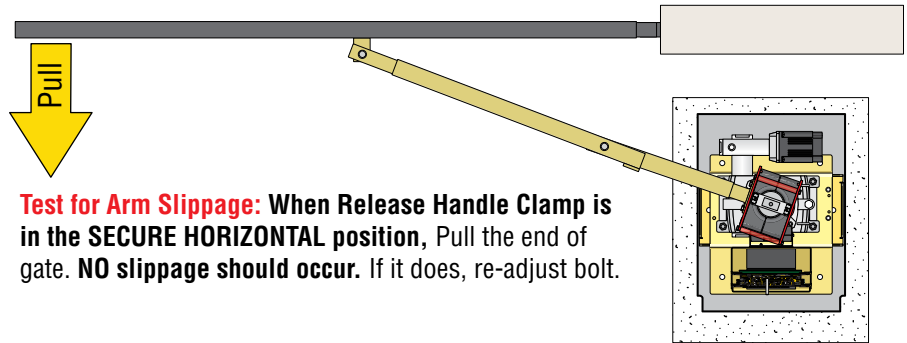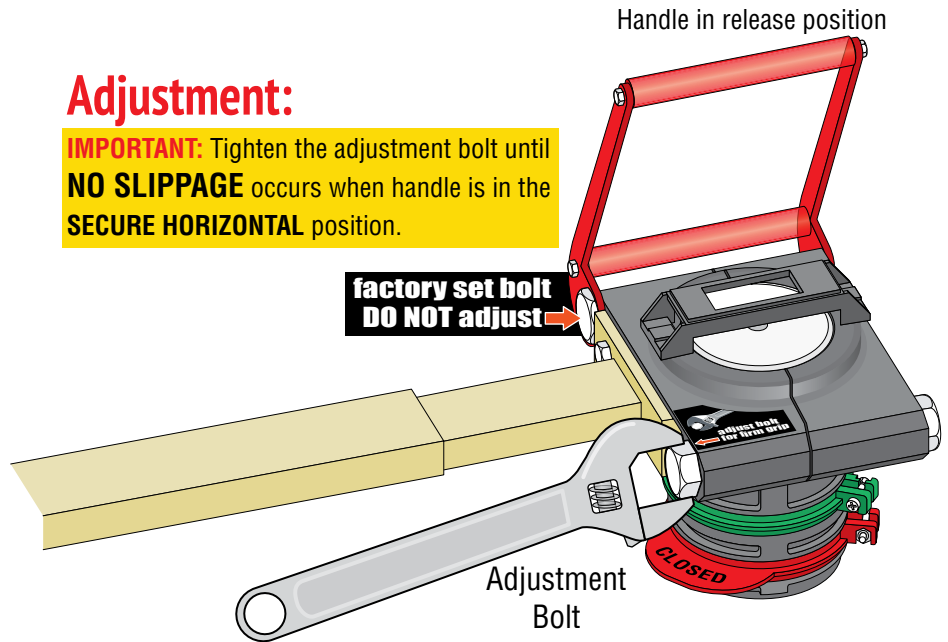

**Test for Arm Slippage:** When Release Handle Clamp is in the **SECURE HORIZONTAL** position, Pull the end of gate. **NO** slippage should occur. If it does, re-adjust bolt.

**IMPORTANT:** The arm **MUST NOT** slip when the gate is cycling or the gate **OPEN** and **CLOSE** limit positions will **NOT** be **LEARNED**. Gate speed will remain slow if gate positions are **NOT** learned.

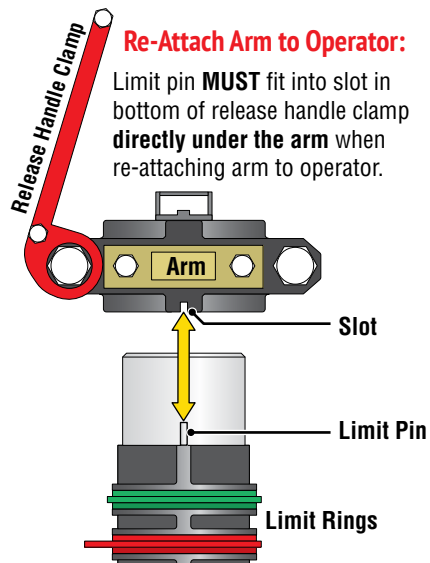

### Re-Attach Arm to Operator:

Limit pin **MUST** fit into slot in bottom of release handle clamp **directly under the arm** when re-attaching arm to operator.

**NOTE:** Limit rings that have been previously set will **automatically** re-align the gate's open and close position after release handle clamp has been re-attached and secured. **No re-adjustment is necessary.**



Wire input AC power wire to the **MAX Megatron Toroid box**.  
Choose either **115V** or **230V** setting on input AC power selector switch.

**CAUTION:** Make sure circuit breaker is **OFF** from incoming AC input wire **BEFORE** wiring!


**CAUTION:** If power selector switch is set for **115V** but input power is actually **230 V**, 7 Amp Fuse will blow.

## Input AC Power Options

Single Phase 115VAC Only

**115VAC**

Set to 115V





115 OR 230VAC  
Power Wire

Single Phase 230VAC Only


**230VAC**

Set to 230V

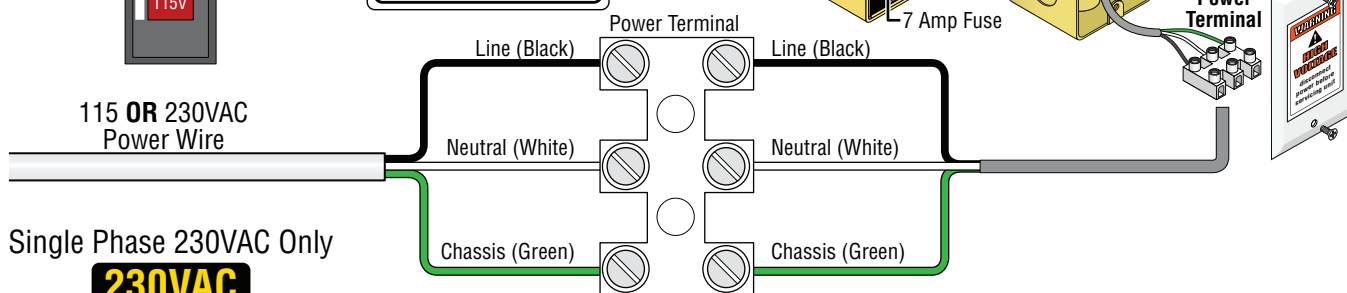

**IMPORTANT:** Make sure there are **NO** exposed bare wires at the power terminal connection.

## Turn Power ON

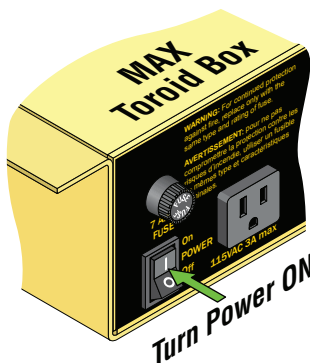


**DO NOT  
CYCLE  
OPERATOR!**

LEDs should light up on operator.  
Battery power **automatically** turns **ON**.

## Turn ALL Power OFF

- 1 Turn **OFF** AC POWER switch on MAX Toroid box. Battery power will remain **ON**.
- 2 Press and **HOLD** Red ON/OFF BATTERY button on the board until **BEEP** is heard, release button.

**IMPORTANT:** This procedure must be followed whenever **ALL** power must be turned **OFF** on operator.

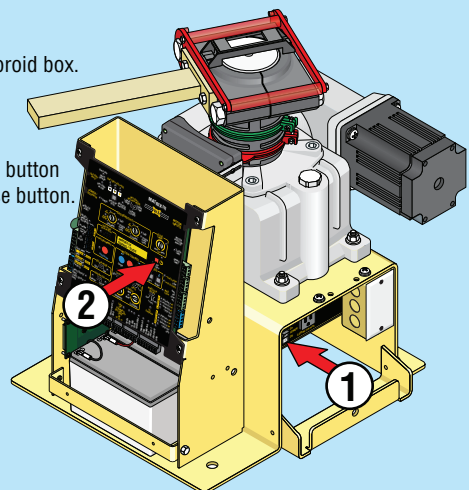

## 5) **GROUND OPERATOR**


# Operator MUST be Properly GROUNDED

**IMPORTANT:** Operator **MUST** be grounded in lightning prone areas or warranty will be **VOIDED!**


**connect chassis  
to ground rod for  
lightning protection**

**Proper grounding of this gate operator is a requirement for LIGHTNING PROTECTION in lightning prone areas.** To be effective, ground connections should be made with a **minimum 12 AWG, 600 volt insulated wire** to a ground point within **3 feet of the gate operator**. The ground point must be at an **electrical panel, a metallic cold water pipe** that runs in the earth, or a **grounding rod**.

**NOTE:** Consult city codes for AC line wiring.  
Beware of existing underground services.

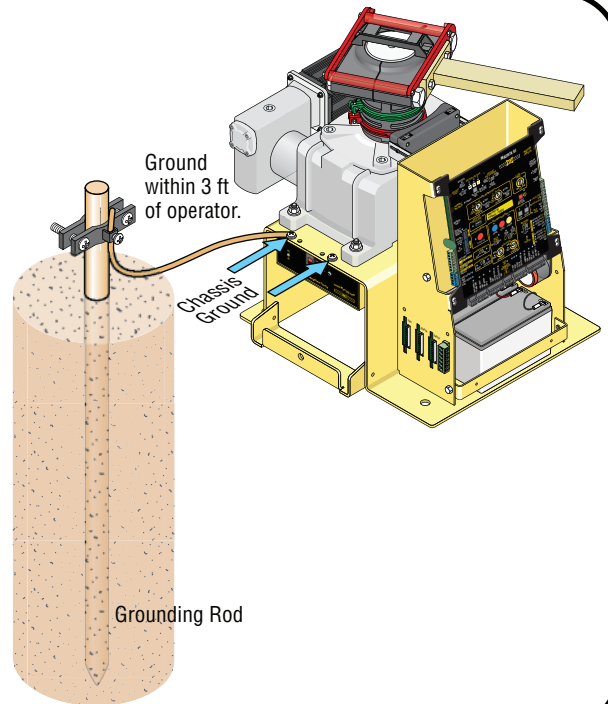

## 6) OPENING DIRECTION /ID PLUG/OPERATOR

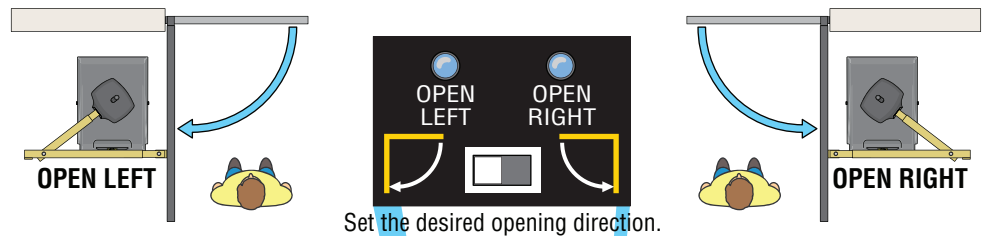

**ID Plug Error:** If ID plug is **NOT** plugged in, board will constantly beep and operator will **NOT** function.


ID plug **MUST** be plugged in.



**Operator:**


Set operator to **PRIMARY** for a single operator installation.  
Set **EACH** Matrix III board for desired operator positions  
when bi-parting gates are installed.

**NOTE:** PRIMARY board settings will override secondary board settings if a conflict in settings occurs.

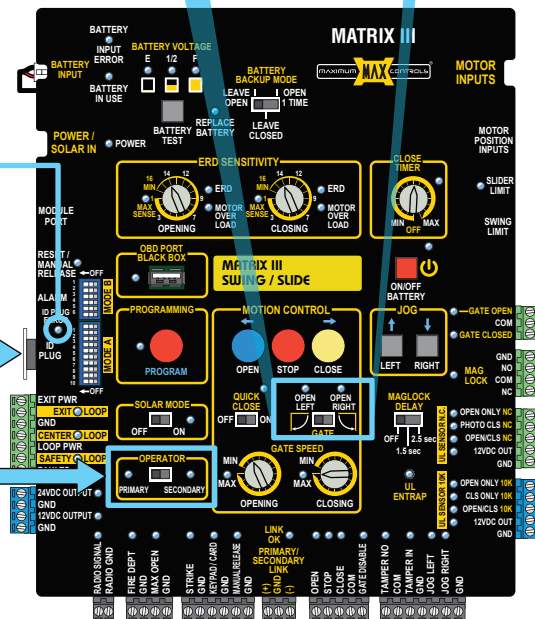

The limit rings need to be set **BEFORE** the gate can be cycled or **DAMAGE** could occur.

### Manual Release

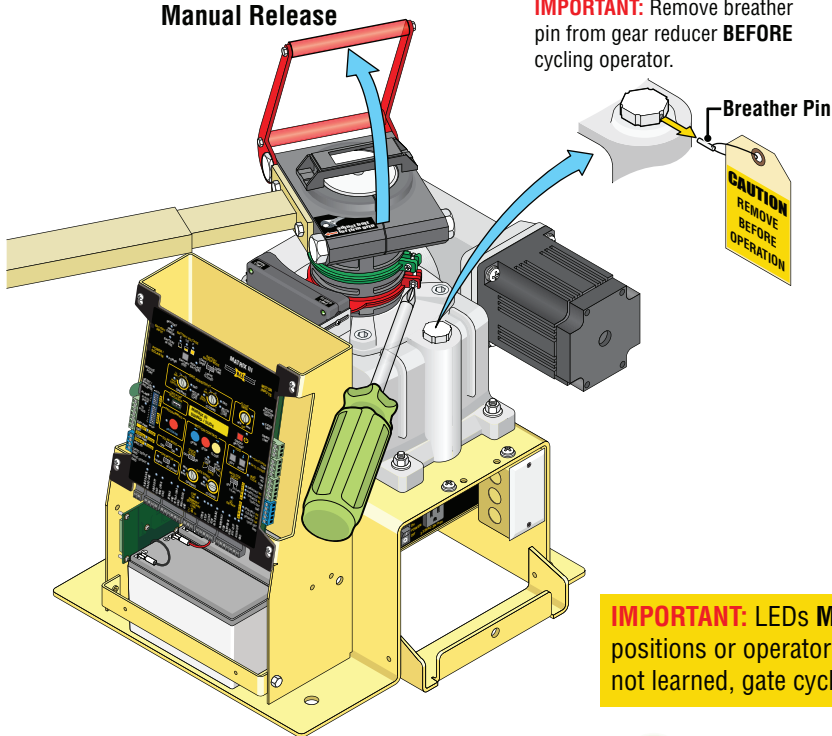


## Adjust Limit Switches:

**Make sure power is ON. Manually Release Arm.**



1. Move gate to **CLOSED** position.
2. Loosen closed limit ring screw.
3. Rotate closed limit ring until closed LED lights.
4. **TIGHTEN CLOSED** limit ring screw leaving **NO gap**.
5. Move gate to **OPEN** position.
6. Loosen open limit ring screw.
7. Rotate open limit ring until open LED lights.
8. **TIGHTEN OPEN** limit ring screw leaving **NO gap**.

**IMPORTANT:** Manually Secure Arm


**IMPORTANT:** LEDs **MUST** light up when gate reaches **OPEN** and **CLOSE** positions or operator **WILL NOT** learn gate positions. If gate positions are not learned, gate cycling speed will **remain SLOW** during normal operation.

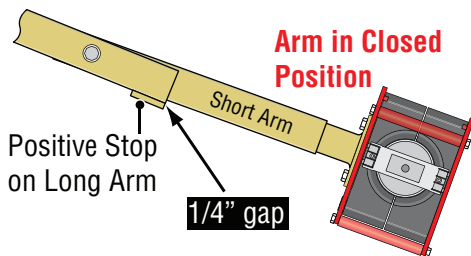

**IMPORTANT:** DO NOT allow positive stop on long arm to touch short arm in closed position. Leave about a 1/4" gap.

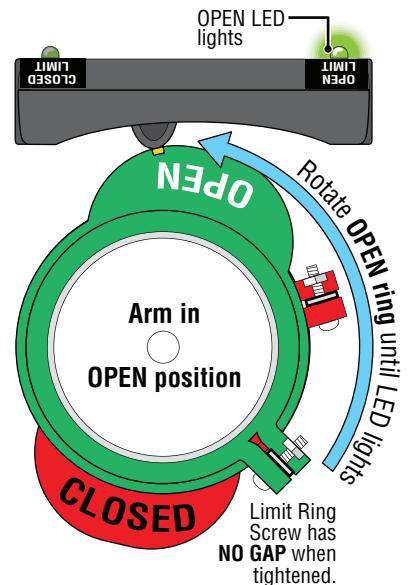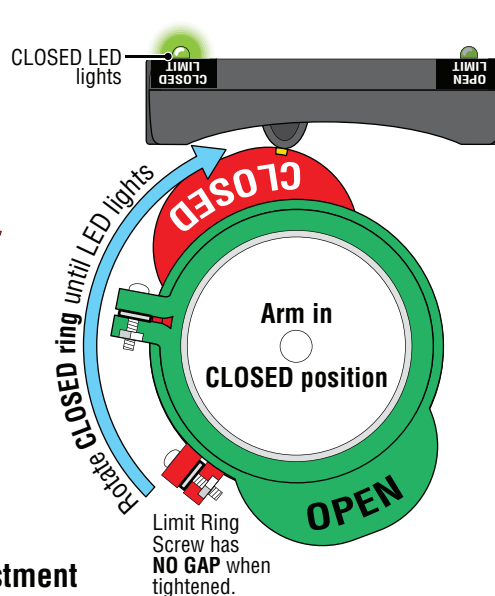



### "Fine Tune" Limit Rings Adjustment

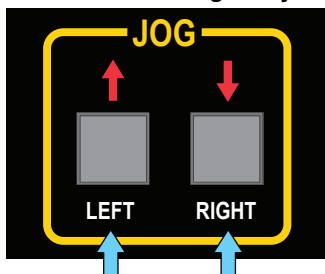

Push and **HOLD** the **JOG LEFT** or **JOG RIGHT** buttons on Matrix III accordingly to move the gate (release the button to stop gate). Re-adjust limit ring positions as desired.

## CAUTION


**Make sure OPEN/CLOSE limit rings are tightened after adjustment or slippage could occur.**

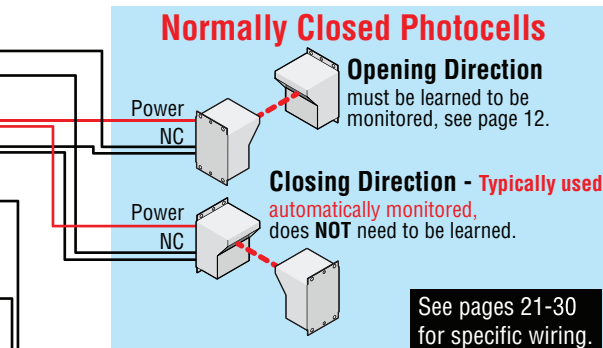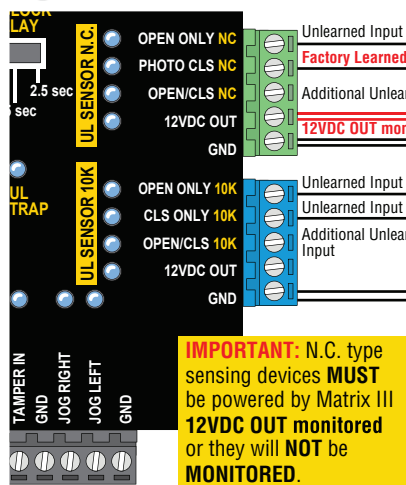

**Unlearned Inputs NOTE:** Connected sensors to unlearned inputs will **NOT** function if they are **NOT** learned, see page 12 to learn inputs.



**Bi-Parting Gates NOTE:** Connect sensors to **EITHER** operator when using dual gates.

### 10K Sensing Edges

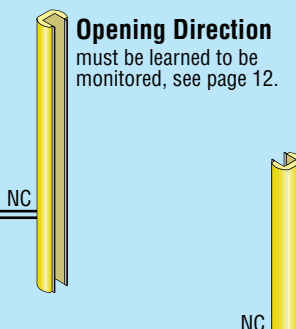

**Dual Operators NOTE:** if "Photo CLS NC" input is not used, then both **primary** and **secondary** operator **must** have a sensor connected in either opening or closing direction for operator to function.

## Entrapment Protection Device Options and Locations:

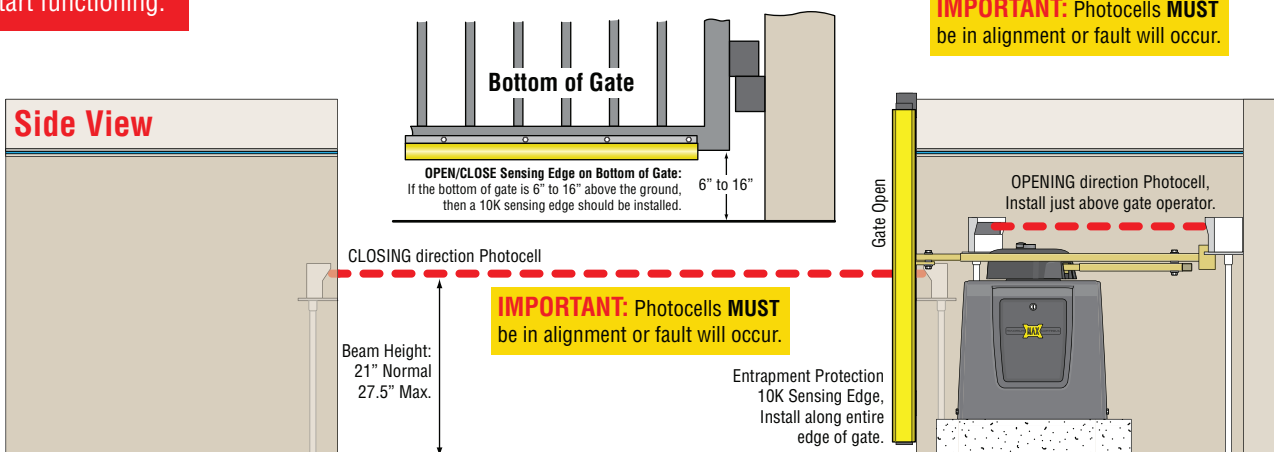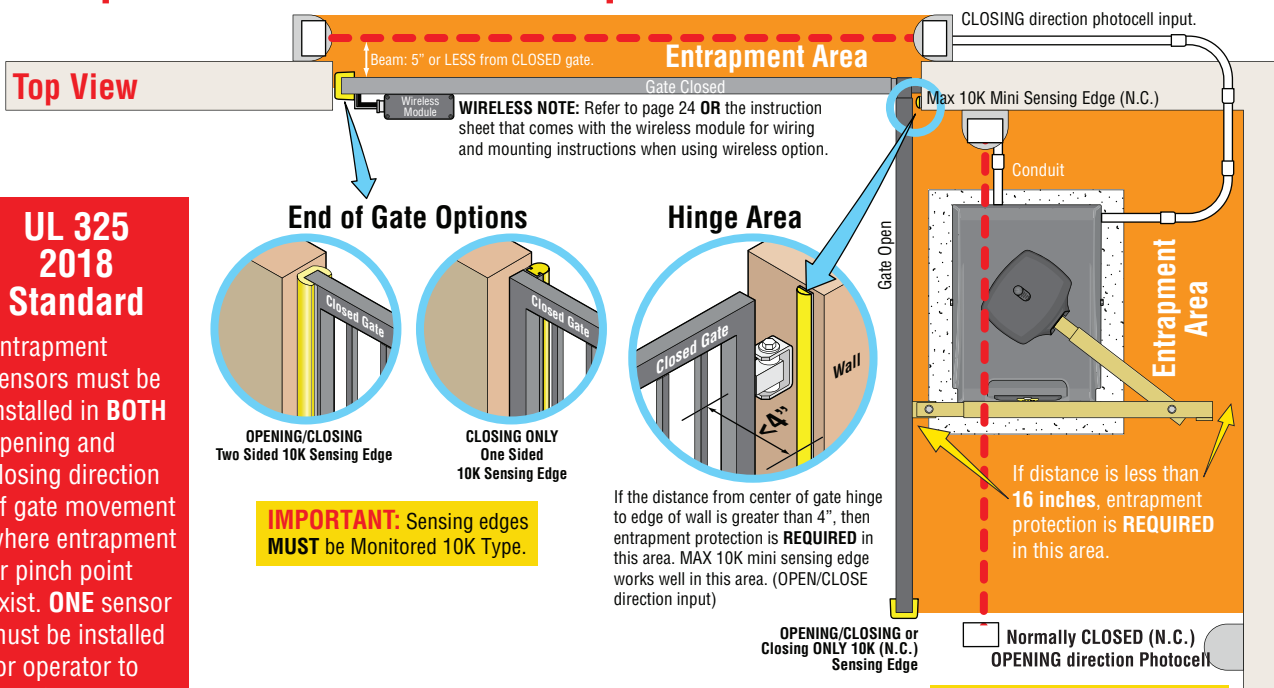


## Test Connected Sensors

**CAUTION: Keep pedestrians and vehicles clear of the gate while testing sensors.**

Test **ALL** connected entrapment protection sensors using learn mode:

1. Press and **HOLD** the **STOP** button & then the **OPEN** button together until beeping is heard, learn mode begins.


**NOTE: DO NOT** press the **OPEN** button before the **STOP** button or learn mode will **NOT** function.

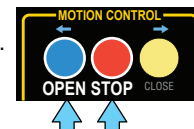

2. LEDs should be **ON** for each **connected** entrapment sensor detected. If LEDs are **NOT** on for each connected sensor then they have a problem.


**Possible problems:**

- Photocells are out of alignment
- Photocells are wired wrong - N.C. or N.O. depending on which type of photocells are used
- Sensing edges are wired wrong - Not 10K type
- Sensor is bad

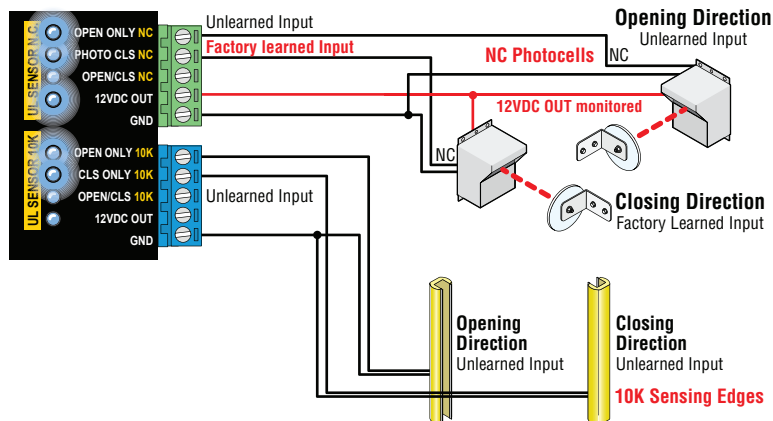

3. Press **STOP** button again within 5 min. to end learn mode, beeping stops.

**NOTE: If STOP** button is not pressed within 5 min. learn mode automatically end after 5 min.

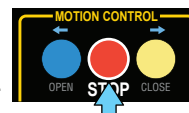

The following is a list of recommended accessories for the MAX Megatron PRO Operators.


Omron E3K-R10K4-10R Photocell  
 EMX IRB-MON Photocell (Thru-Beam)  
 EMX IRB-RET Photocell (Reflector)  
 EMX Wireless Edge Link WEL-200T / WEL-200R  
 Enforcer E931-S50RRGQ Photocell (Reflector)  
 Enforcer E960-G90GQ Twin Beam (Thru-Beam)  
 Miller Edge Prime Guard Photocell (Thru-Beam)  
 Miller Edge GEM-104 10K to NC Converter  
 Miller Edge R-Band Wireless Edge Unit P/N: RB-G-RX10 & RB-TX10  
 Transmitter Solutions IGAZER50LR-UL Photocell (Reflector)  
 Transmitter Solutions IGAZER66HD Photocell (Thru-Beam)  
 Transmitter Solutions Wireless Edge Sensor Model: RCO0900 P/N: IGAZERKIT-UL  
 ASO Edge MAX Mini Edge Contact Edge Sensor  
 ASO Edge Thin Edge MAX Edge 1 Contact Edge Sensor




## 9 LEARN GATE POSITIONS

After the **OPEN** and **CLOSED** limit rings have been set, the arm is **SECURE** and at least **ONE** entrapment sensor has been installed, put the gate in the **CLOSED** position:


1. Push **OPEN** button to cycle gate to open position.  
Operator cycles **slowly** while learning position.

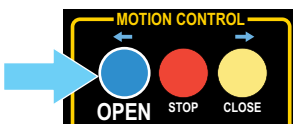

2. Then push **CLOSE** button to cycle gate to closed position.  
Operator cycles **slowly** while learning position.

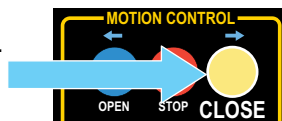

After gate positions have been learned, the gate will cycle at the speed set on “**GATE SPEED**” settings.

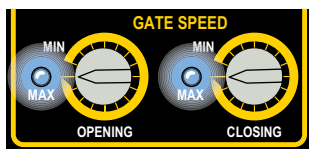

Typically set to MAX, LEDs ON.

## 10 ADJUST ERD REVERSE SENSOR

**CAUTION: Keep pedestrians and vehicles clear of the gate while adjusting sensors.**

The **ERD Sensor - Electronic Reversing Device** (Type A) **MUST** be adjusted for the **OPEN** and **CLOSE** gate cycles.

When the gate encounters an obstruction during the **CLOSE** cycle, it will reverse to the open position and **PAUSE** the gate. An input command (press remote button or exit loop) is needed **BEFORE** the gate will reset and close again.


When the gate encounters an obstruction during the **OPEN** cycle, it will reverse approximately 6 inches and **PAUSE** the gate. An input command (press remote button or exit loop) is needed **BEFORE** the gate will reset and open again.

For the **ERD Sensitivity** to function correctly:


- **THE RELEASE HANDLE CLAMP MUST NOT SLIP** when the gate encounters an obstruction.
- **Gate positions** must be learned **BEFORE** adjusting the ERD Sensitivity, See above.

**Typical Settings:**


**16 sensitivity setting positions in EACH direction.**  
**NO mechanical hard stops for knobs.**

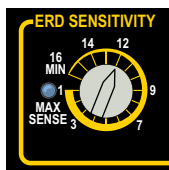

**Position 12:**  
• Typical gate setting.

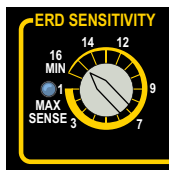


**Position 15:**  
• Heavy gate setting.  
• Long gate setting.

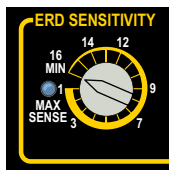


**Position 16:**  
• Uphill gate setting.  
• High wind area gate setting.

**CAUTION:** Position 16 results in gate exerting **MAXIMUM force** before reversing direction.


**IMPORTANT:** When satisfied with ERD adjustment, cycle the gate 3 or 4 times to make sure that the ERD sensor does not **falsely trigger** during normal gate operation. Re-adjust if this happens.

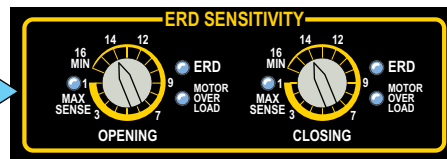

**Adjusting ERD in EACH direction:**

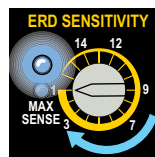


**A.** Turn knob until blue LED lights up. Maximum sensitivity reached, **Position 1** - Too sensitive for most gates.

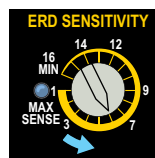


**B.** Turn knob **counter-clockwise** to reduce gate sensitivity while testing ERD until desired results is attained. (LED remains OFF for all but position 1)

If alarm sounds while adjusting ERD, press **STOP BUTTON** to shut-off alarm.



# 11 LOOPS & LOOP DETECTORS

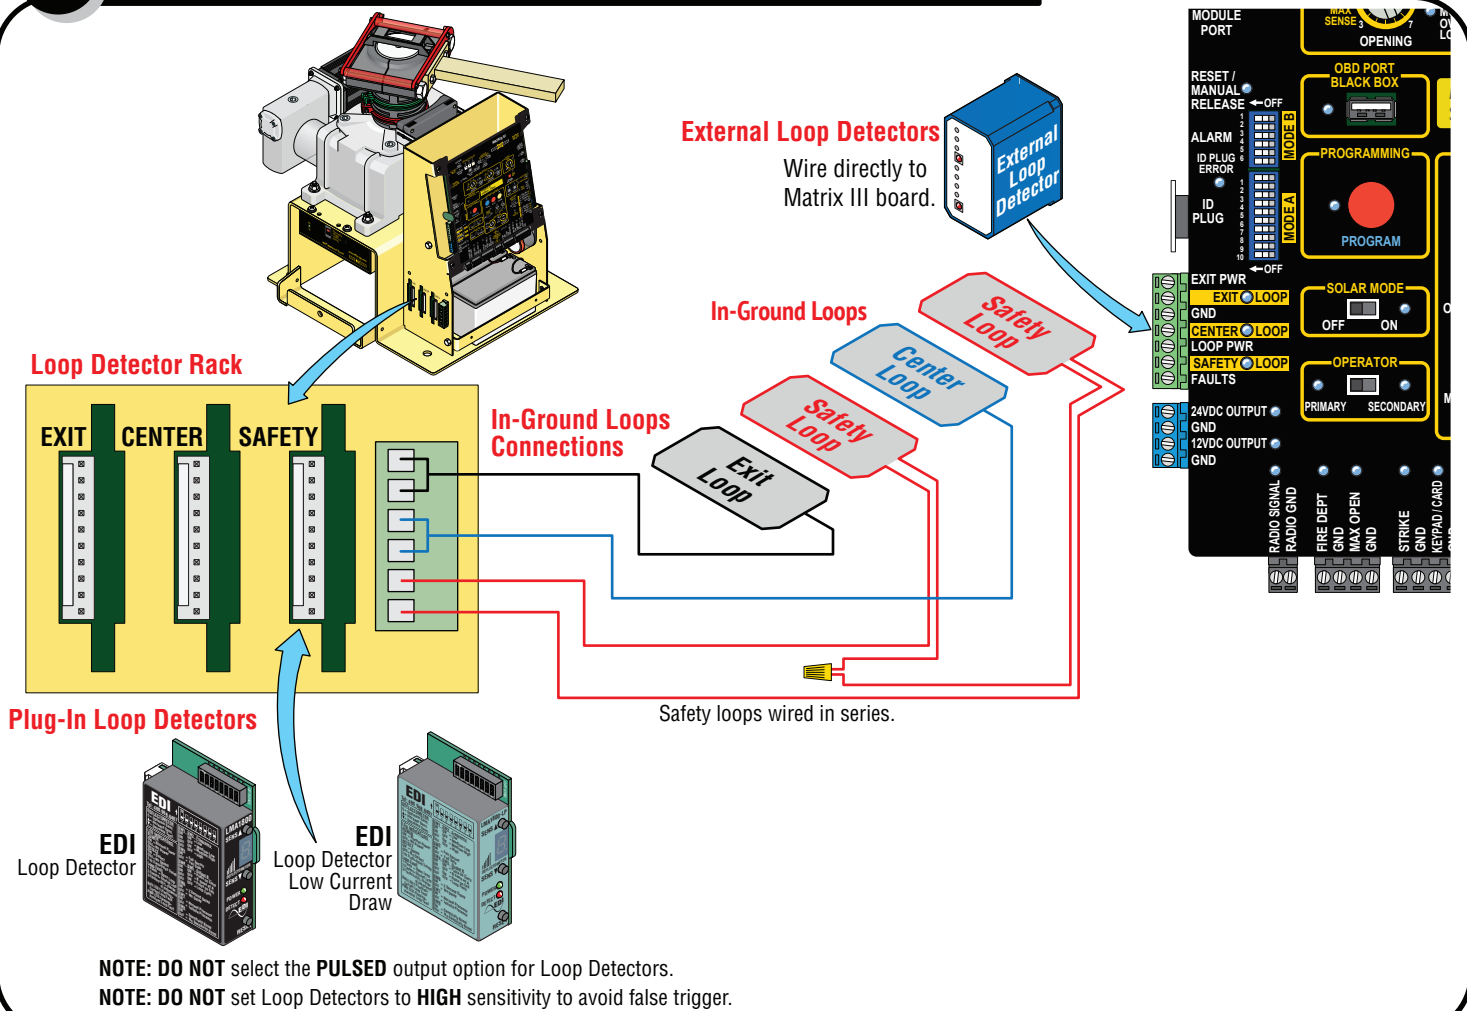

**NOTE: DO NOT** select the **PULSED** output option for Loop Detectors.  
**NOTE: DO NOT** set Loop Detectors to **HIGH** sensitivity to avoid false trigger.

# 12 MATRIX III SETTINGS

## Battery Back-Up Mode

**LEAVE OPEN** - After a power failure, gate will continue to operate until battery power is drained. At this point, the next open command, gate will remain **OPEN**. Gate will **automatically** close after AC power is restored if close timer is ON.


**LEAVE CLOSED** - After a power failure, gate will continue to operate until battery power is drained. At this point, gate will remain **CLOSED**.

**OPEN 1 TIME** - After a power failure, gate **automatically** **OPENS** and **REMAINS OPEN**. When power is restored, gate will **automatically** close.

## Quick Close

**Turned OFF** - Close timer will close the gate at its selected time.

**Turned ON** - (In-ground loops required) **OPENING** gate will stop and close after vehicle clears **safety loop**, preventing **UNAUTHORIZED** entry.

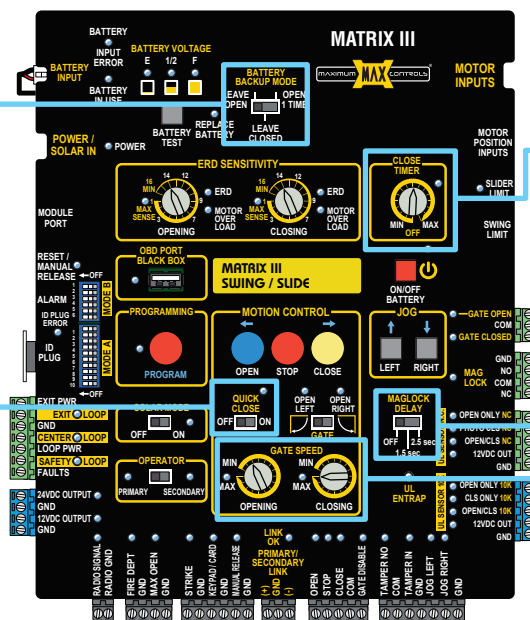

## Close Timer

1st click clockwise - Knob at MIN: 1/2 sec...  
2nd click clockwise: 1 sec...  
3rd click: 4 sec...  
4th click: 8 sec... etc up to 60 sec. MAX.

## Maglock Delay


Set to OFF  
See next page to enable this feature.

## Gate Speed

After gate positions have been "Learned", the gate will cycle at the speed set on "GATE SPEED" settings.



# 13 WIRING OPENING DEVICE OPTIONS

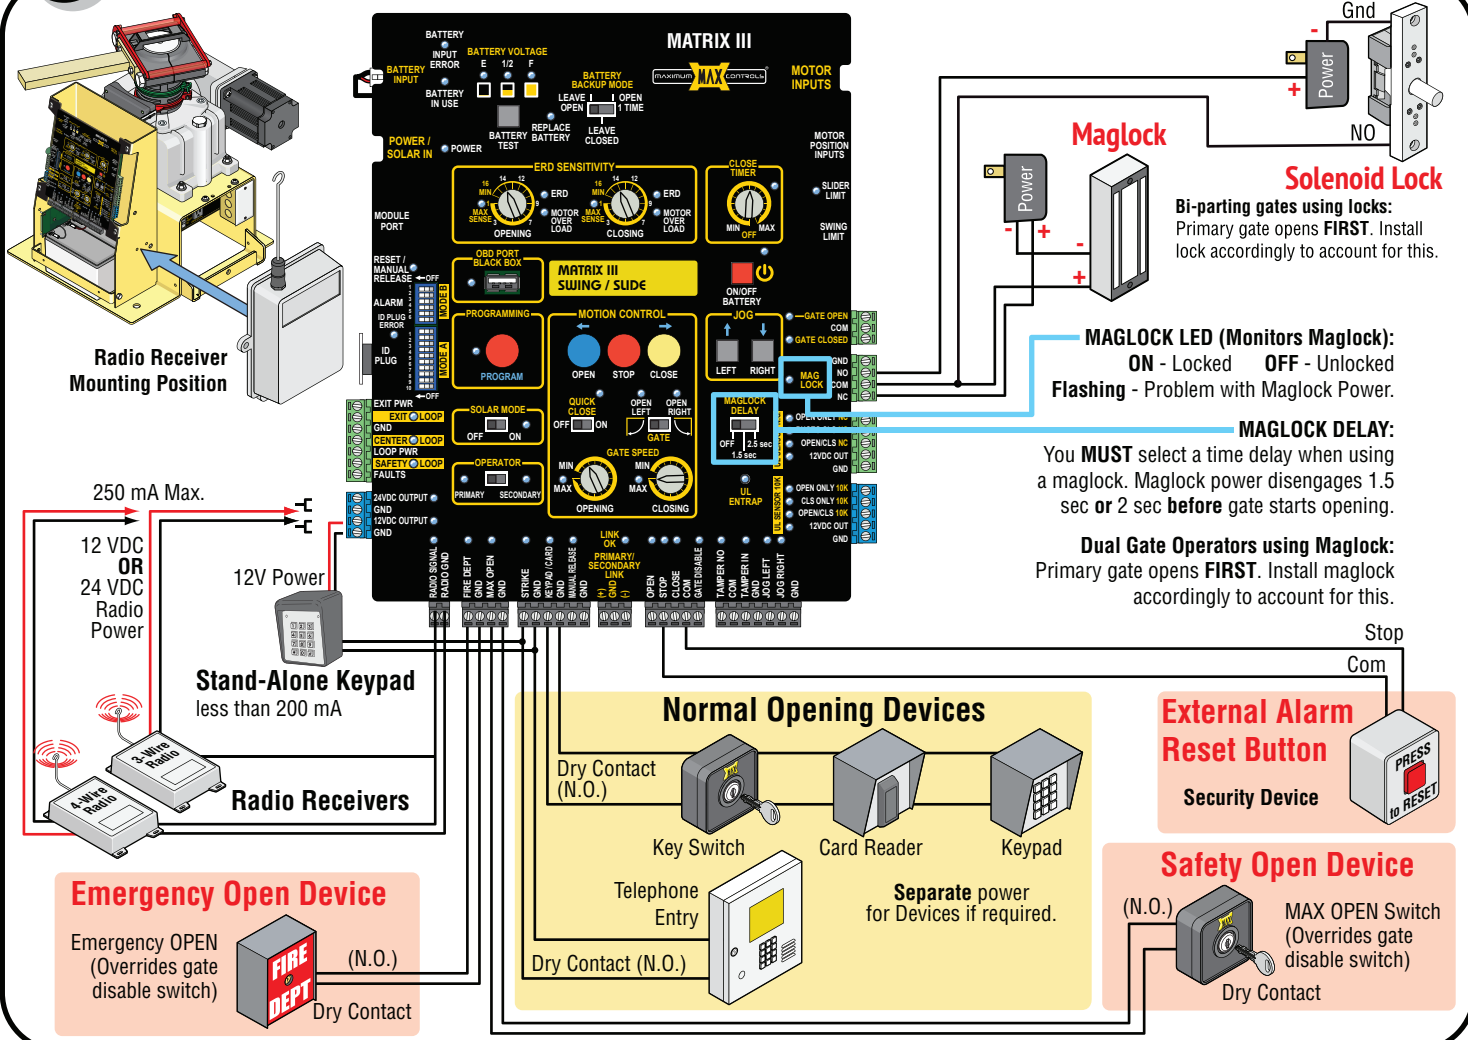

# 14 LEARN UNLEARNED SENSOR INPUTS

Indicated Inputs **MUST** be “**LEARNED**” before gate operator will **MONITOR** those sensors.

- Sensors that have been wired to indicated inputs **MUST** be “**LEARNED**” BEFORE they will be **MONITORED**.
- Press and **HOLD** the **STOP** button & then the **OPEN** button together until beeping is heard, learn mode begins. **DO NOT** press the **OPEN** button before the **STOP** button or learn mode will **NOT** begin (no beeping).

**NOTE:** Sensor wired to the **PHOTO CLS NC** input does **NOT** need to be “Learned”. It is “**AUTOMATICALLY MONITORED**”.

- LEDs **WILL** turn **ON** for each detected “**LEARNED**” sensor that has been wired to the inputs. If a sensor’s LED is **NOT** on, that sensor has a problem and it **MUST** be corrected before continuing.

**Possible problems:**

- Photocells are out of alignment
- Photocells are wired wrong - N.C. or N.O. depending on which photocells are used
- Sensor is bad


When all LEDs are **ON** that should be **ON**, proceed to next step.

- Press **STOP** button again within 5 min. to learn sensors and end learn mode, beeping stops.

Wired “**Learned**” Inputs will now be **MONITORED**.


**NOTE:** If **STOP** button is not pressed within 5 min., learn mode terminates.

If no “**LEARNED**” sensors are detected then factory default setting is restored (Inputs will **NOT** be Monitored).

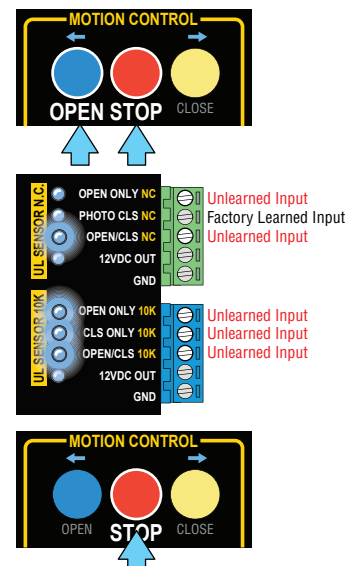

# ADDITIONAL FEATURES

## PROGRAMMING

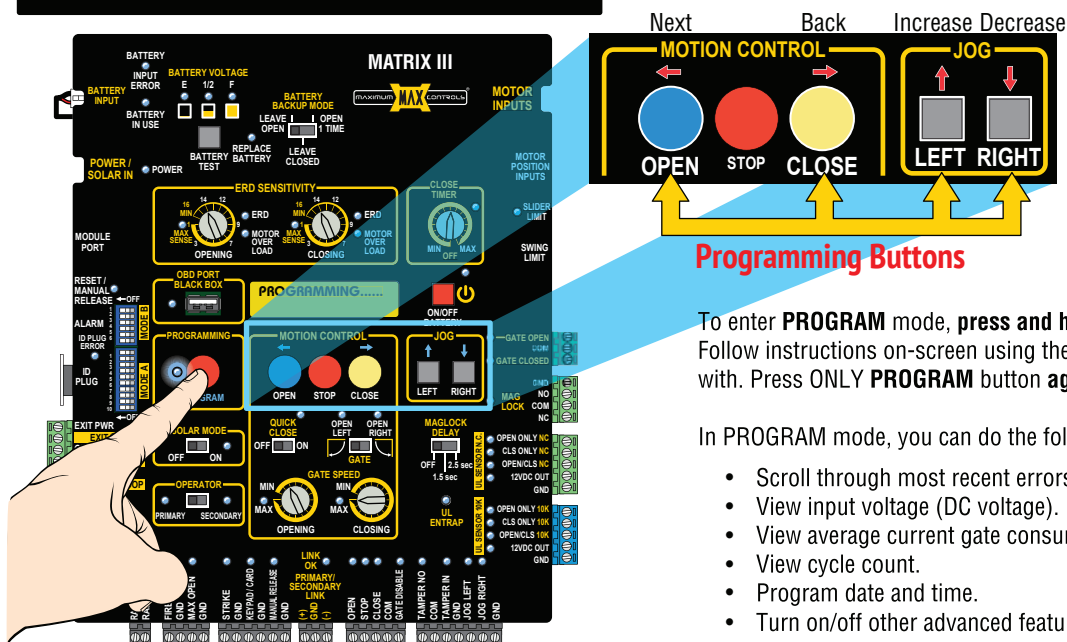


To enter **PROGRAM** mode, **press and hold PROGRAM** button for 5 seconds. Follow instructions on-screen using the 4 buttons shown above to program with. Press **ONLY PROGRAM** button **again** to end programming when finished.

In PROGRAM mode, you can do the following:

- Scroll through most recent errors.
- View input voltage (DC voltage).
- View average current gate consumption.
- View cycle count.
- Program date and time.
- Turn on/off other advanced features.

## DIP-SWITCH SETTINGS

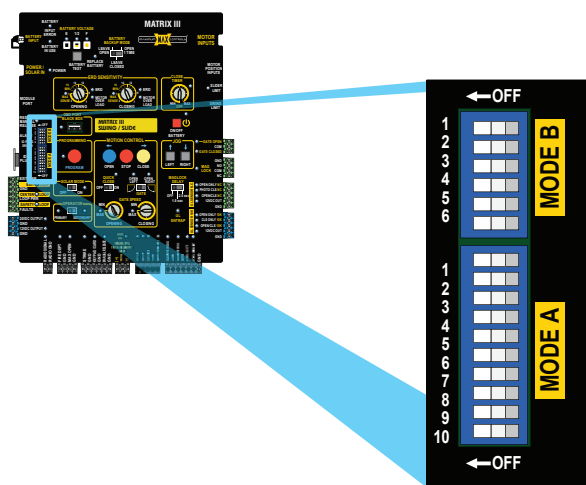

Set desired features using DIP-switches.

**Dual Gate Operators NOTE:**  
Primary operator DIP-switch settings **ONLY**  
(settings ignored on secondary Matrix III)

DUAL GATE  
APPLICATION  
PRIM ONLY SETTING

MODE B Switches	1	Open Relay Pulsed	OFF <b>Open Relay ON</b> when gate open ON <b>Open Relay Pulsed</b> when gate open	
	2	Solenoid Control Relay	OFF <b>For Maglock:</b> Mag lock relay will trigger <b>BEFORE</b> closed limit is reached. ON <b>For Solenoid:</b> Mag lock relay will trigger <b>AFTER</b> closed limit is reached.	
	3	Slider Gate Speed Select MAX 1700FS ONLY	OFF <b>12 in per sec</b> ON <b>18 in per sec</b> fast gate speed	
	4	No freeze on limit (SLIDER ONLY)	OFF <b>Freeze</b> motor on limit ON <b>Don't freeze</b> motor on limit, unless back-drive slider	<b>X</b>
	5	MAX RHINO OR	OFF <b>OFF MAX RHINO ON LY</b> ON <b>ON for ALL operators except</b> for MAX RHINO	
	6	All other operators	OFF <b>OFF for MAX RHINO ONLY</b> ON <b>ON for ALL operators except</b> for MAX RHINO	
MODE A Switches	1	Battery Beep Mode	OFF <b>No beeping</b> when ONLY battery power and gate is in motion. ON Beeping when <b>ONLY battery power</b> and gate is in motion.	
	2	Gate in Motion Alert	OFF <b>No alarm</b> while gate in motion ON Alarm while <b>gate in motion</b>	
	3	Strobe Light Control	OFF <b>No</b> strobe light control ON Strobe light control using <b>Tamper relay</b> N.O./Com	<b>X</b>
	4	Anti-Tailgate	OFF <b>No</b> Anti-Tailgate ON Anti-Tailgate <b>ON</b> -closing gate will pause if tailgate attempted	<b>X</b>
	5	Close Tamper Detect	OFF <b>No</b> Close Tamper Detect ON Trigger Tamper Relay ( <b>alarm for slider only</b> )	
	6	Stop Input Polarity	OFF Stop Input <b>NO-connect</b> to GND to activate ON Stop Input <b>NC-disconnect</b> from GND to activate	
	7	Open Relay Polarity	OFF Open relay <b>CLOSED</b> when gate is open ON Open relay <b>OPEN</b> when gate is open	
	8	Wireless Pri/Sec Link	OFF <b>Wired</b> Pri/Sec link ON <b>Wireless</b> Pri/Sec link	<b>X</b>
	9	UL Closing Photo Anti-tailgate (PHOTO CLS NC input)	OFF UL Closing Photo <b>Normal operation</b> ON UL Closing Photo <b>Anti-tailgate</b> wired to PHOTO CLS NC input <b>ONLY</b>	<b>X</b>
	10	Reserved	OFF <b>MUST be OFF</b> ON <b>DO NOT</b> turn ON	

# GATE CLOSE TAMPER FEATURE

Many different safety devices can be wired to the **GATE CLOSE TAMPER**. After device is wired to relay, it **MUST** be **ARMED** to function.



## Wiring Gate Close Tamper

The **GATE CLOSE TAMPER** can be used for various functions such as turning a warning light, siren or camera on when the gate is tampered with (Vandalized Gate).

The gate operator defines a "Vandalized Gate" as **UNAUTHORIZED** movement of the gate. This can occur if the gate is manually moved from the **closed position** or the gate is forced open from the **closed position without authorization**.


**TAMPER NO/Com Relay:** Connect a warning light, siren, camera or an existing alarm system to relay.

**TAMPER IN/GND Input:** Connect a sensor device to input. When Tamper In/GND gets triggered, device that is wired to Tamper relay (NO/Com) will activate.

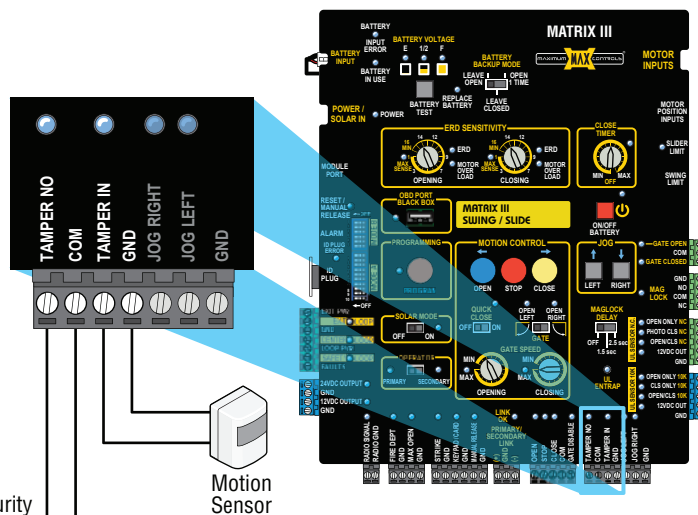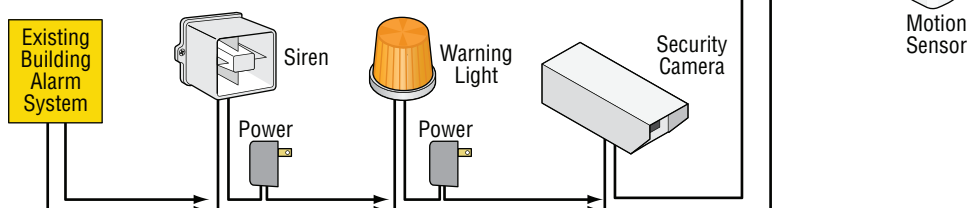

## Arm Gate Close Tamper (Turn ON)

Turn ON 5

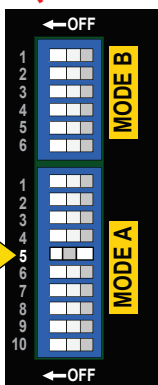


The **GATE CLOSE TAMPER** is factory set to **OFF** (Unarmed-Mode A DIP-switch 5 **OFF**). It **MUST** be turned **ON** (Armed-Mode A DIP-switch 5 **ON**) or safety device connected to the **GATE CLOSE TAMPER** relay will **NOT** activate.


When gate is manually pushed off of the **CLOSE LIMIT**, the gate close tamper relay and built-in UL alarm will activate when Mode A DIP-switch 5 is **ON**. The operator will shut down all operating functions.

The alarm reset button **MUST** be pressed to turn **OFF** the alarm and reset the operator.

If **GATE CLOSE TAMPER** is armed and relay is connected to an existing building alarm system, then they will get a triggering of their alarm system and should be notified of the situation.

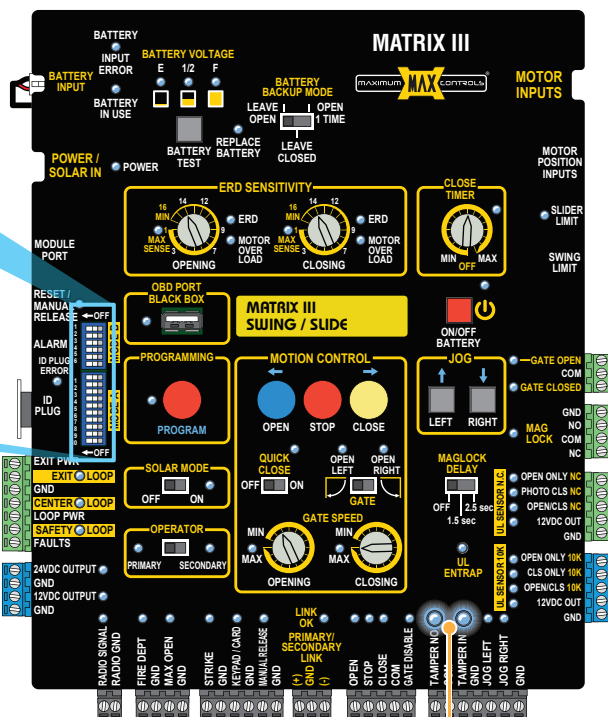

Gate Close Tamper LEDs

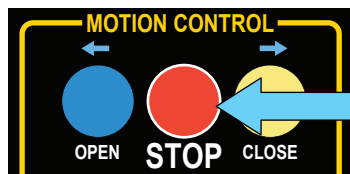

Alarm Reset Button



# GATE DISABLE FEATURE

This unique **GATE DISABLE** feature is useful when the gated area needs to be secured from **ALL** but emergency and/or authorized vehicle entry. Some examples are:

- Residential home vacation period.
- During closed hours of a business.

The **GATE DISABLE** feature will allow the FIRE DEPT/MAX and RADIO inputs to operate but nothing else. It helps with some major security problems that can occur when no one is available to monitor the property.

**GATE DISABLE** prevents breaking into a keypad box and trying to trigger the wires to get the gate to open.

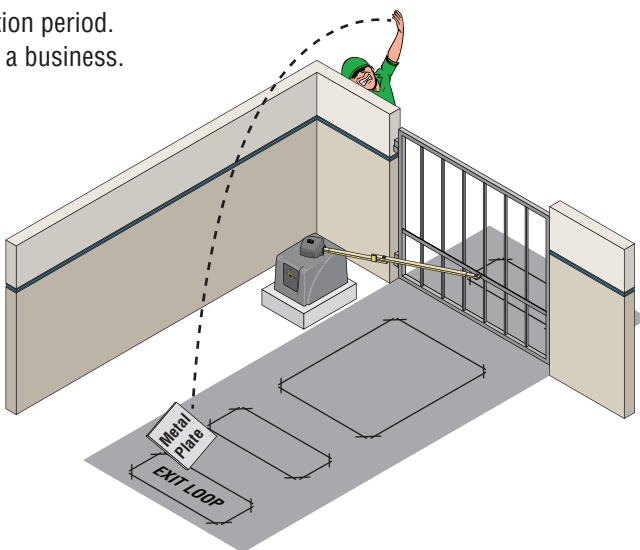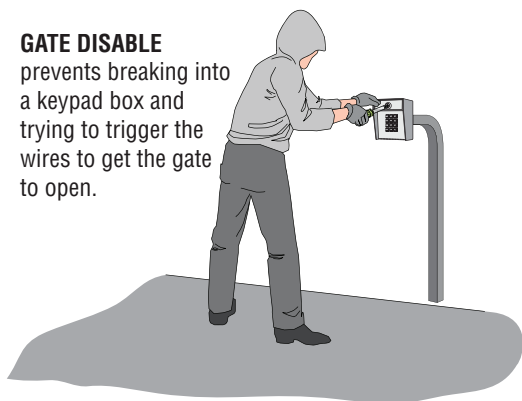

**GATE DISABLE** prevents trying to trigger the exit loop to get the gate to open.

**IMPORTANT:** It is **NOT** recommended activating **GATE DISABLE** while persons are present inside the property.


## Wiring Gate Disable

An ON/OFF switch or 7-Day timer devices can be connected to the **GATE DISABLE** input. When these devices are turned ON, they will **DISABLE** normal opening devices such as keypad, exit loop etc. The **FIRE DEPT/ MAX OPEN** and **RADIO** inputs will remain enabled when **GATE DISABLE** has been turned ON. This is useful when the gated area needs to be secured from ALL but emergency or authorized vehicle entry.


**When GATE DISABLE is turned ON:** The operator will beep for **3 minutes BEFORE arming itself**. This allows time to turn ON **GATE DISABLE** and leave the property before it is armed.

**When FIRE DEPT/MAX OPEN gets activated:** Gate opens and **GATE TAMPER** relay will activate immediately.


**When RADIO Input gets activated:** Gate opens and **GATE TAMPER** relay will activate **after 3 min**. This allows time to turn OFF **GATE DISABLE** or disarm an existing building alarm system if connected.

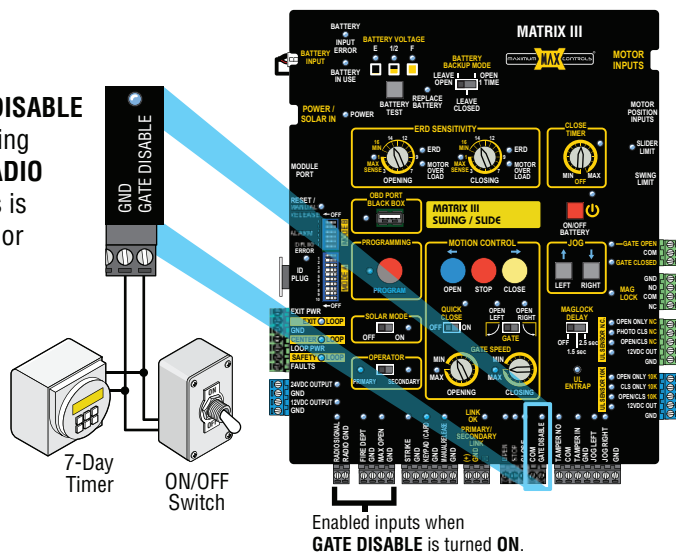

## DUAL GATE OPERATORS

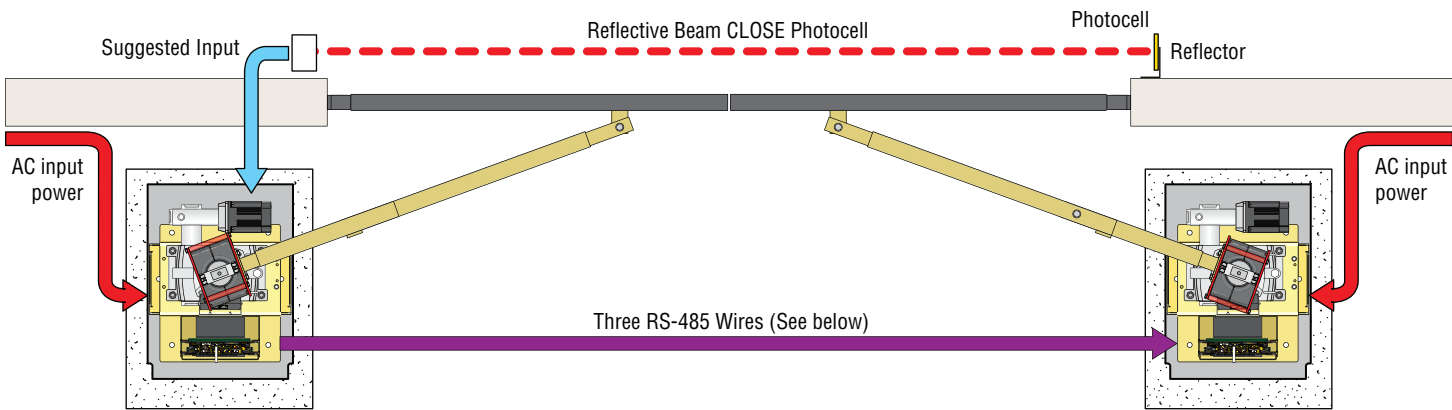

## Primary Operator

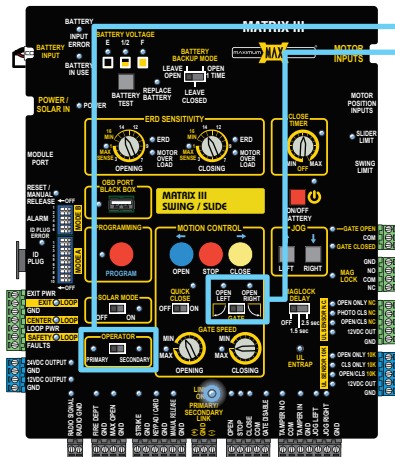

- Set one operator to **PRIMARY** and the other to **SECONDARY**.
- Set opening directions of each (reverse of each other).

- Primary** operator Matrix III settings **ONLY**  
(settings ignored on secondary Matrix III):


- Close Timer
- Maglock Overlap Delay
- Battery Backup Mode
- Solar Mode
- Quick Close - Anti-Tailgate

For **Primary** operator DIP-switch settings **ONLY** refer to the dipswitch table on page 13.

**Event History** can **ONLY** be viewed and/or downloaded on **PRIMARY** Matrix III.

**NOTE: PRIMARY** board settings will override secondary board settings if a conflict occurs.

## Secondary Operator

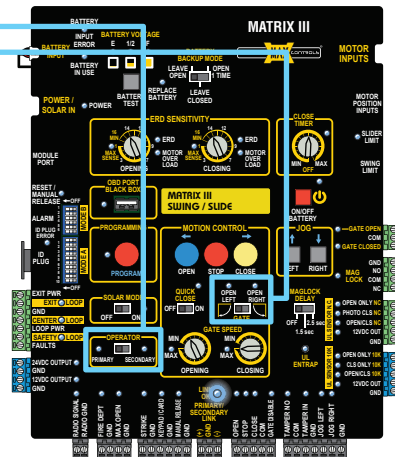

- AC input power run to **EACH** gate operator.
- Entrapment protection devices can be connected to **EITHER** operator.
- **Normal Opening/Security/Maglock** devices can be connected to **EITHER** operator.
- **Jog LEFT/RIGHT** buttons **ONLY** operate the **specific gate** connected to operator.
- **Manual Release** can be initiated from **EITHER** operator but affects **BOTH** operators.
- **Gate Disable** can be initiated from **EITHER** operator but affects **BOTH** operators.


**LINK OK** LEDs should remain **ON** indicating good communication between operators.

Primary RS-485 (+) to Secondary RS-485 (+)

Primary RS-485 (-) to Secondary RS-485 (-)

### Primary RS-485 GND to Secondary RS-485 GND

**NOTE:** The Alarm Shut-Off “**STOP**” button can be pressed on **EITHER** gate operator.

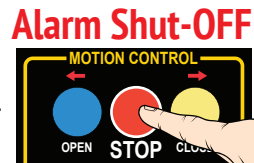





# TROUBLESHOOTING

This page and the next 3 pages can help troubleshoot problems that might occur after installation is complete.

## USB BLACK BOX PORT

Download a simple .txt file to troubleshoot gate operator errors and view event history.

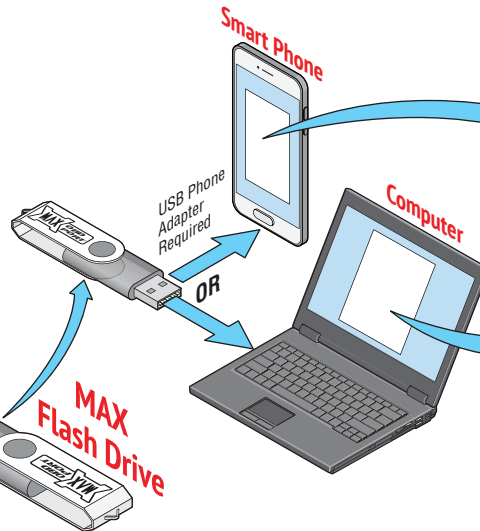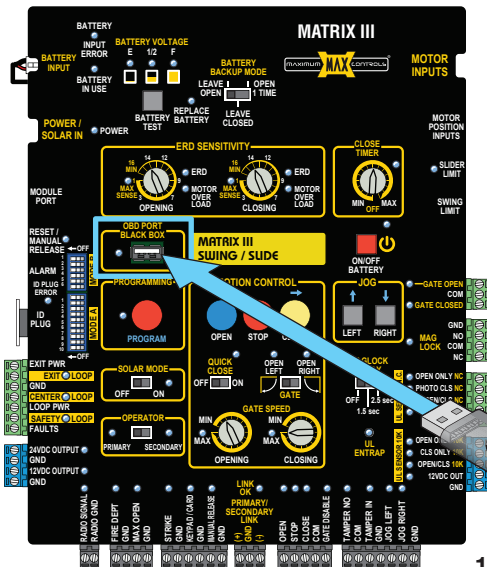

## Event History Text Document Sample

Event type clarification:  
**INFO:** informational message only  
**WARNING:** unusual event but doesn't cause system malfunction  
**ERROR:** abnormal event, could cause system malfunction  
**ENTRAP:** entrapment detection event

Event Report:

Fri 07/11/2014 10:59:41	INFO : Cycle Counter
Fri 07/11/2014 10:59:41	<b>ENTRAP : SEC_MC: First ERD Detected</b>
Fri 07/11/2014 10:59:37	INFO : Radio Input Deactivated
Fri 07/11/2014 10:59:36	INFO : Radio Input Activated
Fri 07/11/2014 10:58:54	INFO : PRI_MC: Fully Open Position Learned
Fri 07/11/2014 10:58:53	INFO : SEC_MC: Fully Open Position Learned
Fri 07/11/2014 10:57:40	INFO : PRI_CIO: Communication Established
Fri 07/11/2014 10:57:38	<b>ENTRAP : PRI_MC: Photo Cell Deactivated</b>
Fri 07/11/2014 10:57:34	<b>ENTRAP : PRI_MC: Photo Cell Activated</b>
Fri 07/11/2014 10:57:21	INFO : Radio Input Deactivated
Fri 07/11/2014 10:57:21	INFO : Radio Input Activated
Fri 07/11/2014 10:56:46	<b>WARNING: PRI_MC: Tamper Reported</b>
Fri 07/11/2014 10:56:36	INFO : SEC_MC: Fully Open Position Unknown
Fri 07/11/2014 10:56:36	INFO : PRI_MC: Fully Open Position Unknown
Fri 07/11/2014 10:56:36	<b>WARNING: PRI_MC: Tamper Reported</b>
Fri 07/11/2014 10:56:33	ENTRAP : PRI_MC: Photo Cell Deactivated
Fri 07/11/2014 10:56:33	ENTRAP : PRI_MC: Photo Cell Activated
Fri 07/11/2014 10:56:33	ENTRAP : PRI_MC: Photo Cell Deactivated
Fri 07/11/2014 10:56:33	ENTRAP : PRI_MC: Photo Cell Activated

1. Plug MAX USB flash drive into **OBD port**. OBD LED will flash while file is downloading. Remove flash drive after LED stops flashing (up to 5 minutes to download).
2. Plug flash drive into any computer USB port **OR** smart phone using a USB phone adapter. The most recent **8000 events** can be viewed. No special software required.

## TEST ENTRAPMENT SENSORS

Troubleshoot entrapment protection sensors:


1. Press and **HOLD** the **STOP** button & then the **OPEN** button together until beeping is heard, learn mode begins.

**NOTE: DO NOT** press the **OPEN** button before the **STOP** button or learn mode will **NOT** function.

2. LEDs should be **ON** if an entrapment sensor is detected in **EACH** input. If LEDs are **NOT** on, sensors have a problem.

### Possible problems:

- Photocells are out of alignment
- Photocells are wired wrong - N.C. or N.O. depending on which photocells are used, see specific mfg instructions.
- Sensor is bad

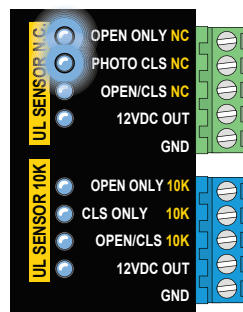



Unlearned Input  
 Factory Learned Input  
 Unlearned Input  
 Monitored Power

Unlearned Input  
 Unlearned Input  
 Unlearned Input

**IMPORTANT:** N.C. type sensing devices **MUST** be powered by Matrix III **Monitored Power** or they will **NOT** be **MONITORED**.

3. Press **STOP** button again within 5 min. to end learn mode, beeping stops.

**NOTE:** If **STOP** button is not pressed within 5 min. learn mode automatically end after 5 min.

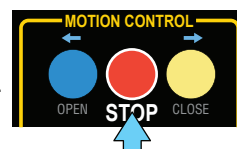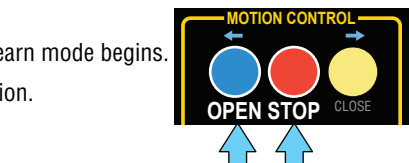

# GATE CYCLING TROUBLESHOOTING


**Use this table to help with troubleshooting AND operator LED troubleshooting on the next 2 pages.**

Refer to MAX Megatron Matrix III manual for more information.

Gate Symptom	Solutions (what to check)
Gate beeps but will not open or close for any command given.	<ul style="list-style-type: none"> <li>Check GATE SHUTOFF switch, it should be OFF. Turn switch ON then OFF again, possible chain drop event and switch needs to be recycled. GATE DISABLE LED should be OFF.</li> </ul>
Gate moves slowly.	<ul style="list-style-type: none"> <li>Check if OPEN and CLOSE Limits have been learned. Refer to "Learn Gate Positions" (see 9).</li> <li>Check if GATE SPEED rotary dial is set to MAX position (LED on).</li> <li>Check if OPEN and CLOSE Limit Rings are secured tight. If rings are not tightened, they will slip on collar.</li> <li>Check if Clamp is tight using red handle. Use adjustment bolt indicated on handle to make adjustments.</li> <li>Check if guide pin on limit ring collar is aligned to fit in clamp guide slot.</li> <li>Check if positive stop on long arm is touching short arm in closed position. If so, re-adjust close limit ring such that there is a min 1/4 inch gap for positive stop.</li> <li>Gate may be too heavy for operator (check manual for maximum gate weight for your model operator).</li> <li>Check if "BATTERY IN USE" LED is ON. If so, gate is on Battery back-up mode and battery is running low.</li> <li>Arm elbow and gate bracket bolts are too tight, loosen bolts. Gate hinges may be too tight.</li> </ul>
Gate beeps when opening and closing. Gate does NOT open.	<ul style="list-style-type: none"> <li>Operator may be in battery back up mode. check if "Mode 1" switches are set correctly.</li> <li>Check if "Gate in Motion" Alarm feature is ON ("Mode 0" switches are set correctly).</li> <li>Check if Power LEDs are ON on both Matrix III and Toroid box. Check if "LINK ON" LED is ON.</li> <li>Check if PRIMARY GATE "open RIGHT / open LEFT" switch is set properly.</li> <li>Check if GATE DISABLE LED is ON. If so, check if GATE DISABLE input is active.</li> <li>Check if "PHOTO OPEN" LED or "OPEN/CLS" LED is ON or BLINKING. If so, check entrapment sensor wiring.</li> <li>Check if "BATTERY IN USE" LED is ON. If so, battery may be too low and gate is kept closed (BATTERY BACK-UP MODE switch set to "Leave Closed").</li> </ul>
Gate does NOT close.	<ul style="list-style-type: none"> <li>Check if Power LEDs are ON on both Matrix III and Toroid box. Check if "LINK OK" LED is ON.</li> <li>Check if "CLS ONLY" LED is ON. If so, check entrapment sensor wiring and alignment.</li> <li>Check if any loops are active, check SAFETY LOOP, CENTER LOOP or EXIT LOOP LED is ON.</li> <li>Check if any open command inputs are active (check if LED is ON for: RADIO, FIRE DEPT, MAX OPEN, STRIKE, KEYPAD/RDR. Check device connected to the input that LED light is turned ON.</li> <li>Check if PRIMARY GATE "open RIGHT / open LEFT" switch is set properly.</li> <li>If "PHOTO OPEN" LED or "OPEN/CLS" LED is ON. If so, check entrapment sensor wiring or missing jumper.</li> <li>If "BATTERY IN USE" LED is ON and BATTERY BACK-UP MODE switch is set to "leave Open", then battery may be too low and gate is kept OPEN.</li> <li>If "BATTERY IN USE" LED is ON and BATTERY BACK-UP MODE switch is set to "OPEN 1-TIME", then if AC power is lost, gate will automatically open 1 time.</li> <li>If "CLOSE TIMER" is OFF, then gate will not close automatically. A close command (i.e radio, close) is required to close gate.</li> <li>Loop detector is defective (CENTER, EXIT, or SAFETY).</li> <li>Loop has a short or open. Measure loop resistance.</li> </ul>
Gate stops prematurely and beeps, moves in opposite direction.	<ul style="list-style-type: none"> <li>If "ERD" LED is ON, an obstruction (ERD event) is detected. If no apparent obstruction, select a less sensitive ERD setting.</li> <li>If "PHOTO OPEN" LED is ON, entrapment sensor is triggered.</li> </ul>
Gate will stop before reaching desired limit setting.	<ul style="list-style-type: none"> <li>Gate Open and Close Limits have not been learned properly. Relearn limit positions using jog RT and jog LT.</li> <li>Check if Clamp is on collar guide pin and is mounted securely on output shaft.</li> <li>Check if PARTIAL OPEN feature is turned ON. Re-learn partial open position or turn off feature.</li> <li>Only for OPENING gate (not during closing cycle): Check if PARTIAL OPEN feature is turned ON. Relearn partial open position or turn off PARTIAL OPEN feature.</li> </ul>
Gate stops abruptly while in motion.	<ul style="list-style-type: none"> <li>Bad hinge - hinge pin offsets during motion causing abrupt gate movement.</li> <li>Operator placement is not proper or arm pivot point on standard gate is not at least 1/4 of gate length (1/3 of gate length for heavy / uphill gates).</li> <li>If "LINK OK" LED is OFF, then check wiring between Matrix III and Limit switch box.</li> <li>Check if "OPEN/CLS" LED is ON. If so, check entrapment sensor wiring.</li> <li>Motor hall sensor cable may be compromised. Unplug cable from "Motor Inputs" and ensure wires are not broken and are crimped properly.</li> </ul>
Gate re-opens while closing Gate does not learn new magnet positions.	<ul style="list-style-type: none"> <li>Check if closing photocell is misaligned with reflector (check photocell on "CLS ONLY" or "OPEN/CLS" input).</li> <li>Use jog LEFT/RIGHT buttons to learn new positions instead of using OPEN or CLOSE buttons.</li> </ul>



# MATRIX III LED TROUBLESHOOTING

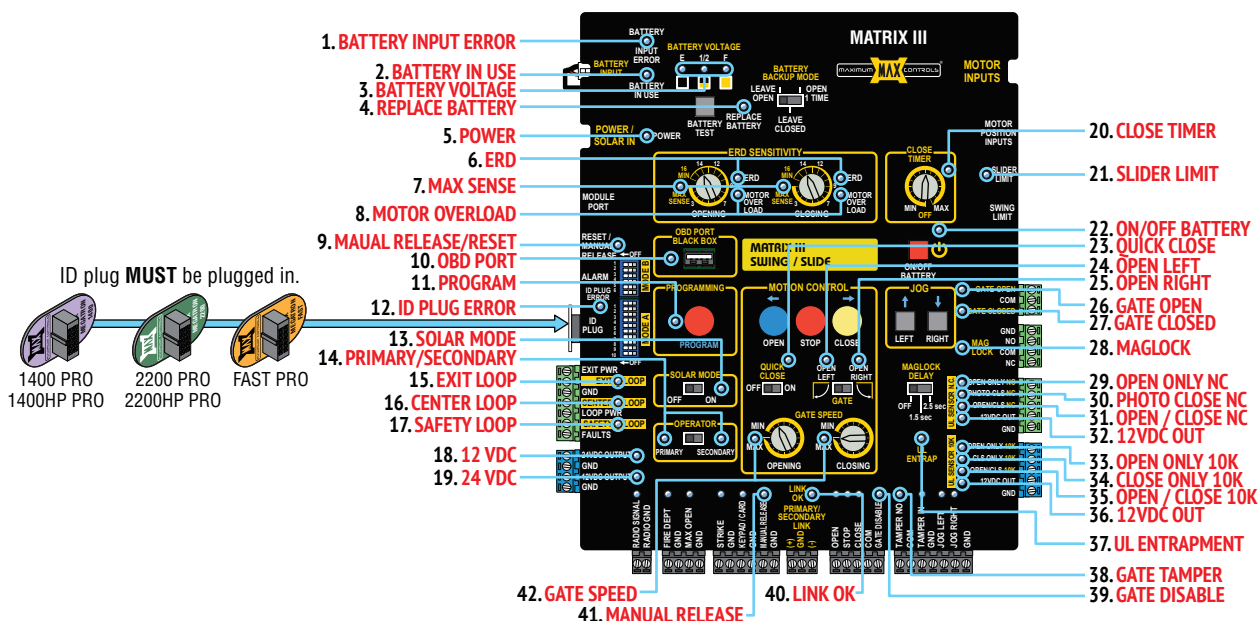

Matrix III LED Problem Condition	Normal LED	Solution(s) for Problem Condition
"BATTERY IN ERROR" LED is ON.	1	• "BATTERY Plug" not plugged in to "BATTERY IN" port.
"BATTERY IN USE" LED is ON	OFF 2	• AC power is lost, operator is in battery back-up mode. • Check if Toroid box AC POWER ON/OFF SWITCH is ON. • Measure power input DC voltage on Matrix 1 ("24V/GND" - 2-pin black connector), (expected reading 34 VDC if AC on, 25VDC if on battery back-up).
"BATTERY VOLTAGE (E 1/2 F)" LEDs, only "E" is ON.	OFF 3	• Battery is very LOW. Check if AC power ON/OFF switch is ON. If so, check AC power.
"REPLACE BATTERY" LED is ON.	OFF 4	• Battery needs to be replaced if BATTERY TEST fails and "REPLACE BATTERY" LED is ON.
"BATTERY IN USE" and "POWER" LED are FLASHING	OFF / ON 2 / 5	• Battery not plugged in to BATTERY INPUT port.
PRIMARY Matrix III "LINK OK" LED is OFF	ON 40	• Check if limit switch box is plugged into PRIMARY MATRIX III "SWING LIMIT" input.
SECONDARY Matrix III "LINK OK" LED is OFF	ON 40	• Check wiring between PRIMARY RS485 (+, -, gnd) and SECONDARY RS485 (+, -, gnd) terminals, connect [(+) to (+)], [(-) to (-)] and [GND to GND]. • Check if limit switch box is plugged into SECONDARY Matrix III "SWING LIMIT" input.
"UL Entrap" LED is ON	ON 37	• An entrapment event has occurred, check if an entrapment sensor was triggered (see if CLS ONLY, OPEN ONLY, or OPEN/CLS LEDs are on).
"ERD" LED is FLASHING	ON 6	• An ERD event may have occurred. Check for gate obstruction.
"CLS ONLY" LED is ON	OFF 30 / 34	• ERD sensitivity is too high for application. Re-adjust ERD setting, (see 10). • Sensor on CLS ONLY input (photocell or edge) may have detected an obstruction while closing gate.
"CLS ONLY" LED is flashing	OFF 30 / 34	• Photocell on CLS ONLY input is misaligned with reflector. • Sensor on CLS ONLY input (photocell or edge) may not be wired properly, (see 8). • Sensor is NOT a N.C. monitored sensor that is UL325 2018 compliant. • Sensor might need to be re-learned.
"OPEN ONLY" LED is ON	OFF 29 / 33	• Sensor on OPEN ONLY input (photocell or edge) may have detected an obstruction while cycling gate.
"OPEN ONLY" LED is FLASHING	OFF 29 / 33	• Photocell on OPEN ONLY input is misaligned with reflector. • Sensor on OPEN ONLY input (photocell or edge) may not be wired properly, (see 8). • Sensor is NOT a N.C. monitored sensor that is UL325 2018 compliant. • Sensor on OPEN ONLY is damaged or malfunctioning. • Sensor might need to be re-learned.
"MAX SENSE" LED is ON	OFF 7	• MOST sensitive setting for ERD entrapment detection. Select a less sensitive setting (recommend level 10 thru 16)
"MANUAL RELEASE/RESET" LED is ON OR "MANUAL RELEASE" LED is ON	OFF 9 / 41	• Not used for swing gates. DO NOT connect an external device to MANUAL RELEASE input.
"OBD PORT" LED is FLASHING	OFF 10	• Up to 8000 event history and error codes are being downloaded to connected flash drive. Up to 5 min.
"PROGRAM" LED is FLASHING	OFF 11	• Program button has been pressed and programming mode is active. Press button again to leave programming mode.


Table continued on next page

# MATRIX III LED CONTINUED

Matrix III LED Problem Condition	Normal LED	Solution(s) for Problem Condition
"ID PLUG" LED is FLASHING and board beeping	OFF <b>12</b>	<ul style="list-style-type: none"> <li>• Insert ID PLUG module that is tethered to chassis into "ID PLUG" connector.</li> </ul>
"SOLAR MODE" LED is ON	OFF <b>13</b>	<ul style="list-style-type: none"> <li>• Operator is being powered by solar panel ONLY.</li> </ul>
"OPEN/CLS" LED is ON	OFF <b>31</b>	<ul style="list-style-type: none"> <li>• Sensor on OPEN/CLS input (photocell or edge) may have detected an obstruction while opening or closing gate.</li> </ul>
"OPEN/CLS" LED is FLASHING		<ul style="list-style-type: none"> <li>• Photocell on OPEN/CLS input is misaligned with reflector.</li> <li>• Sensor on OPEN/CLS input (photocell or edge) may not be wired properly, (see <b>8</b>).</li> <li>• Sensor is NOT a N.C. monitored sensor that is UL325 2016 compliant.</li> <li>• Sensor on OPEN/CLS is damaged or malfunctioning.</li> <li>• Sensor might need to be re-learned.</li> </ul>
"MOTOR OVERLOAD" LED is ON	OFF <b>8</b>	<ul style="list-style-type: none"> <li>• Check if gate is binding against catch post or bracket in opened or closed position.</li> <li>• Check if gate moves manually with low resistance throughout its full range of motion.</li> <li>• Check if hinges are operational and well greased.</li> <li>• Check if operator is positioned properly relative to the gate hinge, (see <b>1</b>).</li> <li>• Gate may be too heavy for operator (check manual for maximum gate weight for your model operator).</li> </ul>
"EXIT" LOOP LED is FLASHING or constantly ON	OFF <b>15</b>	<ul style="list-style-type: none"> <li>• Loop fault condition: Check if EXIT loop wires are connected into to loop input connector properly.</li> <li>• Check if loop detector is inserted properly in Loop Rack slot.</li> <li>• Set unique loop detector frequency for each loop detector used.</li> <li>• Loop Detector might be defective. Replace defective loop detector.</li> <li>NOTE: RENO loop detector LED's flash as default, but function normally (ignore the flashing).</li> </ul>
"SAFETY" LOOP LED is FLASHING or constantly ON	OFF <b>17</b>	<ul style="list-style-type: none"> <li>• Loop fault condition: check if SAFETY loop wires are connected into to loop input connector properly.</li> <li>• Check if SAFETY loops are wired in series.</li> <li>• Check if loop detector is inserted properly in Loop Rack slot.</li> <li>• Set unique loop detector frequency for each loop detector used.</li> <li>• Loop Detector might be defective. Replace defective loop detector.</li> <li>NOTE: RENO loop detector LED's flash as default, but function normally (ignore the flashing).</li> </ul>
"CENTER" LOOP LED is FLASHING or constantly ON	OFF <b>16</b>	<ul style="list-style-type: none"> <li>• Loop fault condition: check if CENTER loop wires are connected into to loop input connector properly.</li> <li>• Check if CENTER loops are wired in series.</li> <li>• Check if loop detector is inserted properly in Loop Rack slot.</li> <li>• Set unique loop detector frequency for each loop detector used.</li> <li>• Loop Detector might be defective. Replace defective loop detector.</li> <li>NOTE: RENO loop detector LED's flash as default, but function normally (ignore the flashing).</li> </ul>
"GATE DISABLE" LED is ON	OFF <b>35</b>	<ul style="list-style-type: none"> <li>• Check if an external device is triggering GATE DISABLE input. Disconnect devices individually to determine possible false triggering of GATE DISABLE.</li> </ul>
"MAG LOCK" LED is FLASHING	OFF <b>28</b>	<ul style="list-style-type: none"> <li>• Maglock power is lost. Check if maglock power transformer is wired properly or needs to be replaced.</li> </ul>
"GATE TAMPER" LED is FLASHING	OFF <b>34</b>	<ul style="list-style-type: none"> <li>• Switch is set to delay but no maglock is connected. Set switch to OFF</li> <li>• Gate was manually moved off of its CLOSED position causing Tamper Relay to trigger for few seconds.</li> </ul>
"12VDC" LED is OFF. "24VDC" LED is OFF	ON <b>18 or 19</b>	<ul style="list-style-type: none"> <li>• Check for a short in wiring to connected device. DO NOT power external keypads or telephone entry to this port (only use for radio receiver / photocell).</li> </ul>
"SLIDER LIMIT" LED is ON	OFF <b>21</b>	<ul style="list-style-type: none"> <li>• Only ON if factory installed plug is plugged in. Re-install plug into SWING LIMIT connection for swing gate operator.</li> </ul>
"ON/OFF BATTERY" LED is OFF	ON <b>22</b>	<ul style="list-style-type: none"> <li>• Batteries are turned OFF. Turn toroid box AC POWER switch ON and batteries automatically turn ON.</li> </ul>
"QUICK CLOSE" LED is ON	OFF <b>23</b>	<ul style="list-style-type: none"> <li>• Quick Close feature is turned ON. If this feature is not desired, turn quick close OFF.</li> </ul>
"GATE SPEED" LEDs are ON but gate moves slowly.	ON <b>42</b>	<ul style="list-style-type: none"> <li>• Check if OPEN and CLOSE Limits have been learned. Refer to "Learn Gate Positions" (see <b>9</b>).</li> <li>• ONLY Maximum settings will turn LEDs ON. All other settings, LEDs remain OFF.</li> </ul>


## UL325-2018

### NORMALLY CLOSED (NC) Wiring to E3K Photocell

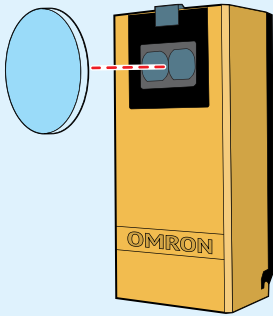

#### OPENING Direction Photocell (Reflector)



UL 1818 Label on packaging

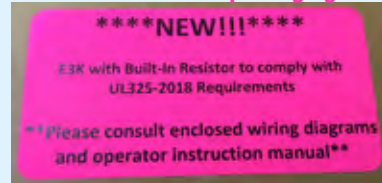

NOTE: To meet the UL 325 2018 standard, Type B1 Non-Contact sensor entrapment protection device MUST be MONITORED by the gate operator.

#### Installation Steps:

1. Set switch to "LIGHT ON"
2. Wire 12V power to photocell
3. Wire **OPEN ONLY NC** to photocell **N02**  
Wire **GND** to photocell **C2**
4. Align photocell to reflector
5. Adjust sensitivity

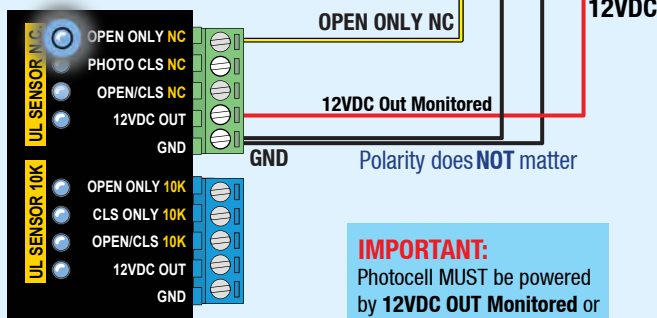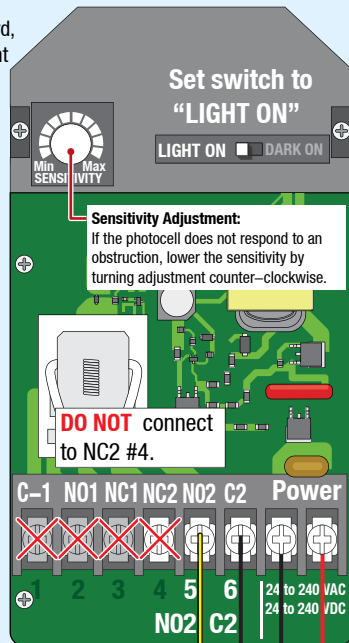


**IMPORTANT:**  
Photocell MUST be powered by 12VDC OUT Monitored or it will NOT be MONITORED.

For 10K Resistor E3K Photocell wiring see next page


## UL325-2018

### NORMALLY CLOSED (NC) Wiring to E3K Photocell

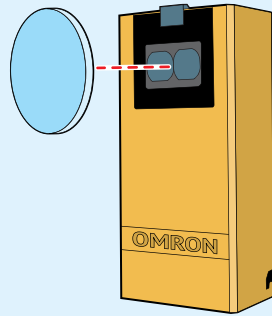

#### CLOSING Direction Photocell (Reflector)



UL 1818 Label on packaging

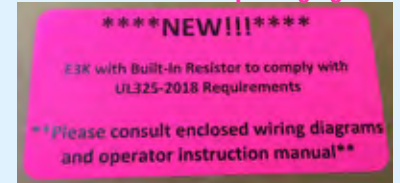

NOTE: To meet the UL 325 2018 standard, Type B1 Non-Contact sensor entrapment protection device MUST be MONITORED by the gate operator.

#### Installation Steps:

1. Set switch to "LIGHT ON"
2. Wire 12V power to photocell
3. Wire **PHOTO CLS NC** to photocell **N02**  
Wire **GND** to photocell **C2**
4. Align photocell to reflector
5. Adjust sensitivity

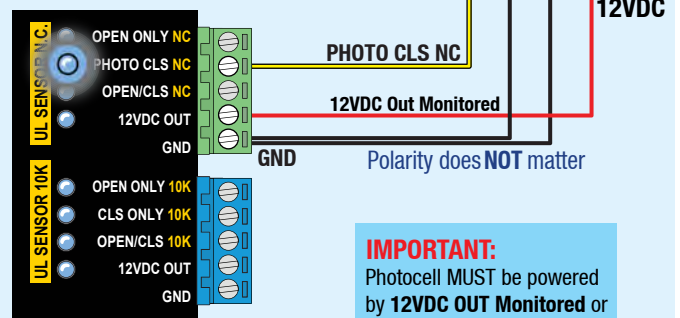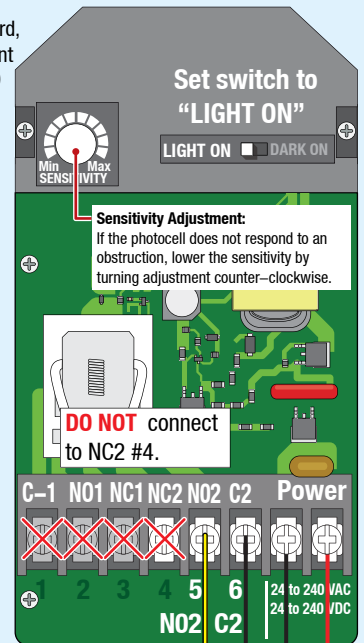


**IMPORTANT:**  
Photocell MUST be powered by 12VDC OUT Monitored or it will NOT be MONITORED.

For 10K Resistor E3K Photocell wiring see next page

## UL325-2016

### NORMALLY CLOSED (NC) Wiring to E3K Photocell


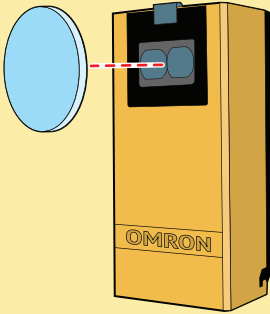


#### OPENING Direction Photocell (Reflector)

NOTE: To meet the UL 325 2016 standard, Type B1 Non-Contact sensor entrapment protection device MUST be MONITORED by the gate operator.

#### Installation Steps:

1. Set switch to "LIGHT ON"
2. Wire 12V power to photocell
3. Wire **OPEN ONLY NC** to photocell **NO1**  
Wire **GND** to photocell **C-1**
4. Align photocell to reflector
5. Adjust sensitivity

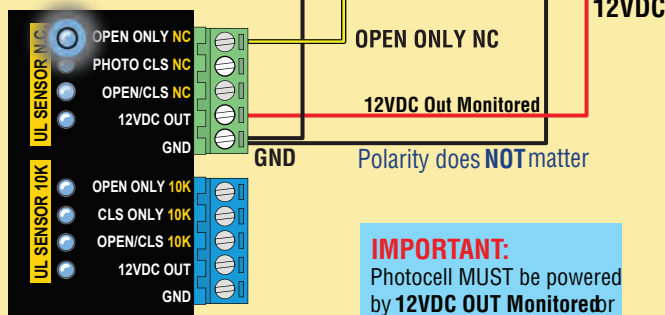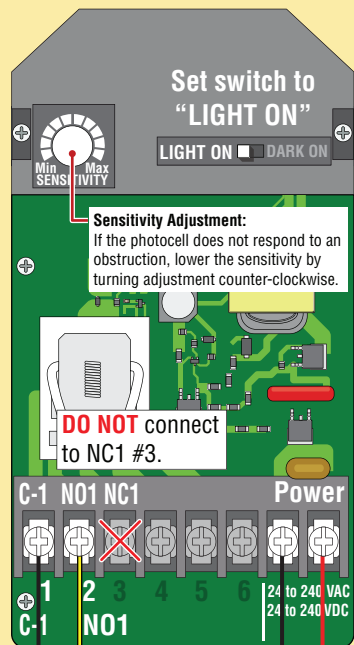


**IMPORTANT:**  
Photocell MUST be powered by 12VDC OUT Monitored or it will NOT be MONITORED.

**NOTE:** DO NOT use 10K Resistor included with photocell.

## UL325-2016

### NORMALLY CLOSED (NC) Wiring to E3K Photocell


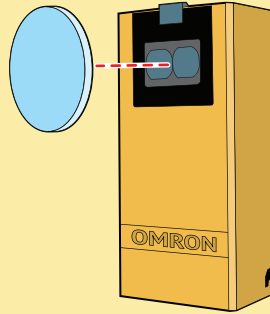


#### CLOSING Direction Photocell (Reflector)

NOTE: To meet the UL 325 2016 standard, Type B1 Non-Contact sensor entrapment protection device MUST be MONITORED by the gate operator.

#### Installation Steps:

1. Set switch to "LIGHT ON"
2. Wire 12V power to photocell
3. Wire **PHOTO CLS NC** to photocell **NO1**  
Wire **GND** to photocell **C-1**
4. Align photocell to reflector
5. Adjust sensitivity

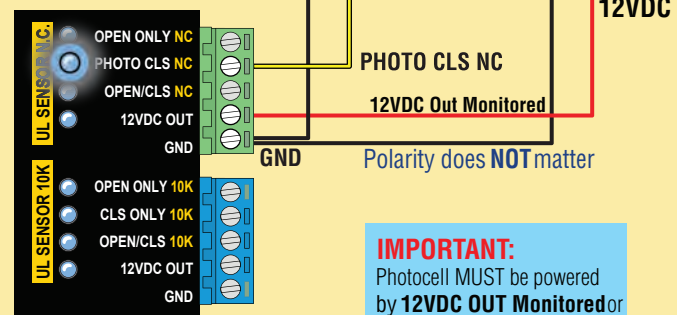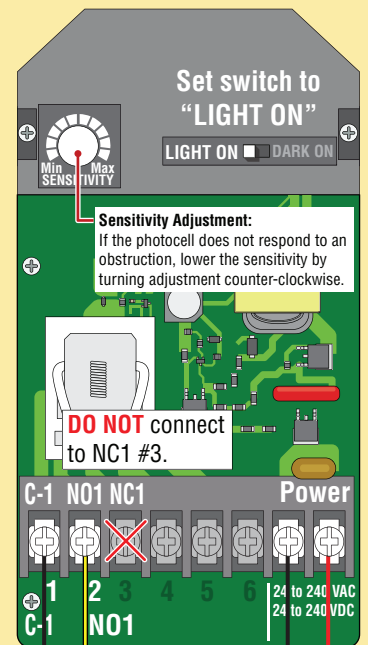

**IMPORTANT:**  
Photocell MUST be powered by 12VDC OUT Monitored or it will NOT be MONITORED.



**NOTE:** DO NOT use 10K Resistor included with photocell.

## UL325-2018

### 10K Resistor wiring to E3K Photocell (Use ONLY For OPENING Direction on 10K Port)


#### Installation Steps:

1. Set switch to "LIGHT ON"
2. Wire 12V power to photocell
3. Wire **OPEN ONLY 10K** to photocell **NC1**  
Wire **GND** to photocell **C-1**
4. Align photocell to reflector
5. Adjust sensitivity

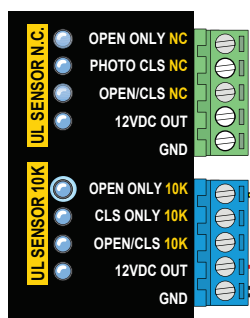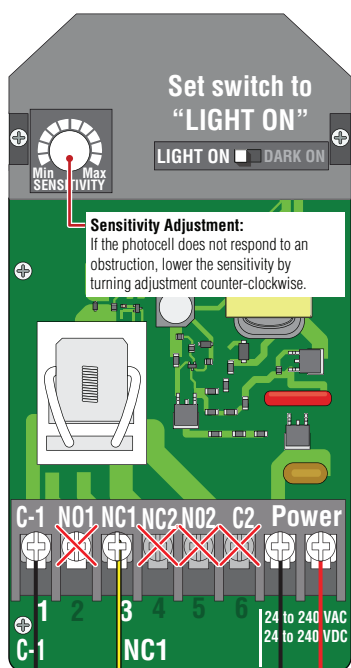


Polarity does **NOT** matter

#### OPENING Direction Photocell (Reflector)

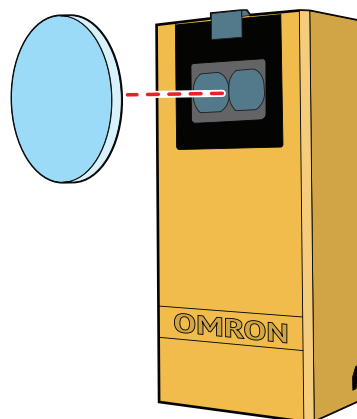

#### UL 2018 Label on packaging

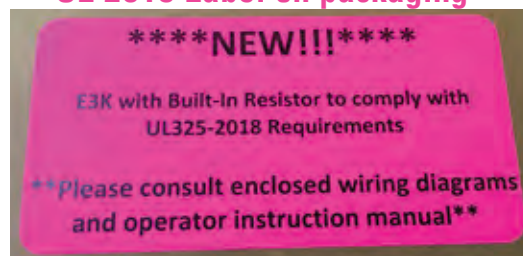

NOTE: To meet the UL 325 2018 standard, Type B1 Non-Contact sensor entrapment protection device **MUST** be MONITORED by the gate operator.



# EMX WEL-200 Wiring Guide FOR MAX PRO SERIES

OPENING  
TRANSMITTER


WEL-200T

RECEIVER  
WEL-200R


CLOSING  
TRANSMITTER

WEL-200T




**1** WIRE WEL-200R  
OPEN & CLOSE RELAYS  
TO MATRIX III  
10K SENSOR INPUTS

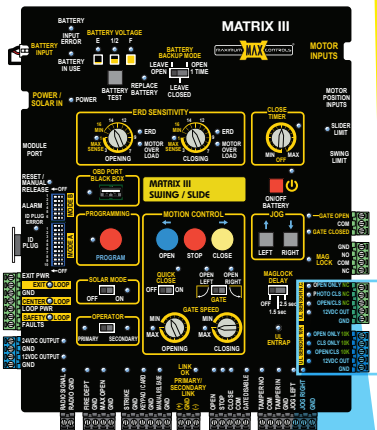

EMX WEL-200R

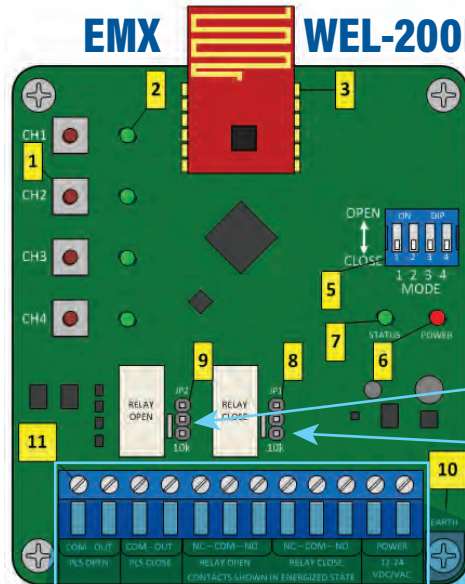

**2** INSERT BOTH JUMPERS  
IN 10K POSITION

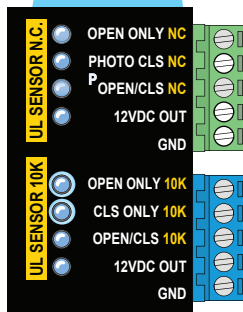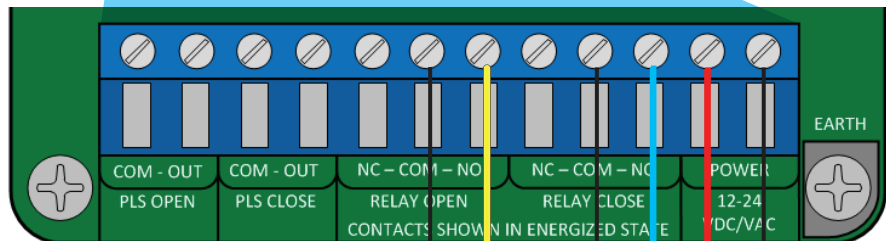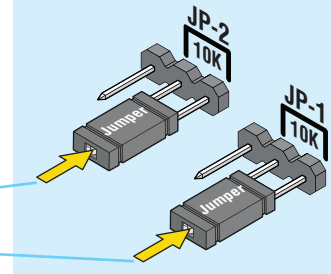


WIRE TO 'NO' OF RELAY OPEN

WIRE TO 'NO' OF RELAY CLOSE

Polarity does  
**NOT** matter  
for power

Connecting is a two step process. First, on the receiver, press and hold the channel assignment switch until the green status LED begins rapidly flashing, then release; this will clear any existing assignment for that particular channel. Hold down the connection switch on the transmitter. If it is not currently connected to a receiver, it will begin flashing rapidly until successfully connecting. Detailed instructions are given below.

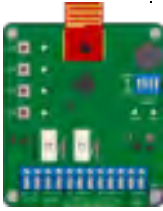

**NOTE:** If there are no existing connections, the **receiver's** status LED will blink rapidly while it is finding a clean operating frequency (this can last a few seconds)  
After initialization, the system status LED will flash on/off once every 2 seconds


## STEPS

**1**



Set each channel to the desired OPEN/CLOSE direction function using the MODE dip switch. **If a DIP switch is in the OPEN position, then that channel will trigger the OPEN Relay on receiver. Otherwise, it will trigger the CLOSE Relay.**


**2**

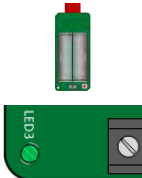

Install 2 AA Lithium batteries in the **WEL-200T (transmitter)**


The green LED on the transmitter will quickly flash 2x every two seconds

**3**




Install a properly terminated edge to the **transmitter** (8.2k or 10k termination)

**4**

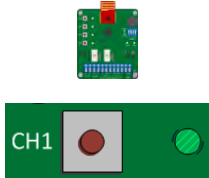

On the **receiver**, hold down the desired channel assignment switch until all four channel LEDs activate and the system status LED begins flashing rapidly, then release the switch.

**5**

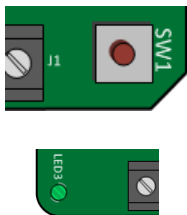


On the **transmitter**, hold down the connection switch (next to the terminal block)

The LED on the **transmitter** will begin flashing rapidly after ~4 seconds

Upon successful connection, the LED will flash once every two seconds. If the **transmitter** fails to connect, it will return to its initial state, with the LED flashing twice every two seconds. If this occurs, repeat steps above.

## TESTING

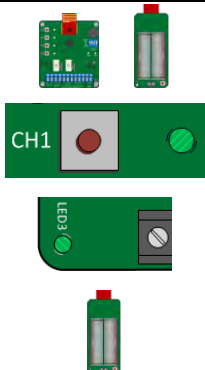

Without activating the edge, observe the channel status LED, it should be OFF.

When the edge is activated, the **receiver** channel status LED will turn on and the corresponding OPEN/CLOSE direction output will activate. The **transmitter** status LED will blink once every *second* when the edge is activated. If the channel does not exhibit this behavior, double check the edge wiring/termination and transmitter batteries.

## FACTORY RESET

Power down receiver. Hold channels 1 and 4 down simultaneously while powering receiver back up.




# EMX IRB-RET WIRING

## Installation Steps:


1. Set DIP-switches
2. Remove jumper JP-5
3. Insert jumper on 4W JP-6
4. Wire 12V power to photocell (VRX)
5. Wire DSP board **PHOTO CLS NC** to photocell **NC (Energized)**  
Wire DSP board **GND** to photocell **COM (Energized)**
6. Align photocell to reflector
7. Adjust sensitivity

**IMPORTANT:** Photocell **MUST** be powered by **12VDC OUT** or it will **NOT** be **MONITORED**.


NOTE: To meet the UL 325 2018 standard, Type B1 Non-Contact sensor entrapment protection device **MUST** be **MONITORED** by the gate operator.

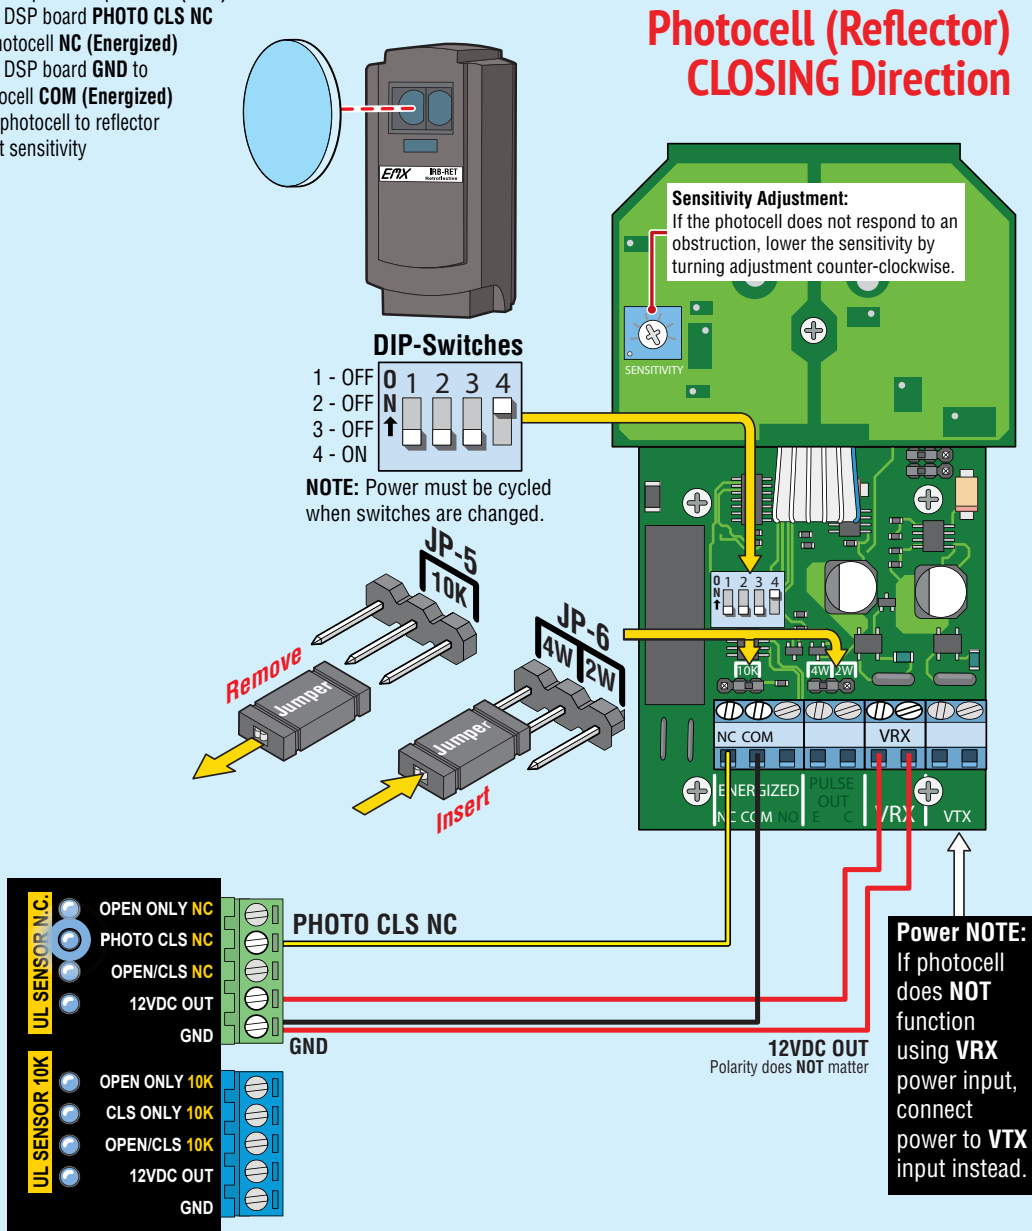


## Photocell (Thru-Beam) CLOSING Direction Single Gate Operator

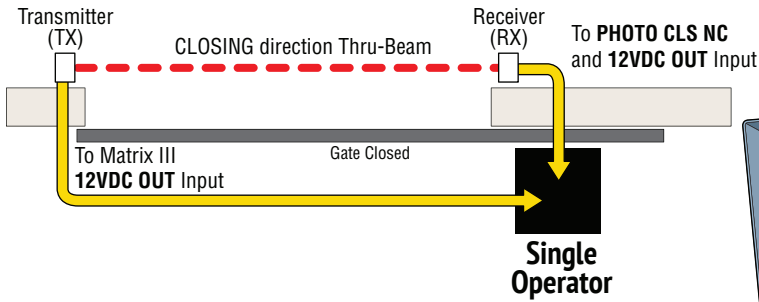

**IMPORTANT:** Photocells **MUST** be in alignment or fault will occur. Green LED will remain **ON** receiver when in proper alignment.

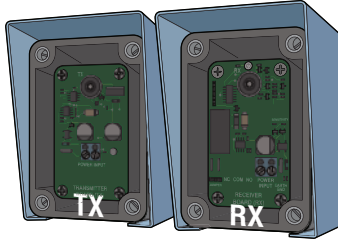

### Transmitter (TX)

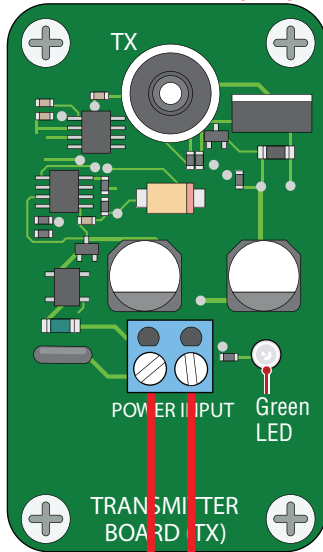

### Installation Steps:

1. Set DIP-switches on receiver.
2. Install jumper on receiver.
3. Wire Matrix III 12VDC OUT power to receiver.
4. Wire PHOTO CLS NC to receiver photocell NC. Wire Matrix III GND to receiver photocell COM.
5. Wire 12V Matrix III power to transmitter.
6. Align photocells.
7. Adjust sensitivity on receiver.


### Sensitivity Adjustment:

If the photocell does not respond to an obstruction, lower the sensitivity by turning adjustment counter-clockwise.

### DIP-switches:


1, 2, 3 are OFF. Switch 4 is ON. If trouble occurs, try turning switch 4 OFF.  
**NOTE:** Power must be cycled when switches are changed.

Jumper **MUST** be on Com-NC.

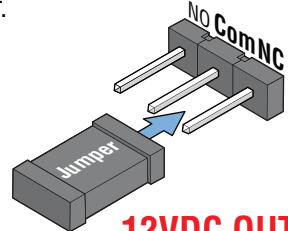


**12VDC OUT**  
Polarity does **NOT** matter

### Receiver (RX)

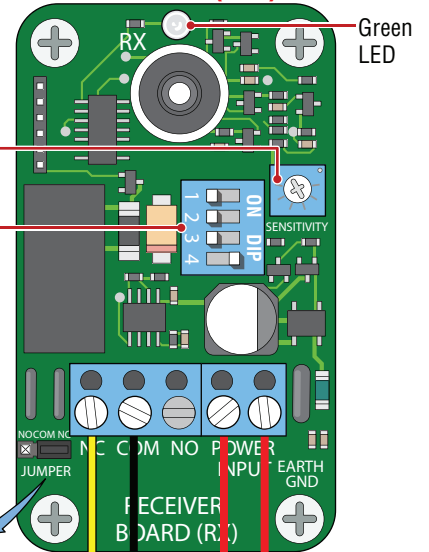


**IMPORTANT:** Photocells **MUST** be powered by Matrix III or they will **NOT** be **MONITORED**.

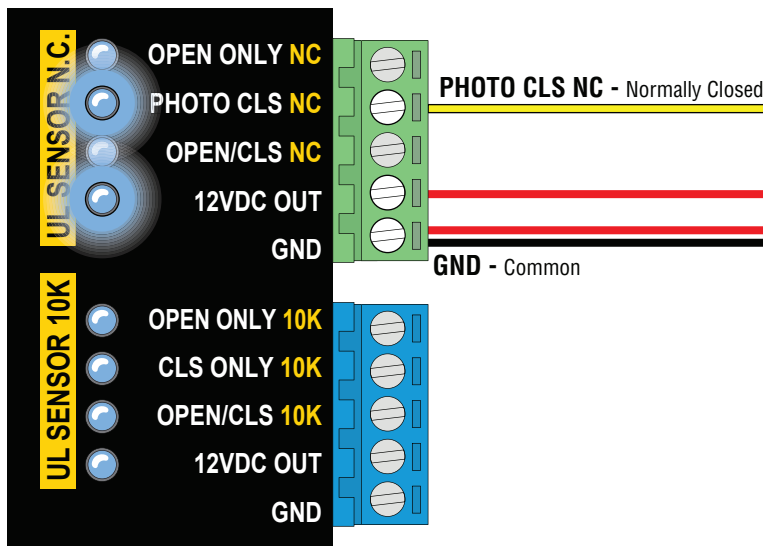


**NOTE:** To meet the UL 325 2018 standard, Type B1 Non-Contact sensor entrapment protection device **MUST** be **MONITORED** by the gate operator.

## Photocell (Thru-Beam) CLOSING Direction Dual Gate Operators

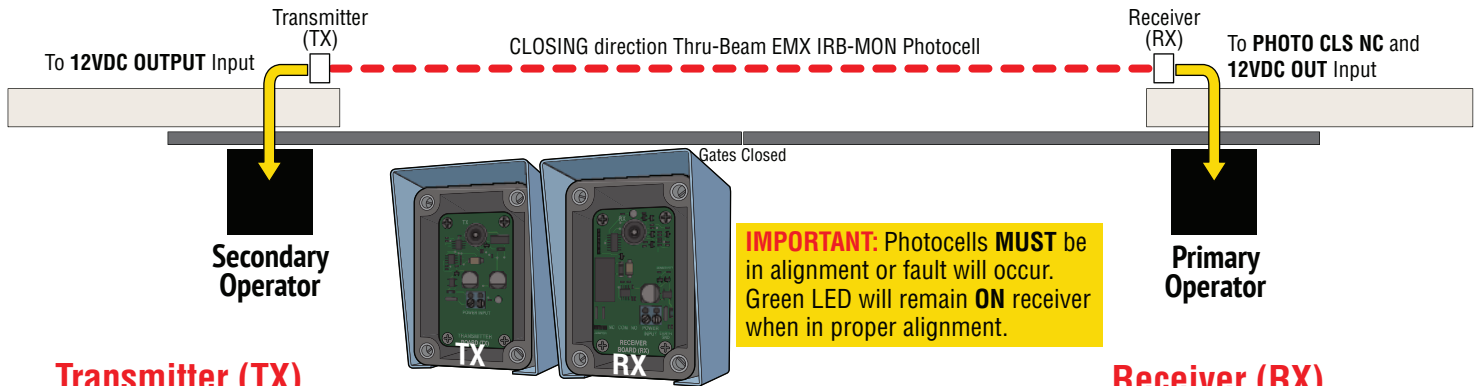


### Transmitter (TX)

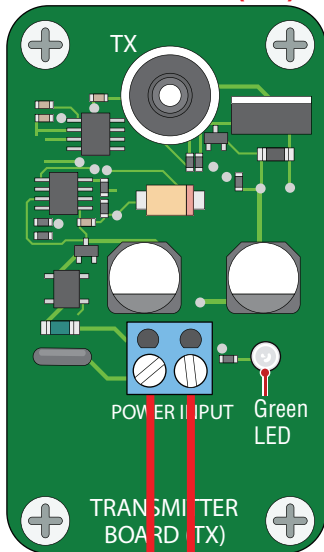

### Installation Steps:

1. Set DIP-switches on receiver.
2. Install jumper on receiver.
3. Wire **12V** Primary Matrix III power to **receiver**.
4. Wire Primary Matrix III **PHOTO CLS NC** to receiver photocell **NC**. Wire Primary Matrix III **GND** to receiver photocell **COM**.
5. Wire **12V** Secondary Matrix III power to **transmitter** as shown.
6. Align photocells.
7. Adjust sensitivity on receiver.


### Receiver (RX)

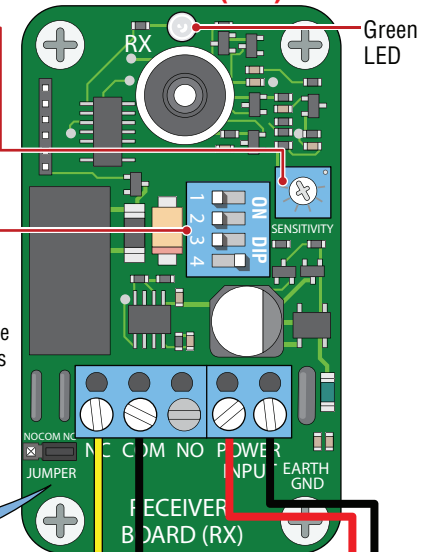

**Sensitivity Adjustment:**  
If the IRB-MON does not respond to an obstruction, lower the sensitivity by turning adjustment counter-clockwise.


**DIP-switches:**  
1, 2, 3 are **OFF**. Switch 4 is **ON**.  
If trouble occurs, try turning switch 4 **OFF**.  
**NOTE:** Power must be cycled when switches are changed.

Jumper **MUST** be on Com-NC.

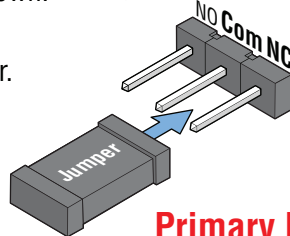


**12VDC OUTPUT**  
Polarity does **NOT** matter

### Secondary Matrix III

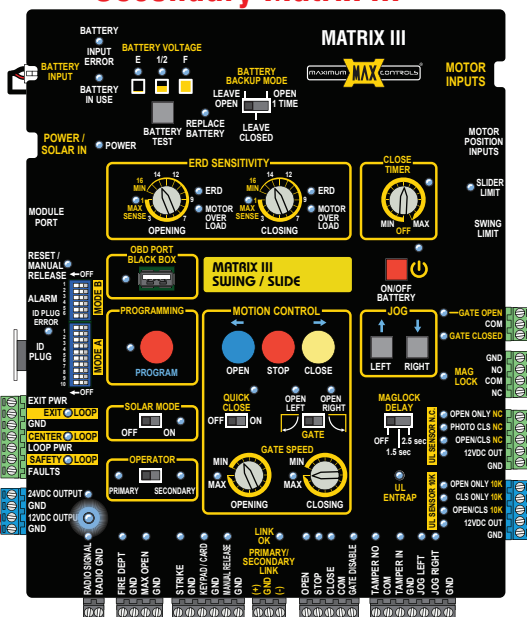

### Primary Matrix III

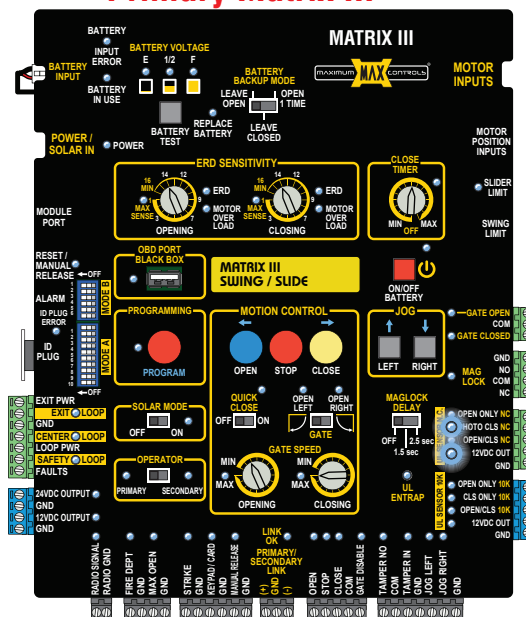

**12VDC OUT**  
Polarity does **NOT** matter

**NOTE:** To meet the UL 325 2018 standard, Type B1 Non-Contact sensor entrapment protection device **MUST** be **MONITORED** by the gate operator.

**IMPORTANT:** Photocell **MUST** be powered by **PRIMARY** Matrix III or they will **NOT** be **MONITORED**.



# Transmitter Solutions iGaze RE Wireless Edge Transceiver Wiring Diagram



**TRANSMITTER  
TCOO900**



**RECEIVER  
RCOO900**

## QUICK START GUIDE

BELOW IS THE MOST COMMON INSTALLATION

**DIP SWITCH LEGEND:**  
**DIP SWITCH= RED**

**RCOO900** - 10k $\Omega$  output on both  
(receiver) relay 1 and relay 2.


OFF ON  
Test Polarity ☐ ☐ 1 2  
Buzzer OFF ☐ ☐ 3 4  
Frequency ☐ ☐ 5 6  
Out1 10k2 ☐ ☐ \*  
Out2 10k2 ☐ ☐ \*

Dip Switch

**RCOO900**

Output relay  
0.5A a 42.4Vdc  
1A a 30Vdc


Buzzer

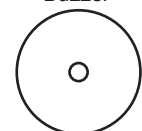



Programming/  
Reset Key




**DIPSWITCHES  
5 & 6  
MUST BE  
ON FOR  
10K PORT**

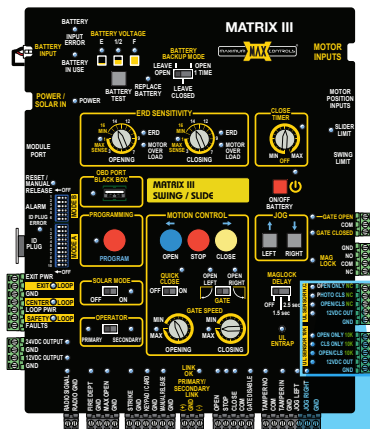

WIRE TO 'NO' OF RELAY OPEN  
WIRE TO 'NO' OF RELAY CLOSE

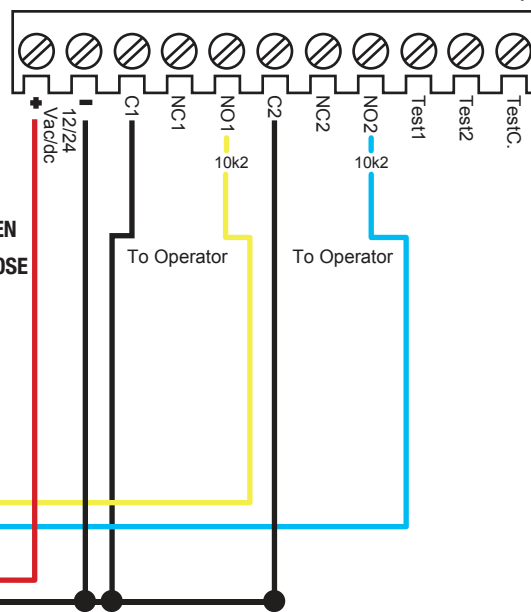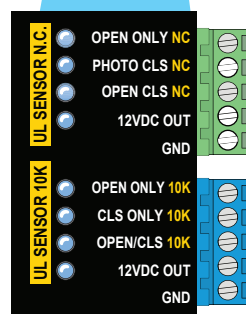


BELOW IS THE MOST COMMON INSTALLATION

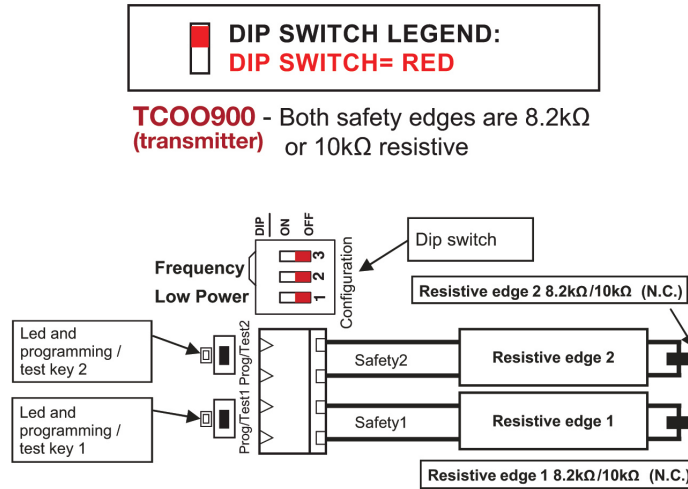

MOUNT THE TCOO900 AS HIGH AS POSSIBLE AND IN SUCH WAY AS THERE ARE NO OBSTACLES IN THE DIRECTION OF THE RCOO900 AND IN SUCH A WAY AS THE MAXIMUM DISTANCE BETWEEN THE TWO DEVICES IS LESS THAN 60 FEET (MAX 20 METERS / 60 FEET).

**WARNING:** install the TCOO900 at a minimum height of 8" from the ground. Keep the installation area clean of debris which can effect the normal operation of the system.


**NOTE:** Transmitter Solutions is not responsible for any damage caused by an improper, incorrect, or unintended use of the product.

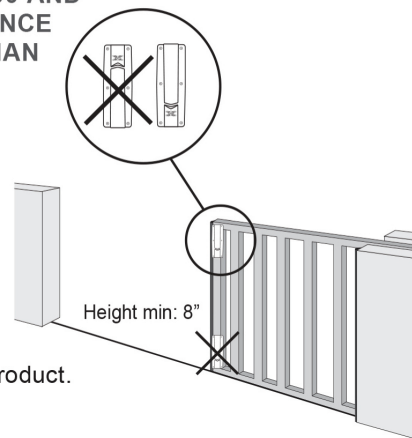

**For pairing Transmitter and Receiver,  
please refer to the Transmitter Solutions manual.**



# WIRING OVERVIEW

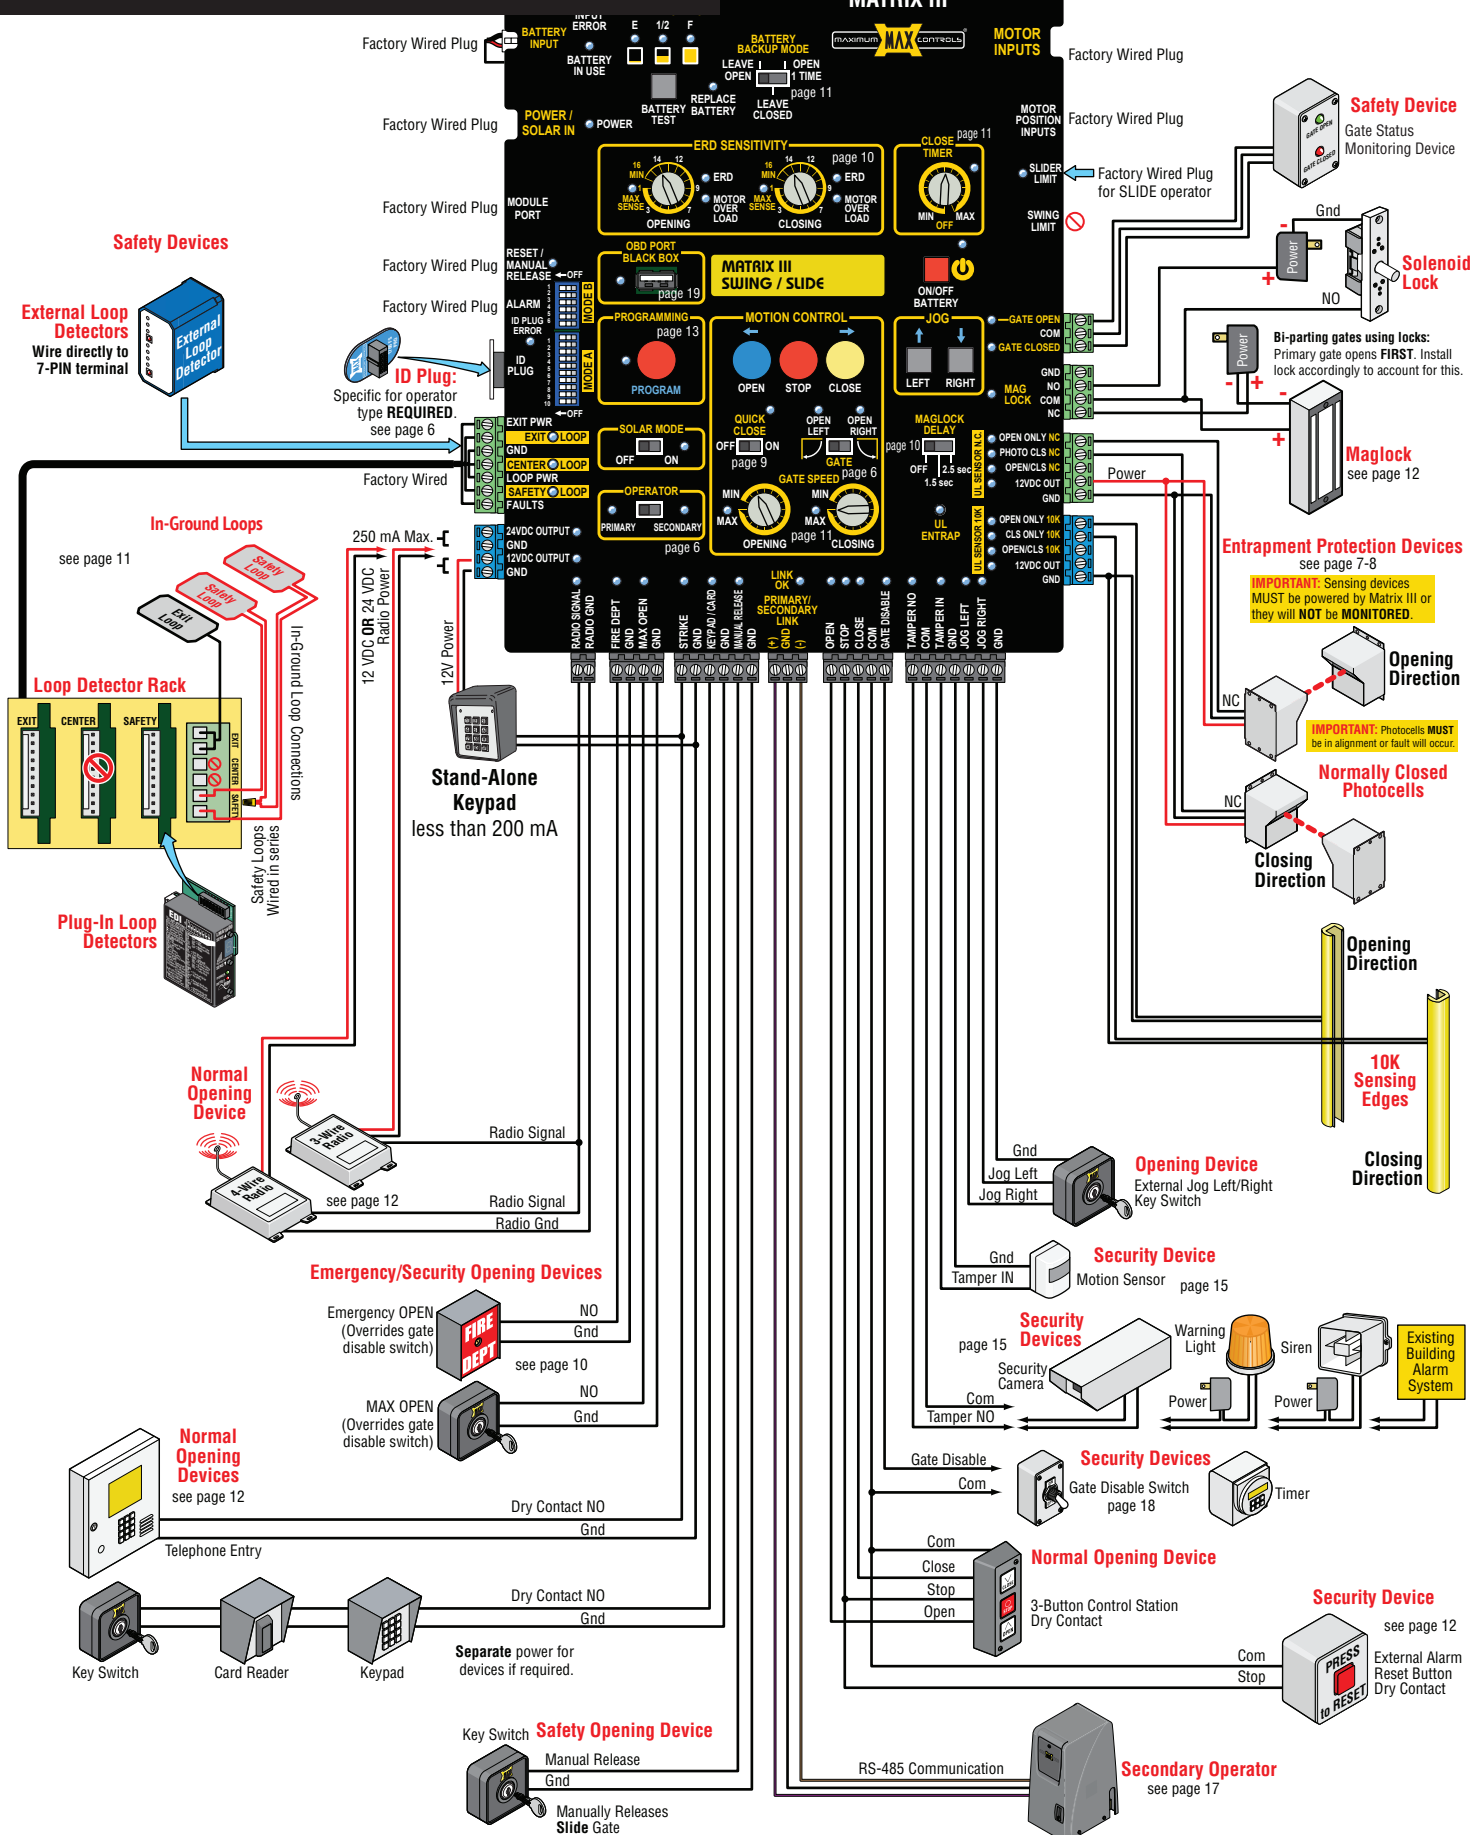

# SOLAR PACK QUICK INSTALLATION GUIDE

Max Solar Pack  
Available for  
MEGA 1400 HP PRO  
MEGA 2200 HP PRO  
SWING OPERATORS



Heavy Duty Sheet Metal  
Gold Zinc Powder-Coated

Handle

Solar  
Regulator  
24V, 10A  
(Morning  
Star)

1 Year Warranty

ON/OFF  
Switch

Fuse  
30A



AGM Battery  
(Absorbant Glass Material)  
24V, 35A / Hr  
2 x 12V Batteries  
YUASA


Power Cable

Power IN/Solar IN  
on MATRIX III




UL325  
Compliant  
UL1741  
Compliant

# SOLAR PACK QUICK INSTALLATION GUIDE

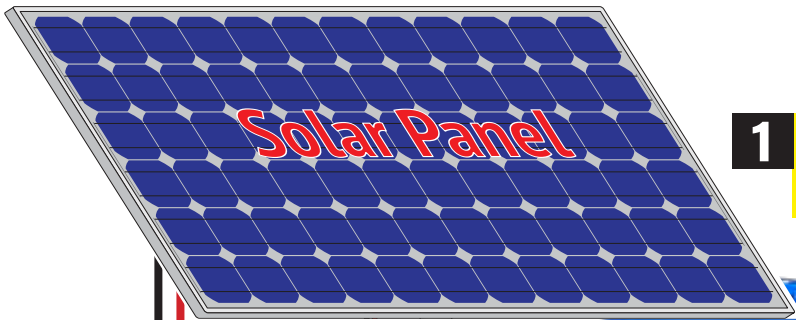

**1** Wire solar panel terminals to solar regulator input  
**Caution:** polarity matters


Choose the proper solar panel size according to chart in **step 10** below

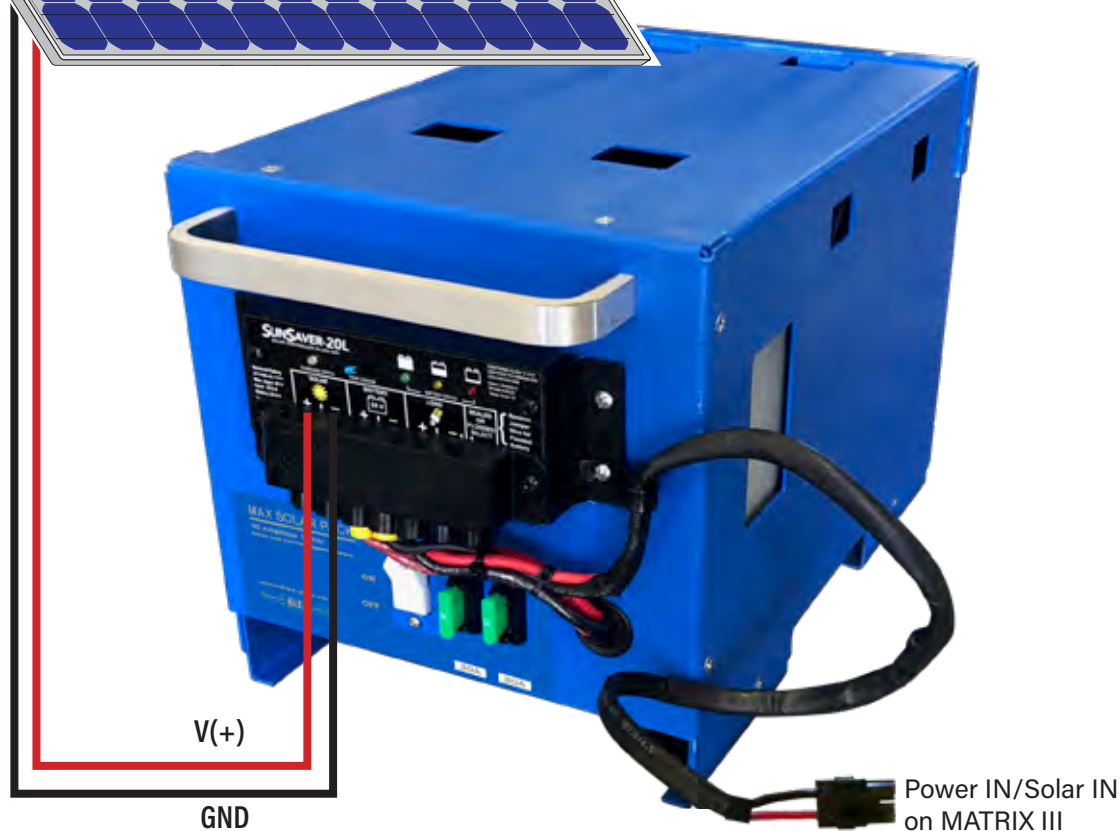

**2** Insert the included fuse into the empty fuse slot (no polarity)



**3** Turn "ON" the white switch located to the left of the fuses

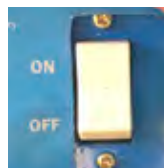

**4** Leave the solar mode switch "OFF" and follow the included installation manual for standard installation and setup of limit switches

**DO NOT TURN ON THE SOLAR MODE SWITCH UNTIL INSTALLATION IS COMPLETED**

**ON Matrix III**



# SOLAR PACK QUICK INSTALLATION GUIDE


## 5 Turn SOLAR MODE ON

Operator will go into low power mode 30 seconds after gate stops moving and loop detectors are not active. While in low power mode:


- All LEDs will turn off except power LED and solar mode LED (blinking)
- 12V DC OUTPUT and 12V DC OUT on 10K port will remain ON, all other power outputs will turn OFF
- EXIT LOOP detector remains ON, center & safety loop detectors are turned OFF.

## 6 Select low power radio RECEIVER

Power radio receiver using 12V DC OUTPUT  
In low power mode, 12V DC OUTPUT is left ON

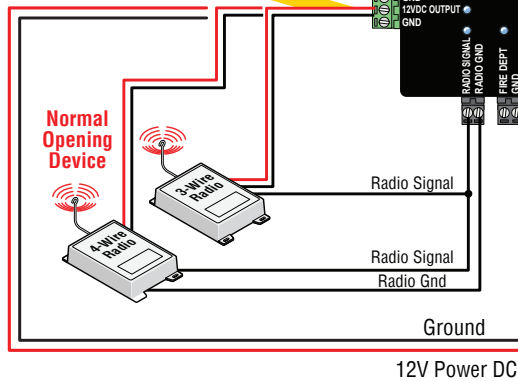

## 7 Select a low power keypad

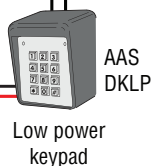



## 8 Select Low Power Loop Detectors

Recommended: Plug-In Loop Detectors  
EDI LMA1800-LP

**NOTE:** While in low power mode, **EXIT LOOP** detector remains **ON**, **CENTER** & **SAFETY LOOP** detectors are turned **OFF**


## 9 OPTIONAL

Remove local 7A/Hr batteries from operator and TURN ON DIP Switch MODE A -1

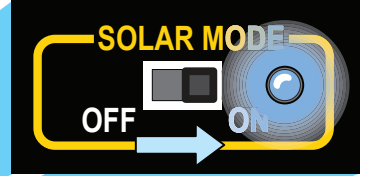
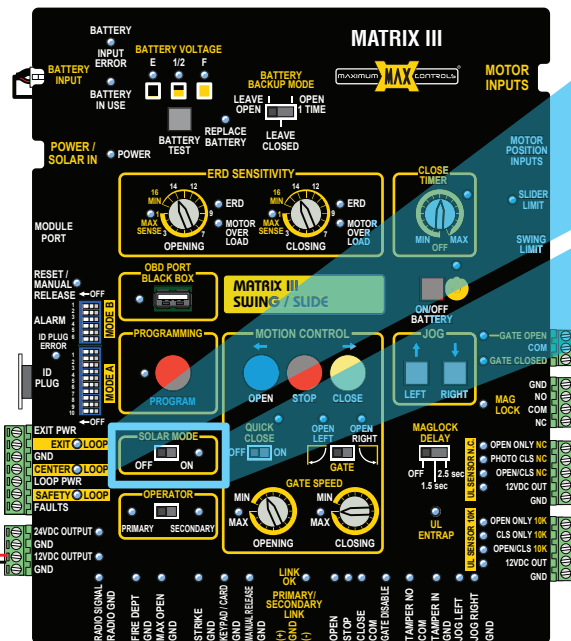


Turn SOLAR MODE ON

In-Ground Loops

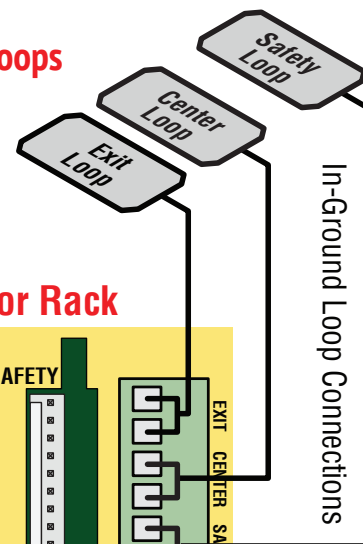


Loop Detector Rack

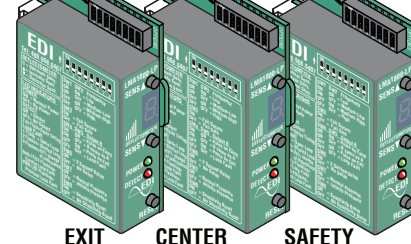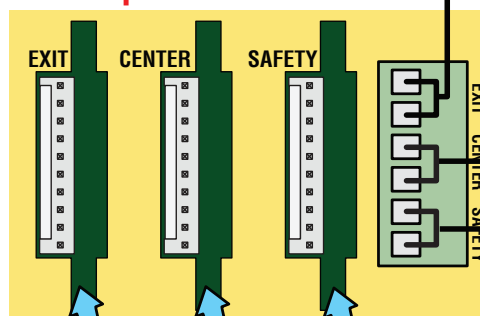

# SOLAR PACK QUICK INSTALLATION GUIDE

## 10 Select proper solar panel

SWING, PAD MOUNT, LIGHT GATE							
MEGATRON PRO		GATE SOLAR CYCLES PER DAY with built-in 36A/Hr battery					
PANEL SIZE	Total System Current Draw (mA)	ZONE 1 (6 Hrs Sunlight/Day)		ZONE 2 (4 Hrs Sunlight/Day)		ZONE 3 (2 Hrs Sunlight/Day)	
		Cycles/day w/1 rainy day	Cycles/day w/10 rainy days	Cycles/day w/1 rainy day	Cycles/day w/10 rainy days	Cycles/day w/1 rainy day	Cycles/day w/10 rainy days
60 W	26	726	137	697	108	669	80
	50	716	127	686	97	657	68
	100	695	106	664	75	632	43
	200	655	65	618	29	582	-7
	250	634	45	595	6	557	-32
85 W	26	760	171	720	131	680	91
	50	750	161	709	120	668	79
	100	730	140	686	97	643	54
	200	689	100	641	52	593	4
	250	668	79	618	29	568	-21
120 W	26	808	218	752	163	696	107
	50	798	209	741	152	684	95
	100	777	188	718	129	659	70
	200	736	147	673	84	609	20
	250	716	127	650	61	584	-5
200 W	26	917	328	825	235	732	143
	50	907	318	814	225	720	131
	100	886	297	791	202	695	106
	200	845	256	745	156	645	56
	250	825	236	723	134	620	31

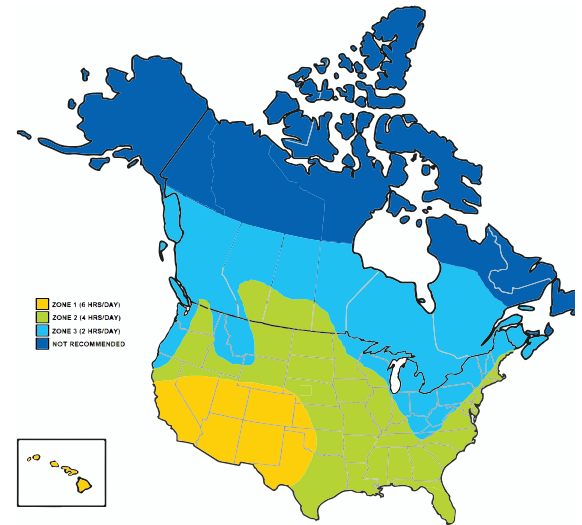

The map and daily cycle rate shown are approximations based upon the average solar radiation and the temperature effects on batteries in the given regions. Local geography and weather conditions may require additional solar panels.


USE LOW POWER accessories in order to minimize power draw. Each additional accessory draws power affecting the daily cycle rate.

SWING, PAD MOUNT, HEAVY GATE							
MEGATRON PRO		GATE SOLAR CYCLES PER DAY with built-in 36A/Hr battery					
PANEL SIZE	Total System Current Draw (mA)	ZONE 1 (6 Hrs Sunlight/Day)		ZONE 2 (4 Hrs Sunlight/Day)		ZONE 3 (2 Hrs Sunlight/Day)	
		Cycles/day w/1 rainy day	Cycles/day w/10 rainy days	Cycles/day w/1 rainy day	Cycles/day w/10 rainy days	Cycles/day w/1 rainy day	Cycles/day w/10 rainy days
60 W	26	454	85	436	68	418	50
	50	447	79	429	61	411	42
	100	435	66	415	47	395	27
	200	409	41	386	18	364	-5
	250	396	28	372	4	348	-20
85 W	26	475	107	450	82	425	57
	50	469	101	443	75	418	49
	100	456	88	429	61	402	34
	200	430	62	401	32	371	3
	250	418	49	386	18	355	-13
120 W	26	505	137	470	102	435	67
	50	499	130	463	95	428	59
	100	486	118	449	81	412	44
	200	460	92	420	52	381	13
	250	447	79	406	38	365	-3
200 W	26	573	205	515	147	458	90
	50	567	199	509	140	450	82
	100	554	186	494	126	435	66
	200	528	160	466	98	403	35
	250	516	147	452	84	388	20




# MANUAL RELEASE

- 1 Make sure **ALL** power is **OFF** to operator.

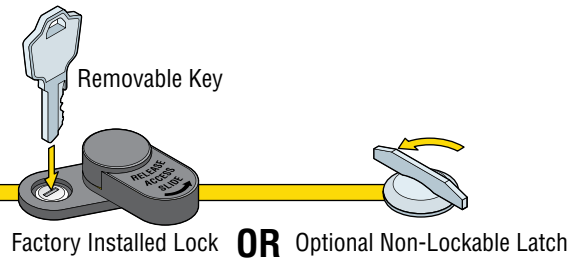


- 2 Unlock or unlatch hood and remove it.


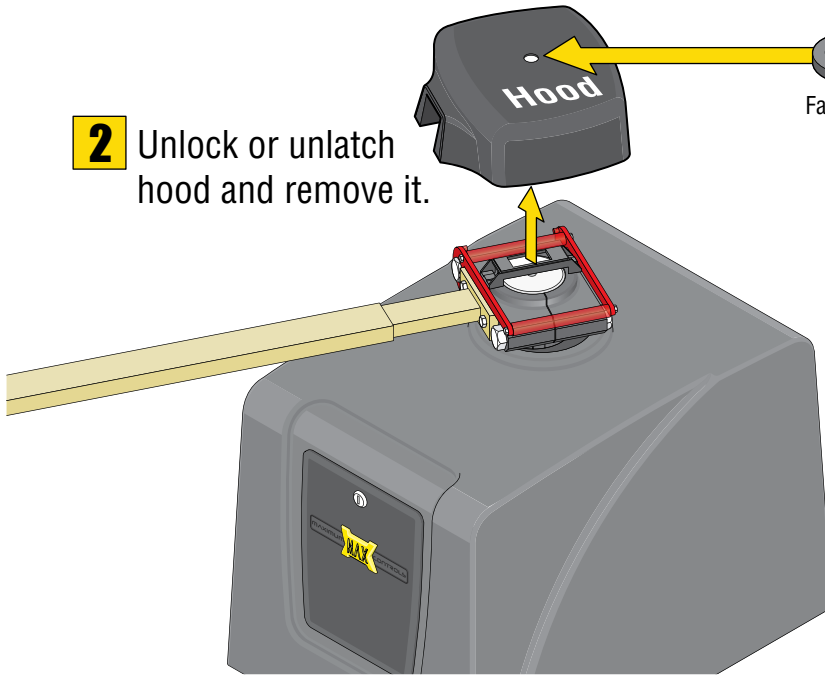


- 3 Pull red handle up and move gate.

**DO NOT** Lift Arm  
OFF of Operator

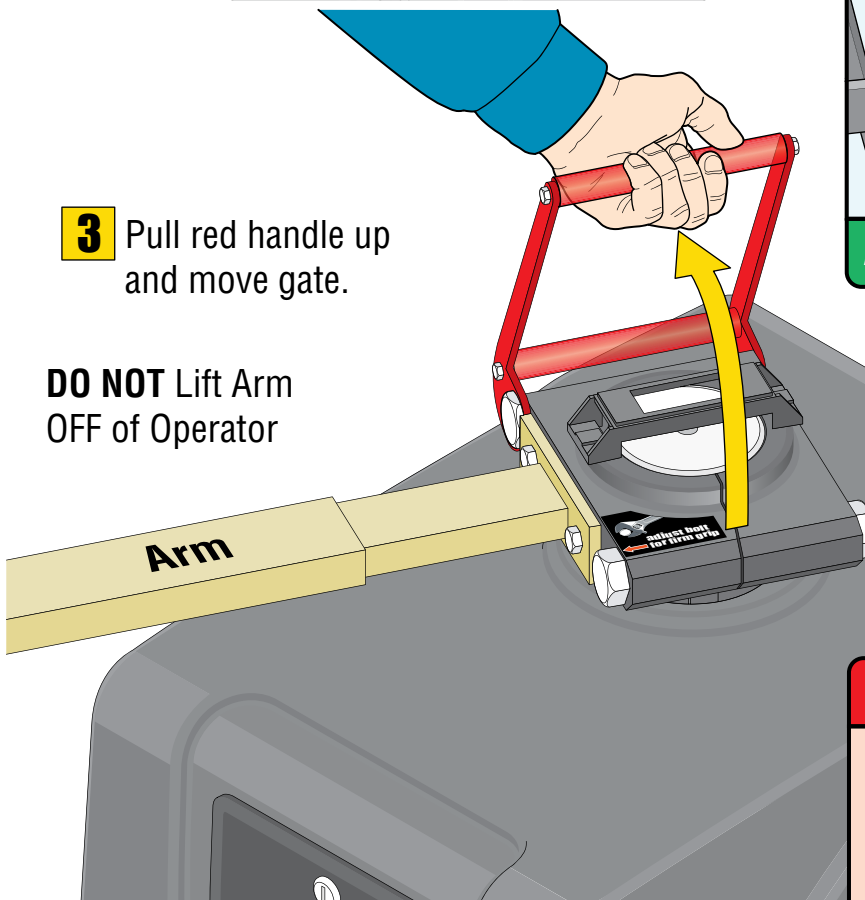


## WARNING

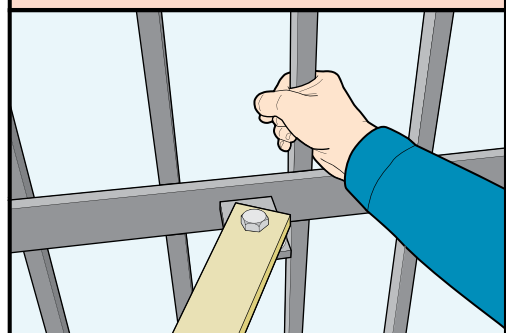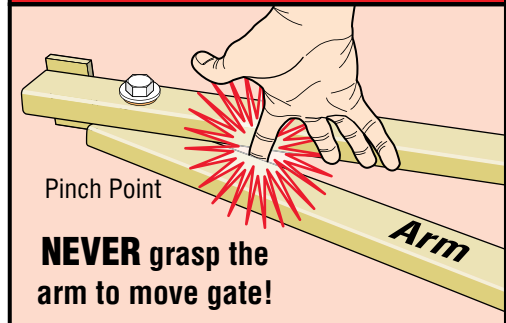

**ALWAYS** grasp gate to move it.

## If alarm is sounding:

Press  
**STOP** button  
on Matrix III

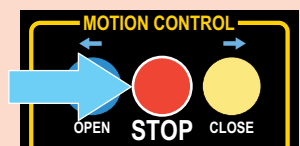



## ***NOTES***

## ***NOTES***

## ***NOTES***




**MATRIX III**

[www.max.us.com](http://www.max.us.com)

CONFORMS TO UL STD 325  
UL CLASS - I, II, III, IV

CERTIFIED TO CAN/CSA STD  
C22.2 NO. 247

**SAFETY SENSORS REQUIRED**

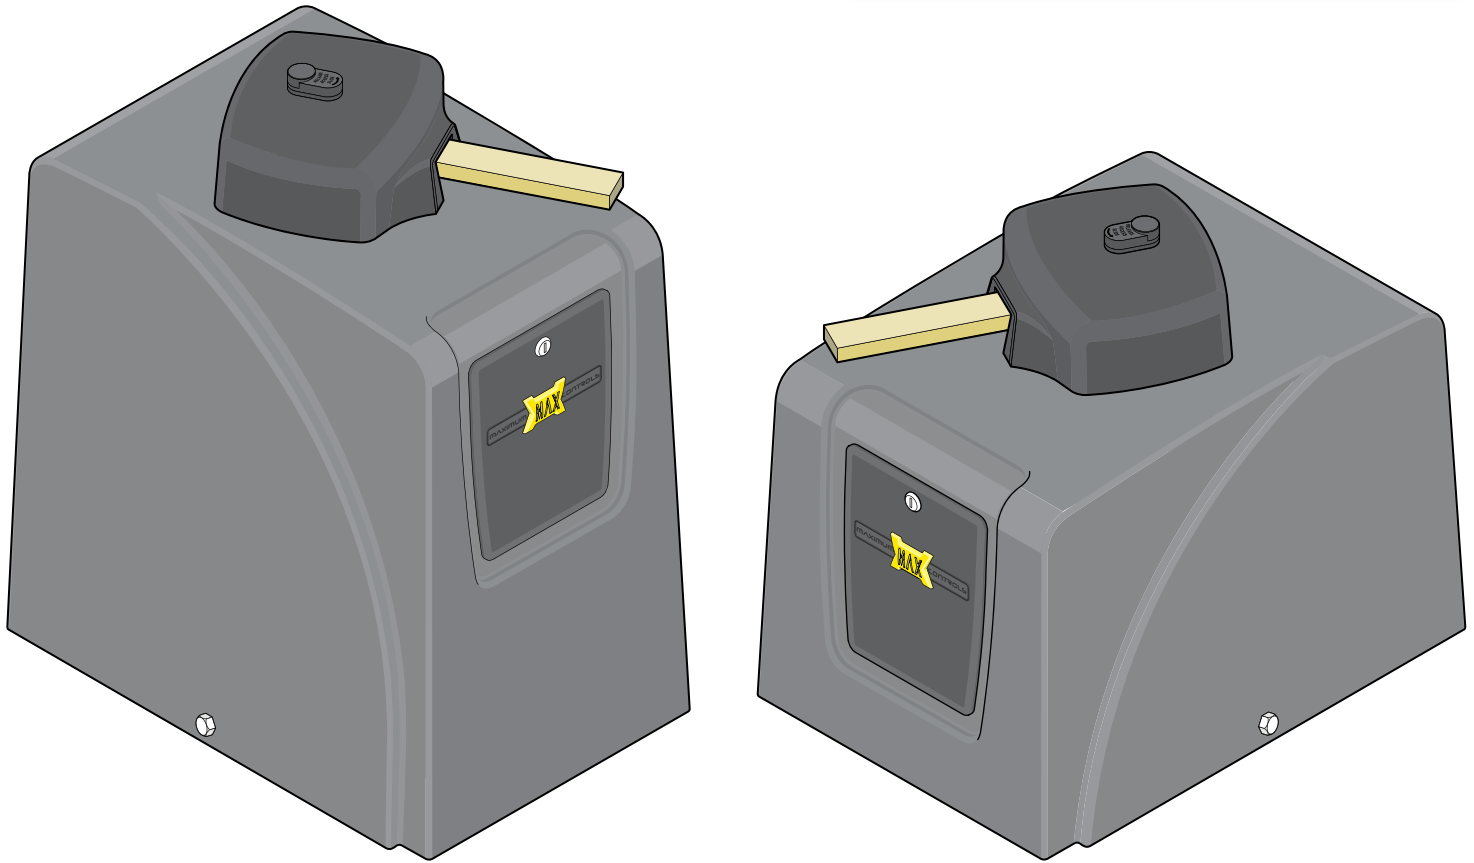

## **Residential / Commercial Brushless DC Swing Gate Operators**

**Made in USA**



**Intertek**  
4009963

Maximum Controls LLC.  
10530 Lawson River Ave  
Fountain Valley, Ca 92708  
Tel: (949) 699-0220